



ILLUMINATION


FROM POWER SOURCE SYSTEM (SEE PAGE 64)

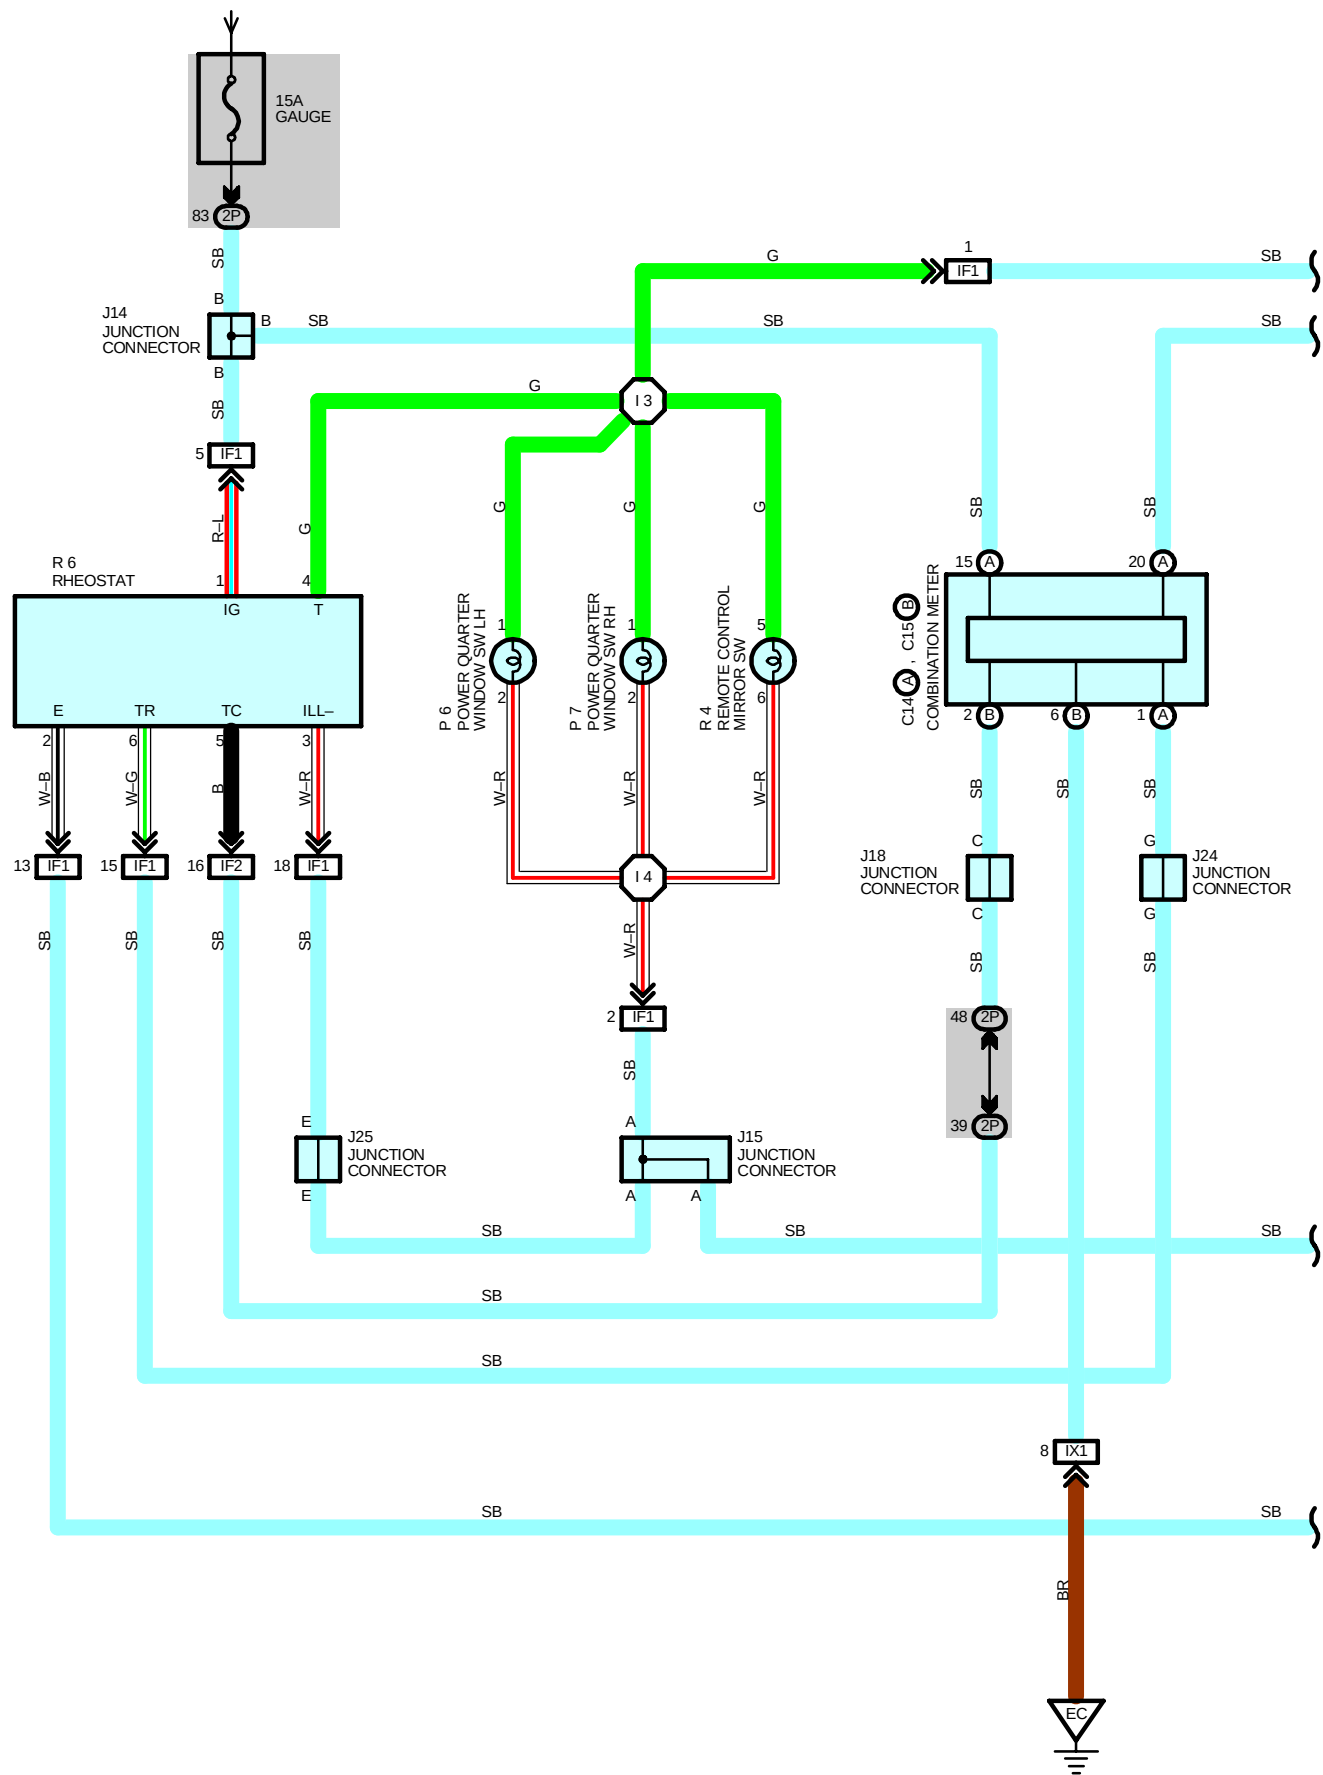

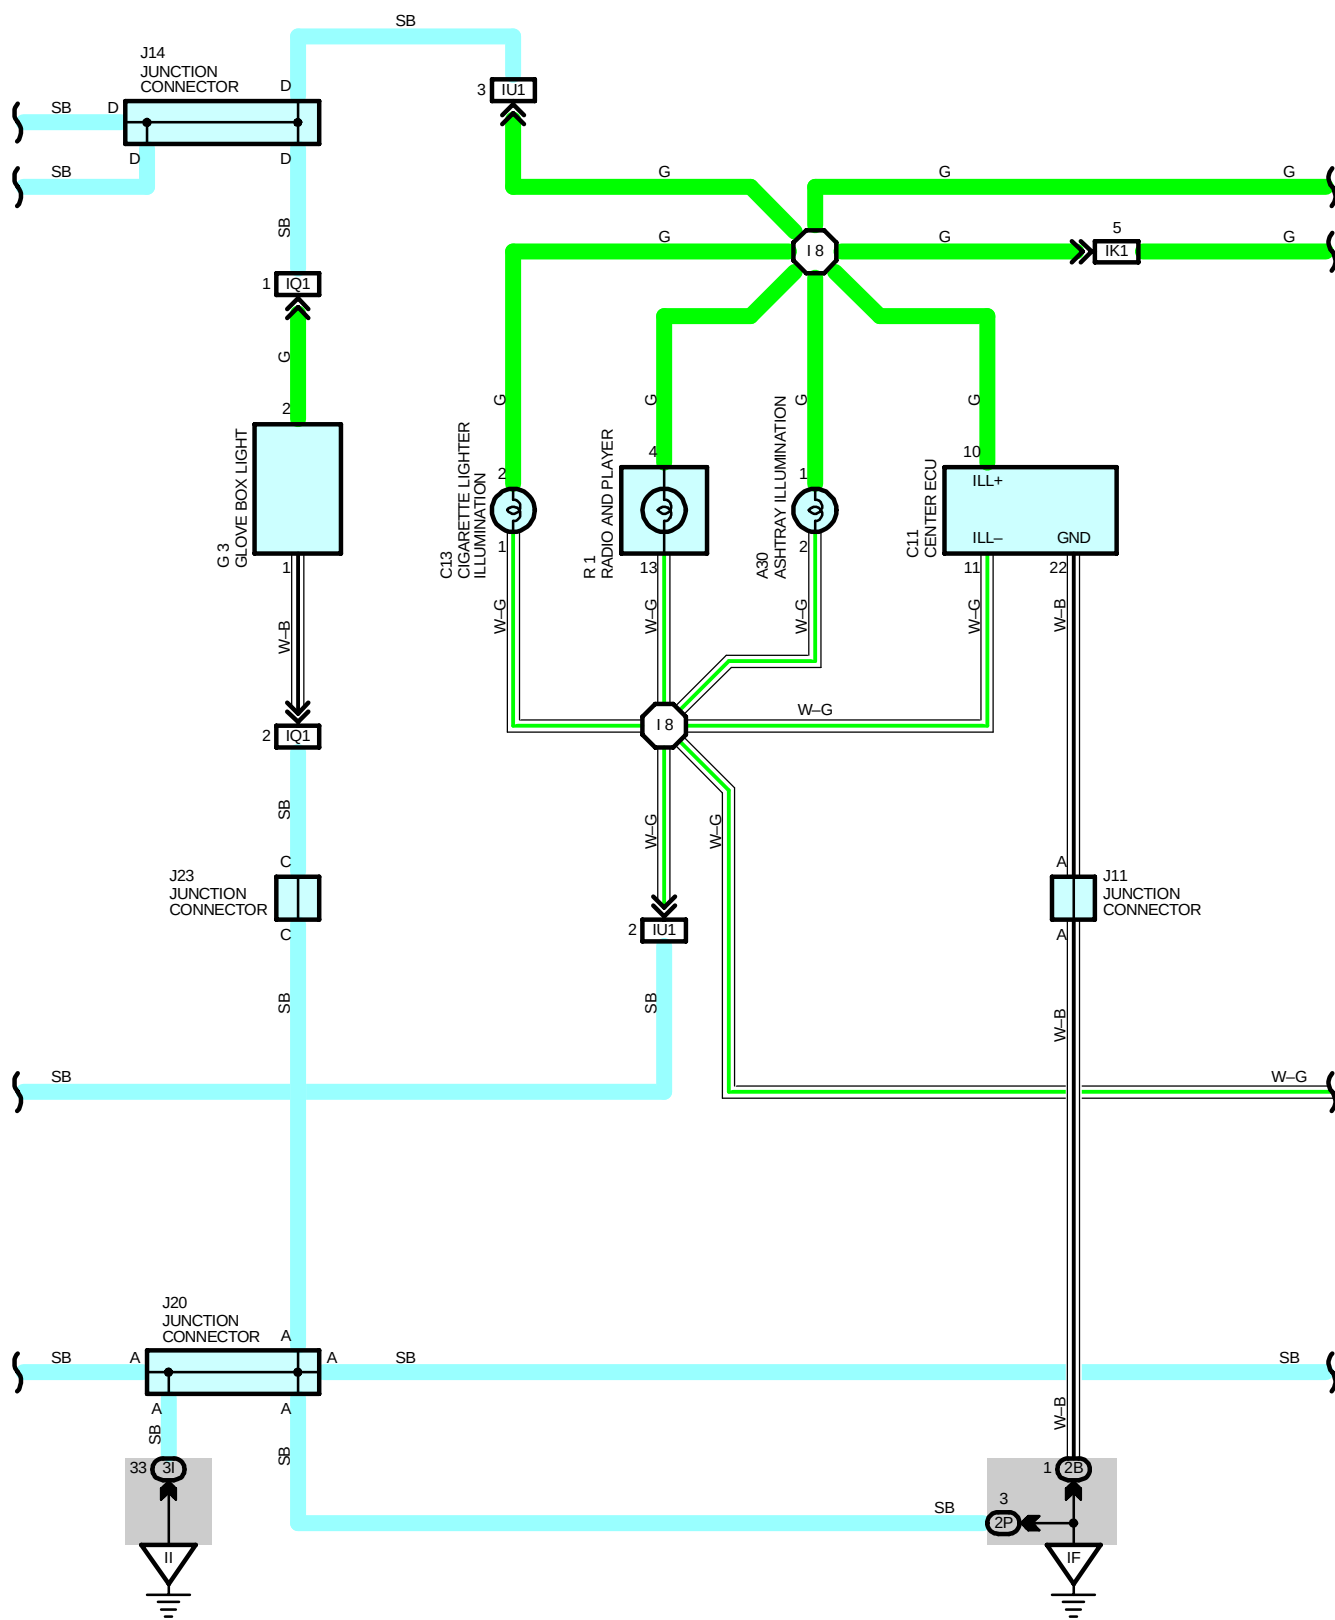

ILLUMINATION

FROM POWER SOURCE SYSTEM (SEE PAGE 64)

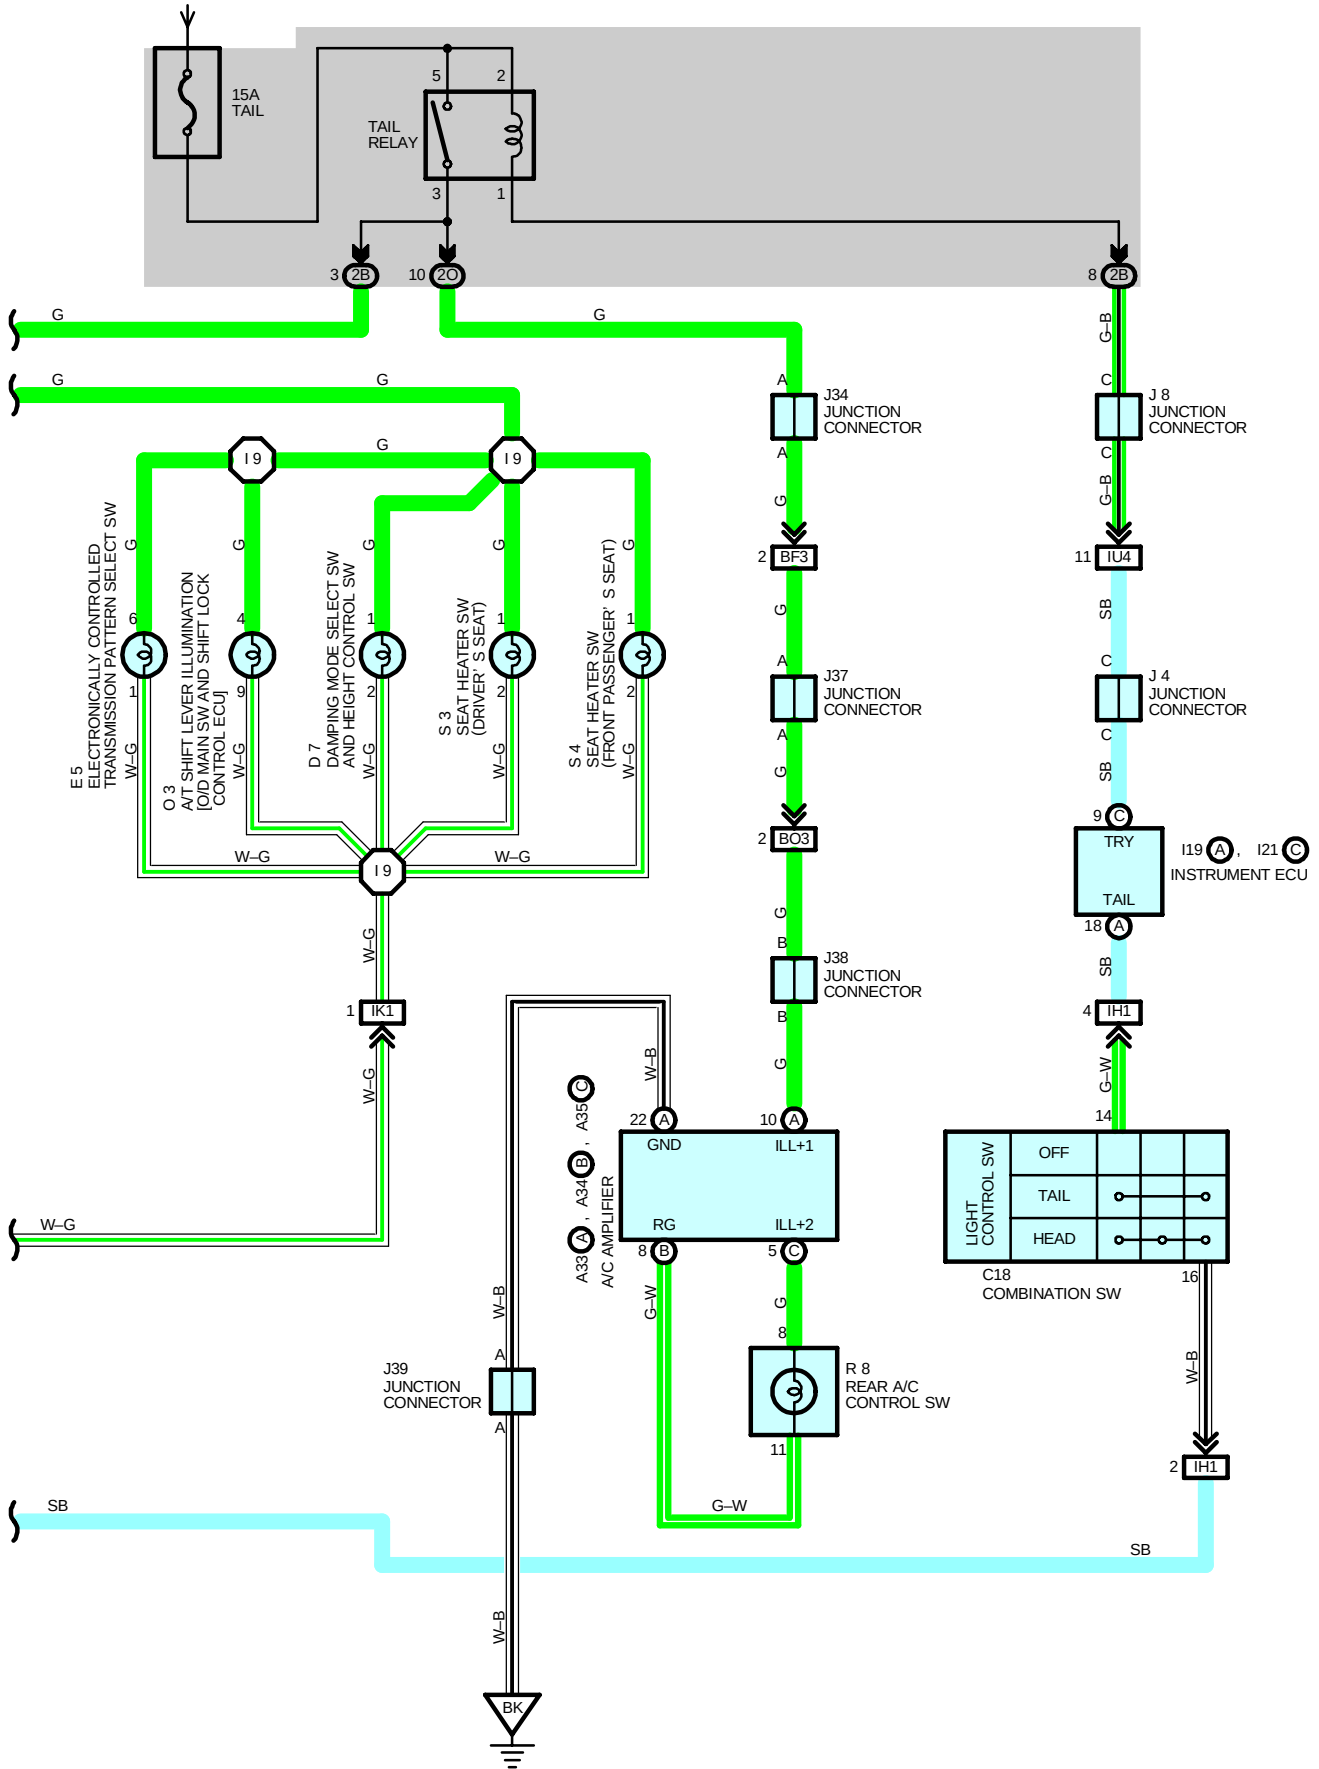

SERVICE HINTS

TAIL RELAY

5-3 : Closed with light control SW at **TAIL** or **HEAD** position

C18 COMBINATION SW

14-16 : Closed with light control SW at **TAIL** or **HEAD** position

: PARTS LOCATION

Code		See Page	Code		See Page	Code	See Page
A30		40	I21	C	40	J38	42
A33	A	42	J4		41	J39	42
A34	B	42	J8		41	O3	41
A35	C	42	J11		41	P6	41
C11		40	J14		41	P7	41
C13		40	J15		41	R1	41
C14	A	40	J18		41	R4	41
C15	B	40	J20		41	R6	41
C18		40	J23		41	R8	43
D7		40	J24		41	S3	41
E5		40	J25		41	S4	41
G3		40	J34		42		
I19	A	40	J37		42		

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
2B	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2O	26	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3I	32	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	48	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IF2		
IH1	50	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
IK1	50	Console Box Wire and Dash Wire (Left Side of Front Console)
IQ1	52	Instrument Panel Integration Wire and Lamp Wire (Behind the Glove Box)
IU1	52	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU4		
IX1	54	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
BF3	56	Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel)

**: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BO3	58	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)

**: GROUND POINTS**

Code	See Page	Ground Points Location
EC	46	Rear Bank of Right Cylinder Head
IF	48	Set Bolt of Cowl Side J/B LH
II	48	Set Bolt of Cowl Side J/B RH
BK	56	Front Side Under the Front Passenger's Seat

**: SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I3	50	Instrument Panel Wire	I8	50	Dash Wire
I4			I9	50	Console Box Wire