


BACK-UP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 64)

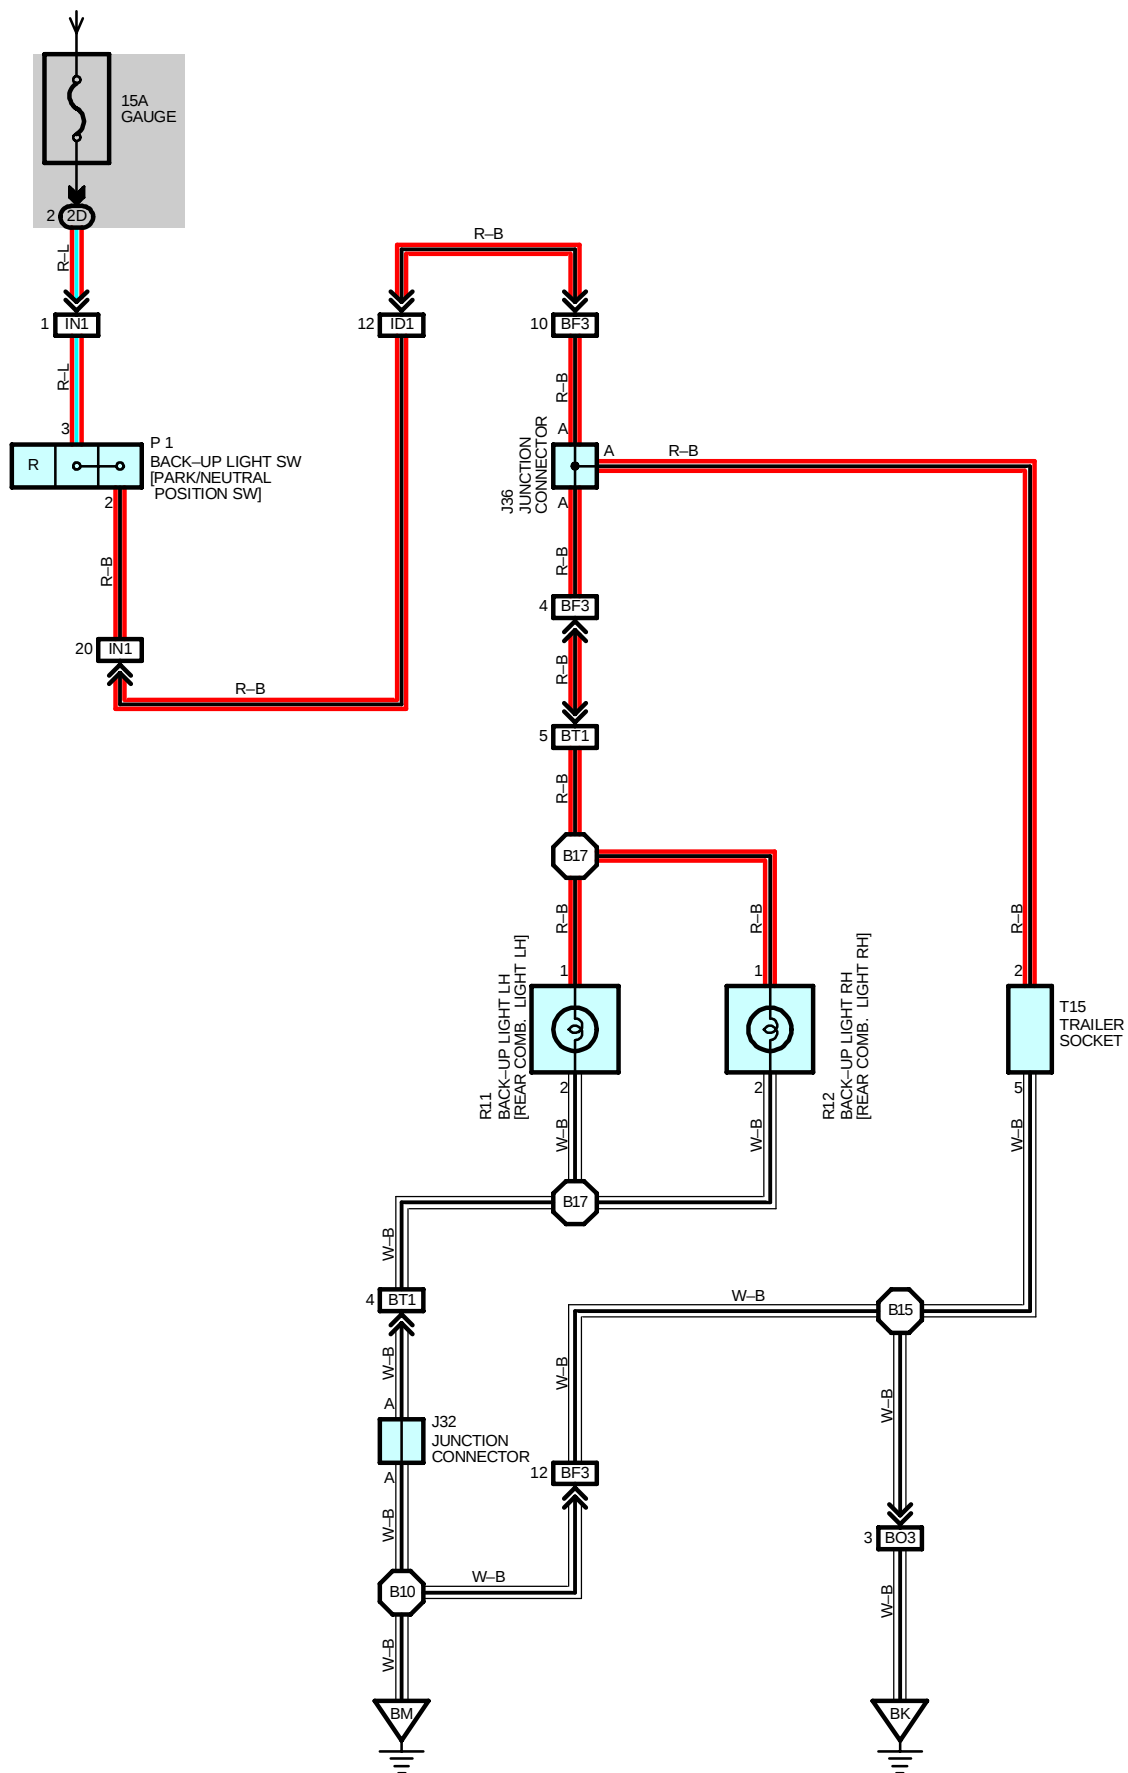

SERVICE HINTS

P1 BACK-UP LIGHT SW [PARK/NEUTRAL POSITION SW]

4-8 : Closed with shift lever at **R** position

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J32	42	P1	39	R12	43
J36	42	R11	43	T15	43

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
2D	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	48	Dash Wire and Floor Wire (Left Kick Panel)
IN1	52	Engine Wire and Dash Wire (Behind the Glove Box)
BF3	56	Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BO3	58	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BT1	58	Luggage Room Wire and Floor Wire (Left Rear Side Quarter Panel)

: GROUND POINTS

Code	See Page	Ground Points Location
BK	56	Front Side Under the Front Passenger's Seat
BM	56	Left Rear Side Quarter Panel

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B10	58	Floor Wire	B17	58	Back Door Lower Wire
B15	58	Floor No.3 Wire			