


HEADLIGHT CLEANER

FROM POWER SOURCE SYSTEM (SEE PAGE 64)

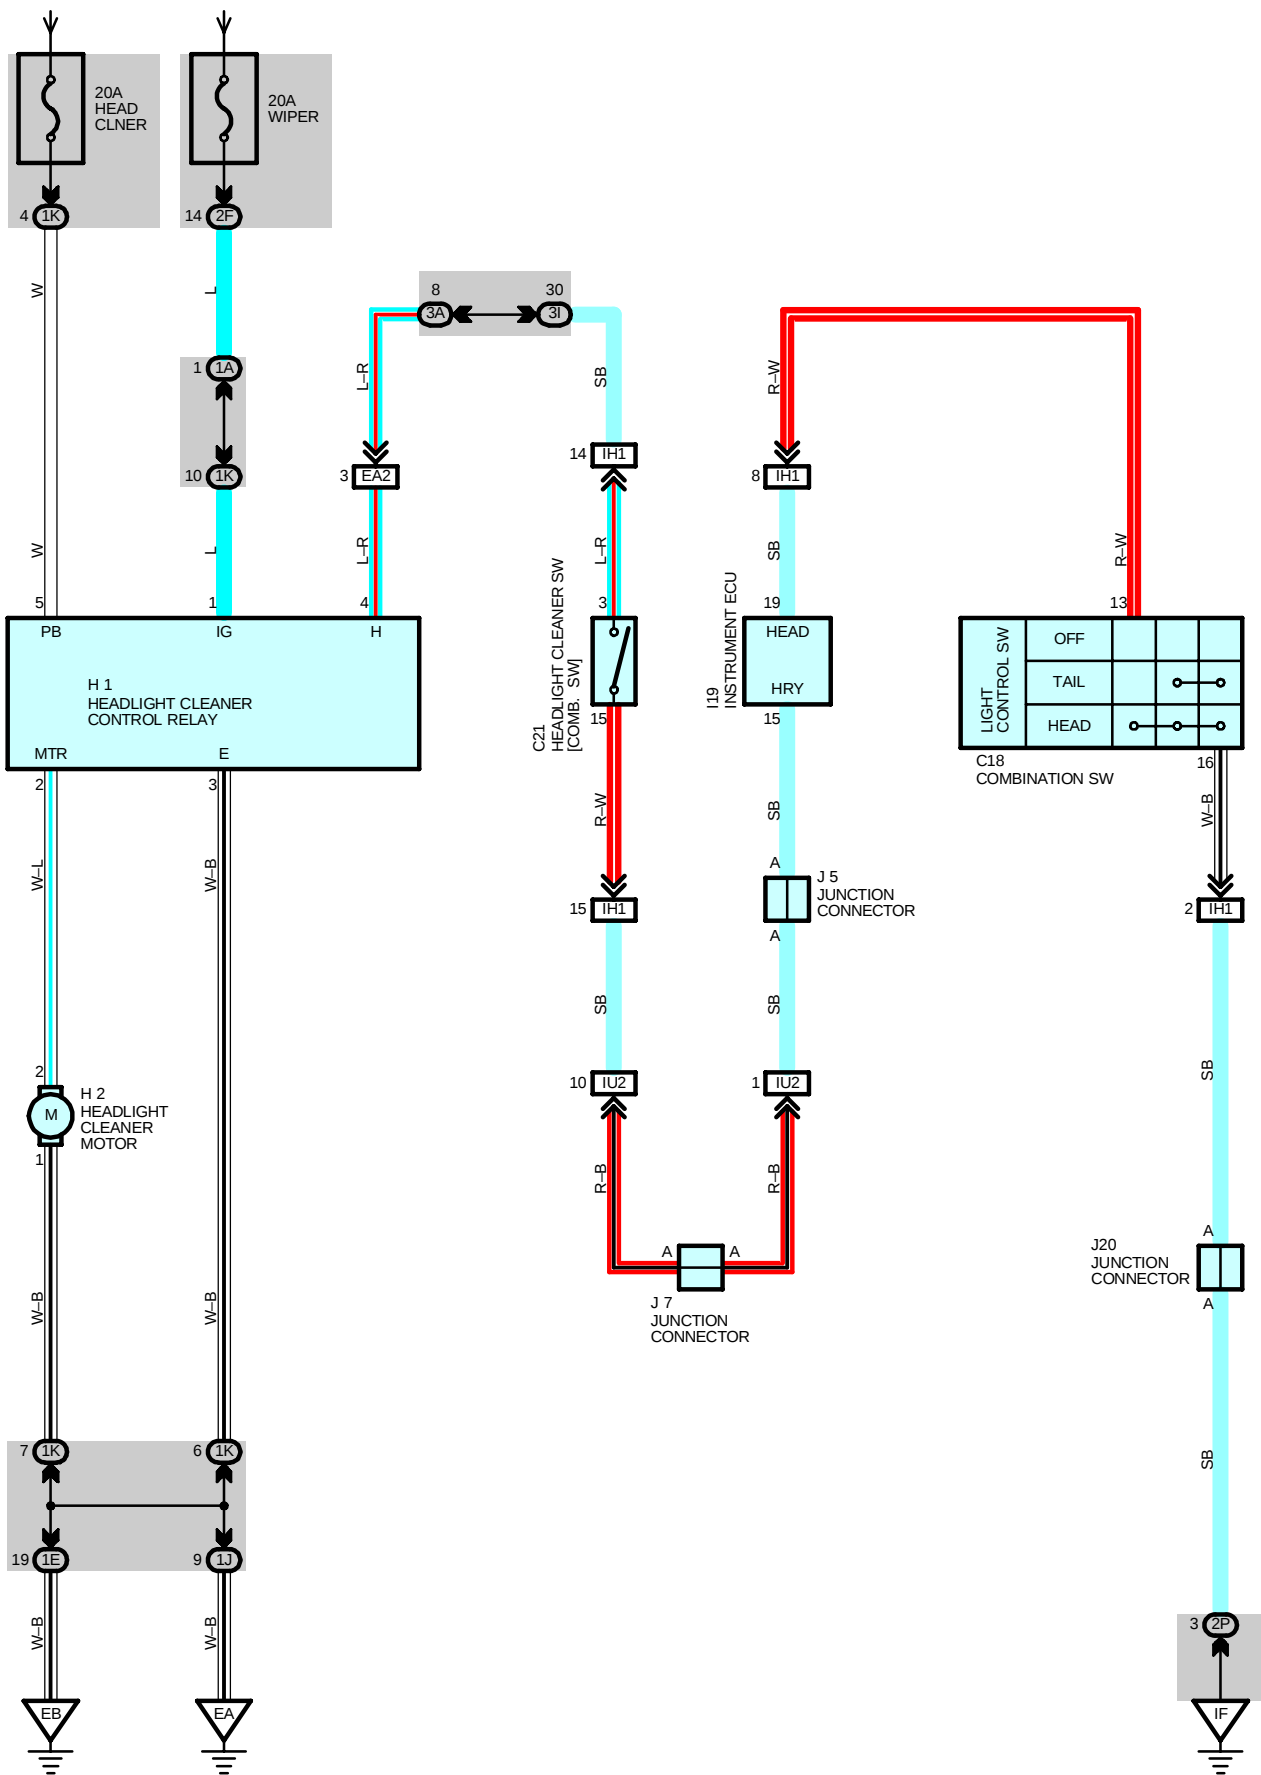

SERVICE HINTS

H1 HEADLIGHT CLEANER CONTROL RELAY

5-2 : Closed with ignition SW at **ON** or **ST** position, light control SW at **HEAD** position and headlight cleaner SW on

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C18	40	H2	39	J7	41
C21	40	I19	40	J20	41
H1	39	J5	41		

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1E		
1J	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1K		
2F	26	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3A	32	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3I	32	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA2	46	Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right)
IH1	50	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
IU2	52	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)

: GROUND POINTS

Code	See Page	Ground Points Location
EA	46	Front Right Side of Fender Apron
EB		
IF	48	Set Bolt of Cowl Side J/B LH