


HORN

FROM POWER SOURCE SYSTEM (SEE PAGE 64)

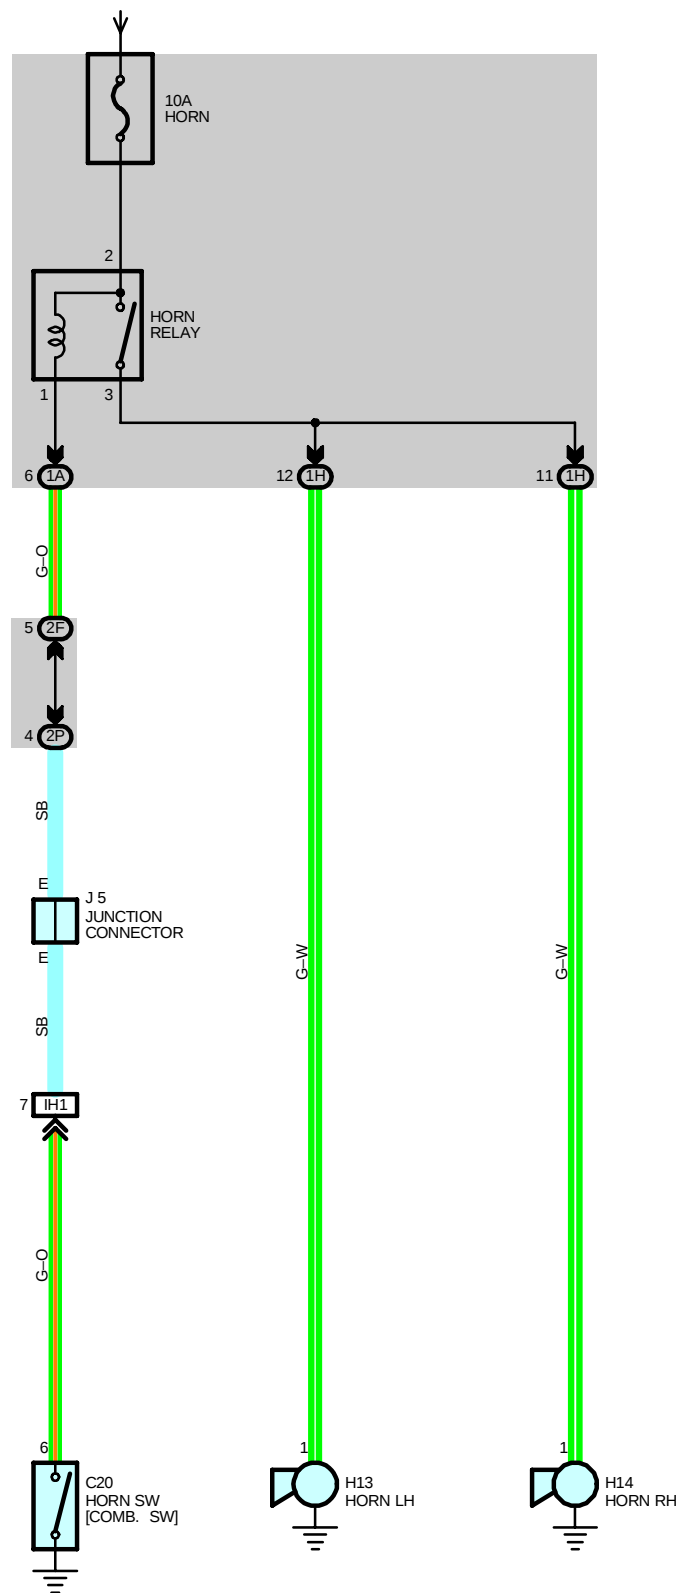

SERVICE HINTS**HORN RELAY**

2-3 : Closed horn SW on

 : **PARTS LOCATION**

Code	See Page	Code	See Page	Code	See Page
C20	40	H14	39		
H13	39	J5	41		

 : **JUNCTION BLOCK AND WIRE HARNESS CONNECTOR**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1H	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2F	26	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)

 : **CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH1	50	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)