




REMOTE CONTROL MIRROR

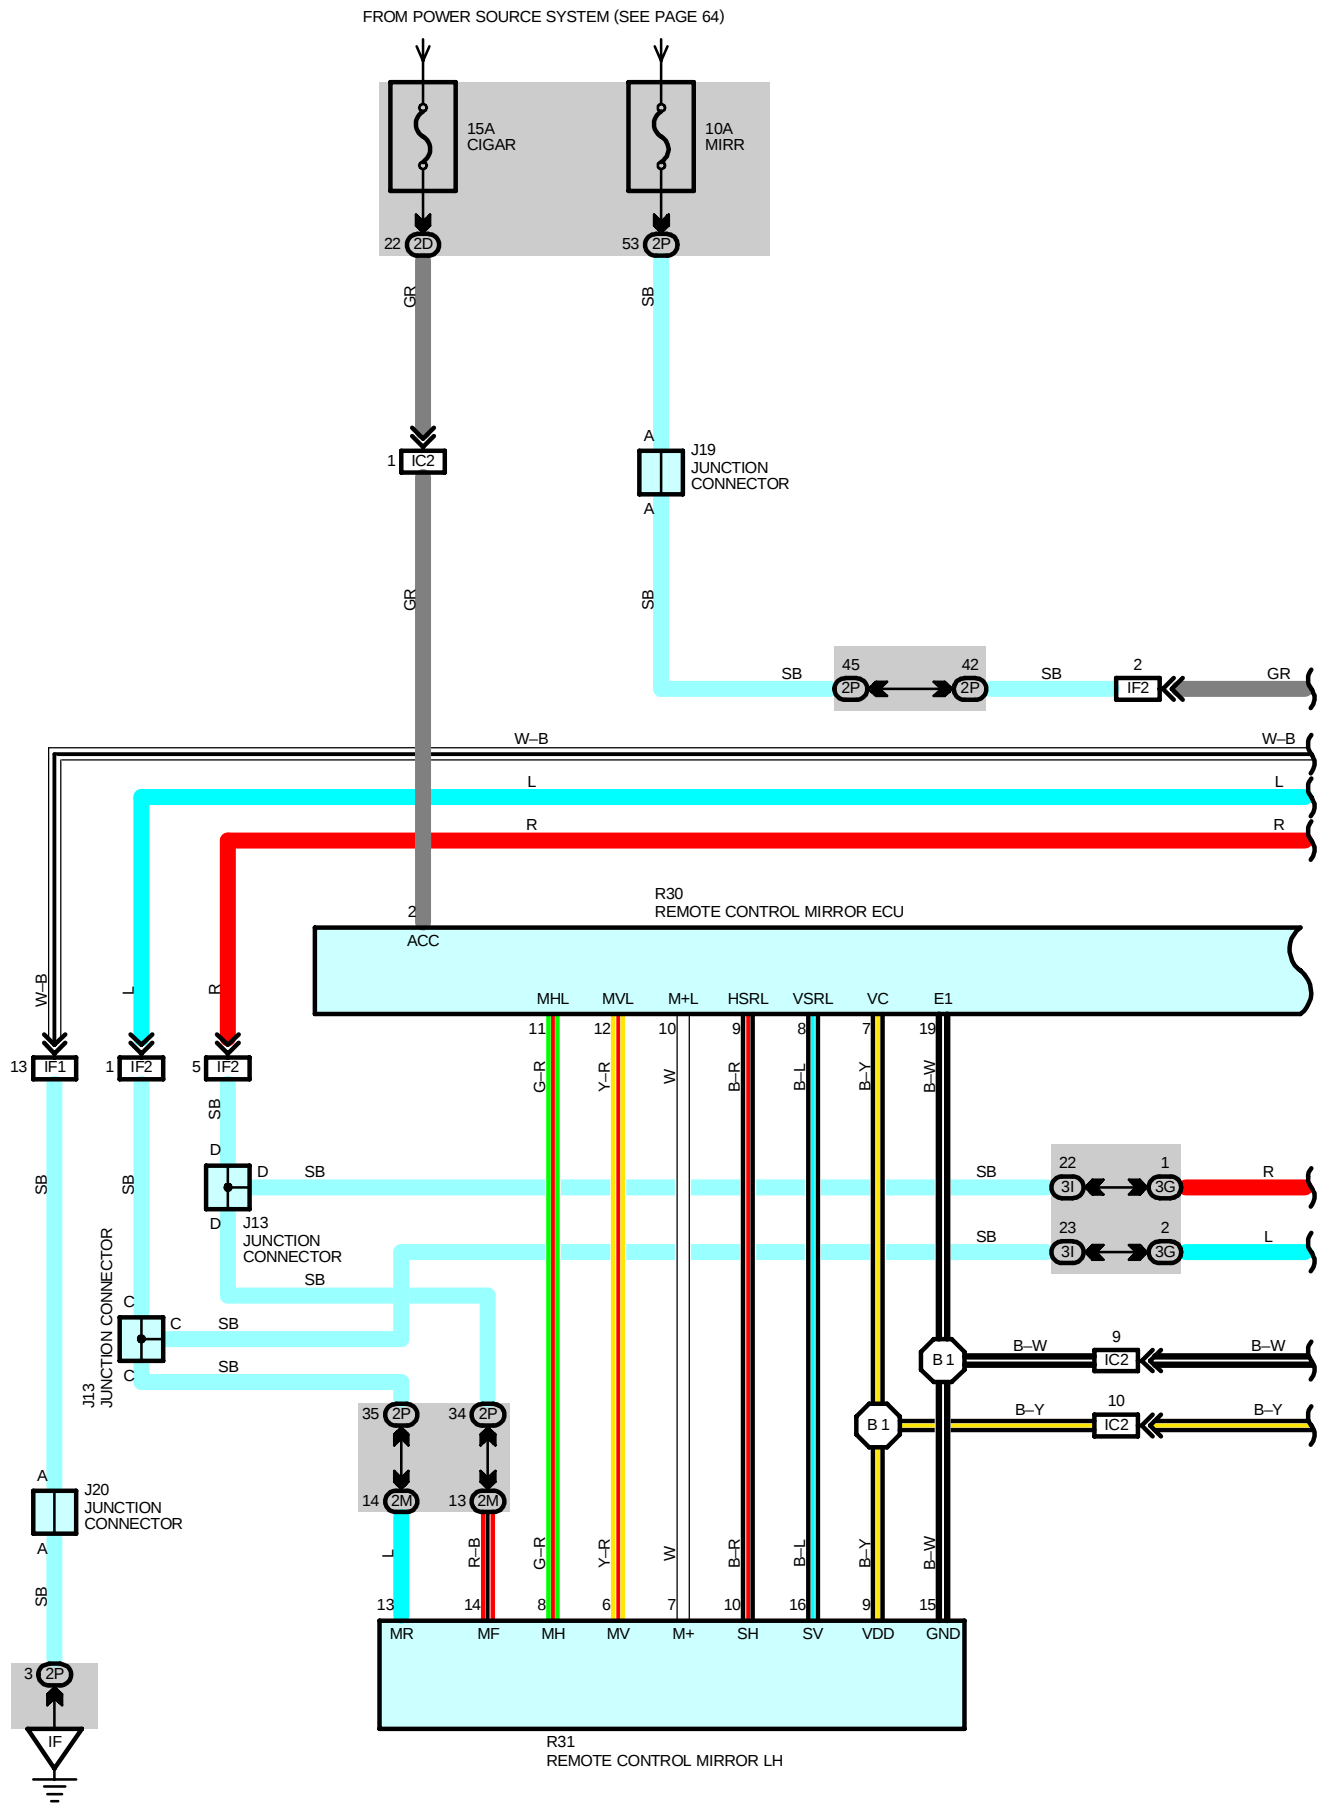

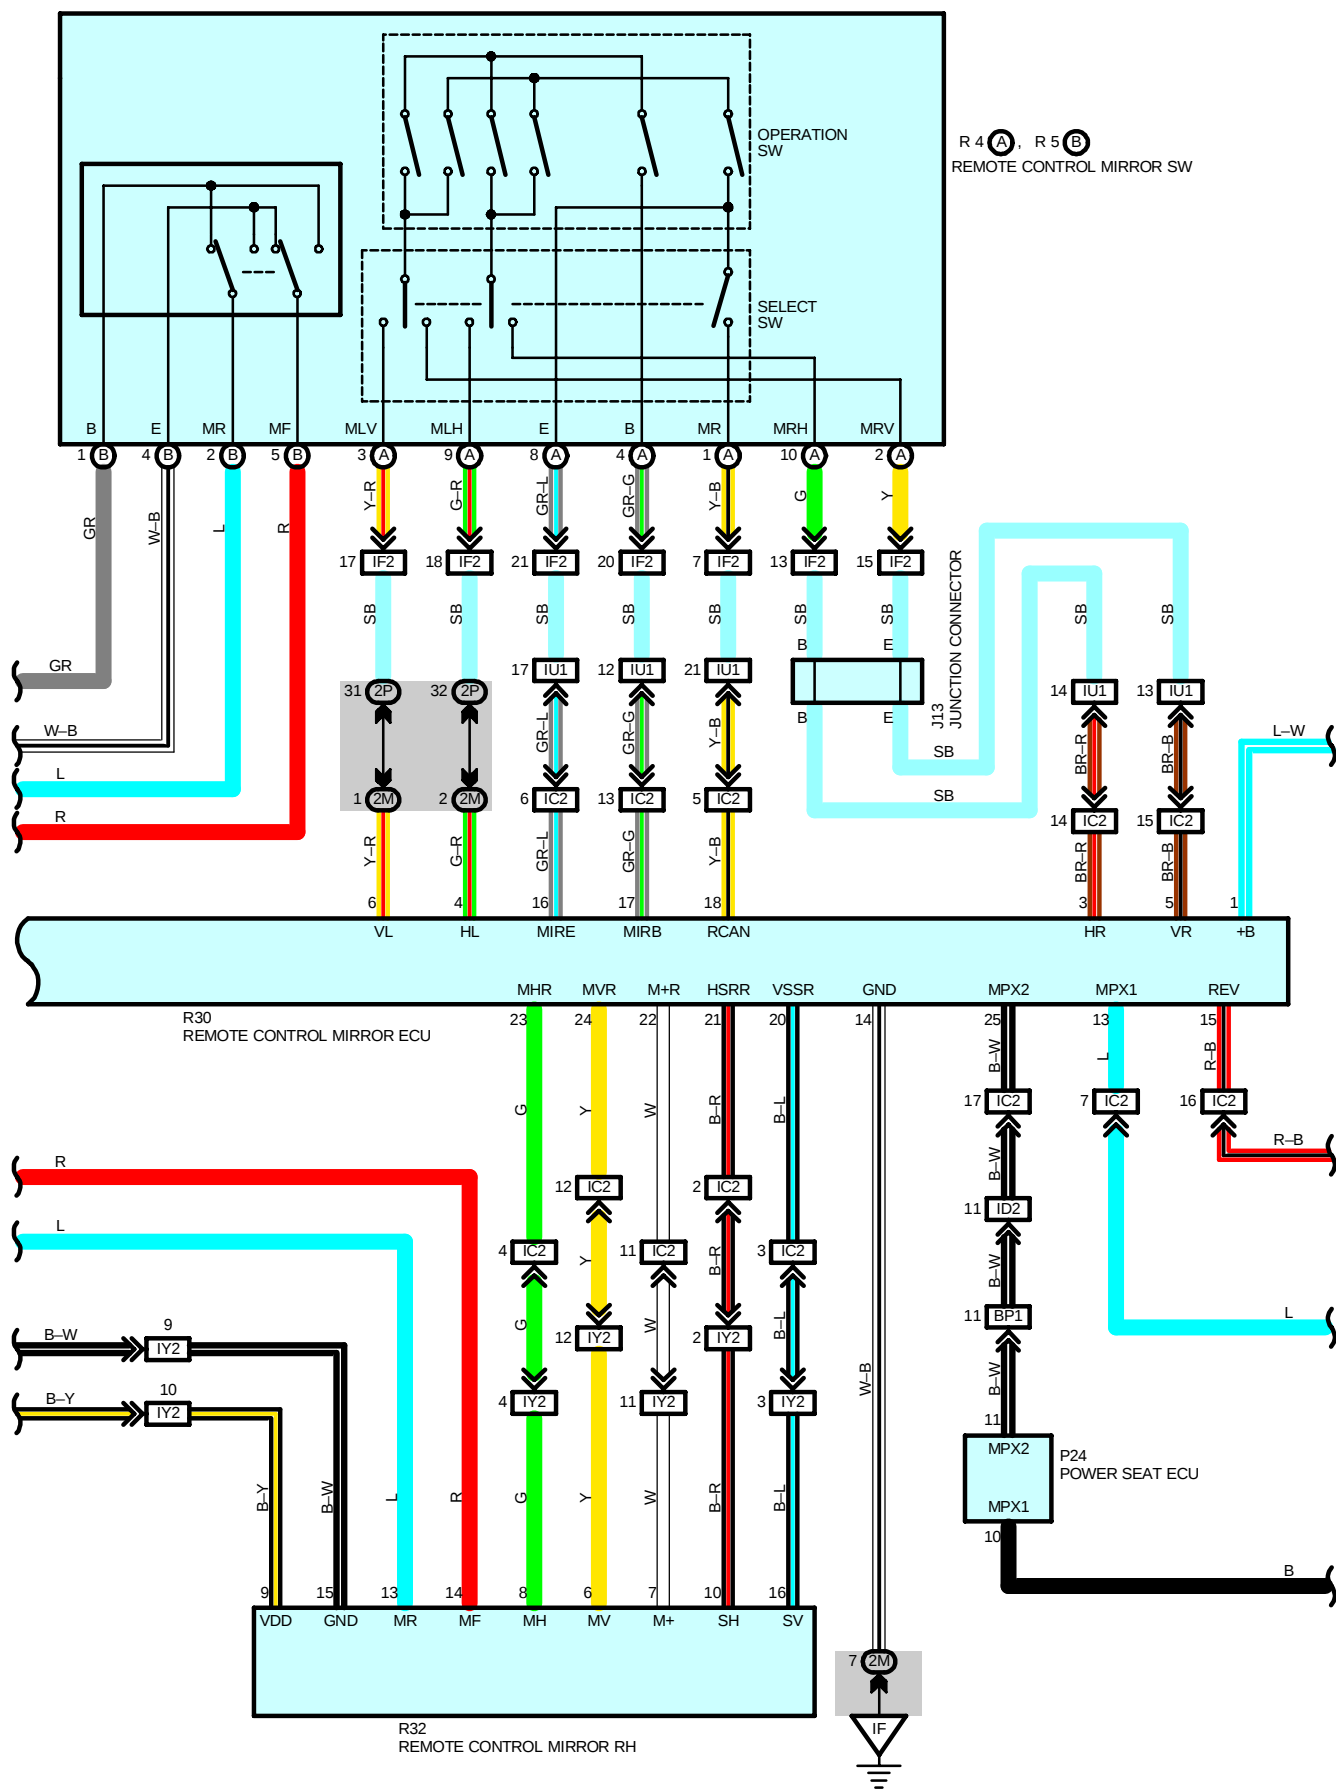

REMOTE CONTROL MIRROR

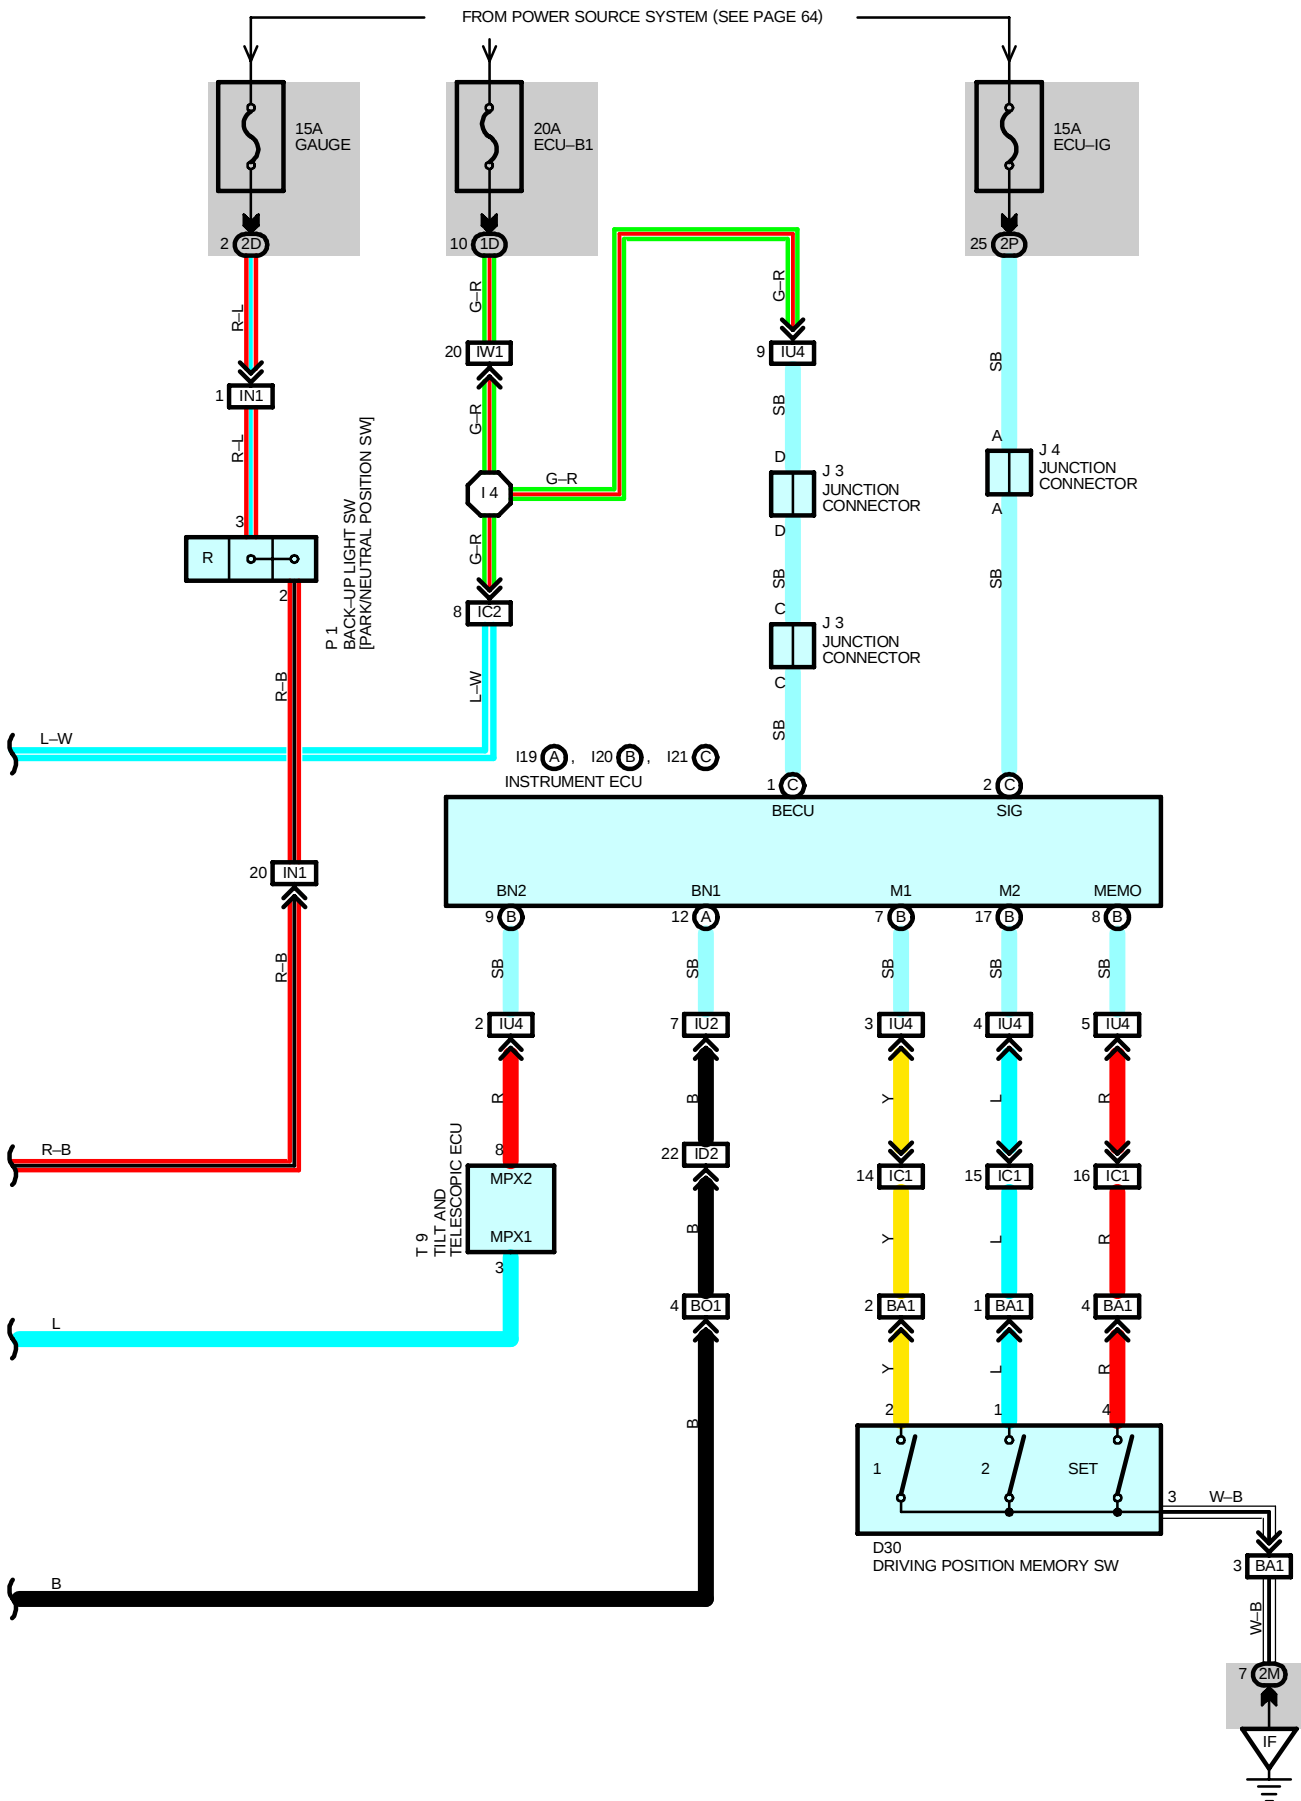

SYSTEM OUTLINE

When the ignition SW is turned on, the outer mirrors can be operated. When the remote control mirror SW is operated, a signal is input to the remote control mirror ECU, and the outer mirror can be adjusted to the desired position.

In this system, the position sensor detects the number of rotations of each motor (Movement amount of each mirror) and inputs it to the remote control mirror ECU. This makes it possible to store and recall the outer mirror position using the driving position memory SW. The outer mirror position is stored and recalled through communication control of the instrument ECU.

When the remote control mirror SW (Select SW) is moved to the left side from neutral position, while the ignition SW is on and the shift lever is in R position, the outer mirror LH, RH moves downward a little bit. In this case, it is not necessary to operate the remote control mirror SW for approx. 120 seconds.

SERVICE HINTS

R5 REMOTE CONTROL MIRROR SW

1-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position

4-GROUND : Always continuity

R30 REMOTE CONTROL MIRROR ECU

2-GROUND : Approx. **12** Volts with ignition SW at **ON** or **ST** position

14-GROUND : Always continuity

: PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
D30		42	J13		41	R5	B	41
I19	A	40	J19		41	R30		43
I20	B	40	J20		41	R31		43
I21	C	40	P1		39	R32		43
J3		41	P24		44	T9		41
J4		41	R4	A	41			

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2D	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2M	26	Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3G	32	Front Door RH Wire and Cowl Side J/B RH (Right Kick Panel)
3I	32	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	48	Front Door LH Wire and Dash Wire (Left Kick Panel)
IC2		
ID2	48	Dash Wire and Floor Wire (Left Kick Panel)
IF1	48	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IF2		
IN1	52	Engine Wire and Dash Wire (Behind the Glove Box)
IU1	52	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU2		

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IU4		
IW1	54	Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)
IY2	54	Front Door RH Wire and Dash Wire (Right Kick Panel)
BA1	56	Front Door LH Wire and Front Door LH Sub Wire (Front Door LH)
BO1	58	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BP1	60	Floor Wire and Front Seat LH Wire (Front Side Under the Driver's Seat)

REMOTE CONTROL MIRROR

 : GROUND POINTS

Code	See Page	Ground Points Location
IF	48	Set Bolt of Cowl Side J/B LH

 : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I4	50	Instrument Panel Wire	B1	58	Front Door LH Wire

