


# AUTOMATIC GLARE-RESISTANT EC MIRROR

FROM POWER SOURCE SYSTEM (SEE PAGE 64)

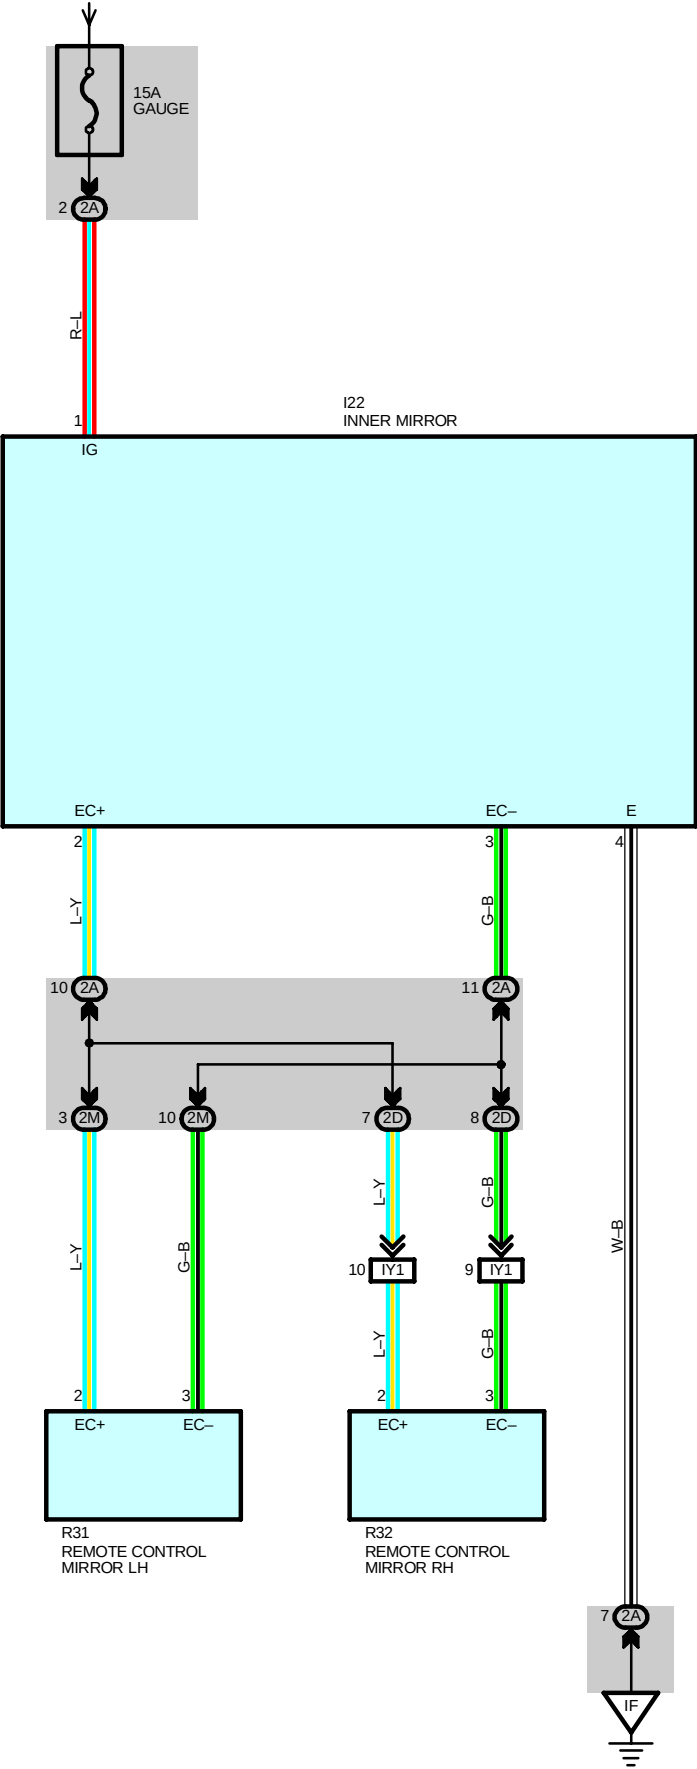

---

## SERVICE HINTS

### I22 INNER MIRROR

- 1-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position  
4-GROUND : Always continuity

### : PARTS LOCATION

| Code | See Page           | Code | See Page           | Code | See Page           |
|------|--------------------|------|--------------------|------|--------------------|
| I22  | <a href="#">42</a> | R31  | <a href="#">43</a> | R32  | <a href="#">43</a> |

### : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| Code | See Page           | Junction Block and Wire Harness (Connector Location)      |
|------|--------------------|-----------------------------------------------------------|
| 2A   | <a href="#">26</a> | Roof Wire and Cowl Side J/B LH (Left Kick Panel)          |
| 2D   | <a href="#">26</a> | Dash Wire and Cowl Side J/B LH (Left Kick Panel)          |
| 2M   | <a href="#">26</a> | Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel) |

### : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| Code | See Page           | Joining Wire Harness and Wire Harness (Connector Location) |
|------|--------------------|------------------------------------------------------------|
| IY1  | <a href="#">54</a> | Front Door RH Wire and Dash Wire (Right Kick Panel)        |

### : GROUND POINTS

| Code | See Page           | Ground Points Location       |
|------|--------------------|------------------------------|
| IF   | <a href="#">48</a> | Set Bolt of Cowl Side J/B LH |