


KEY REMINDER AND SEAT BELT WARNING

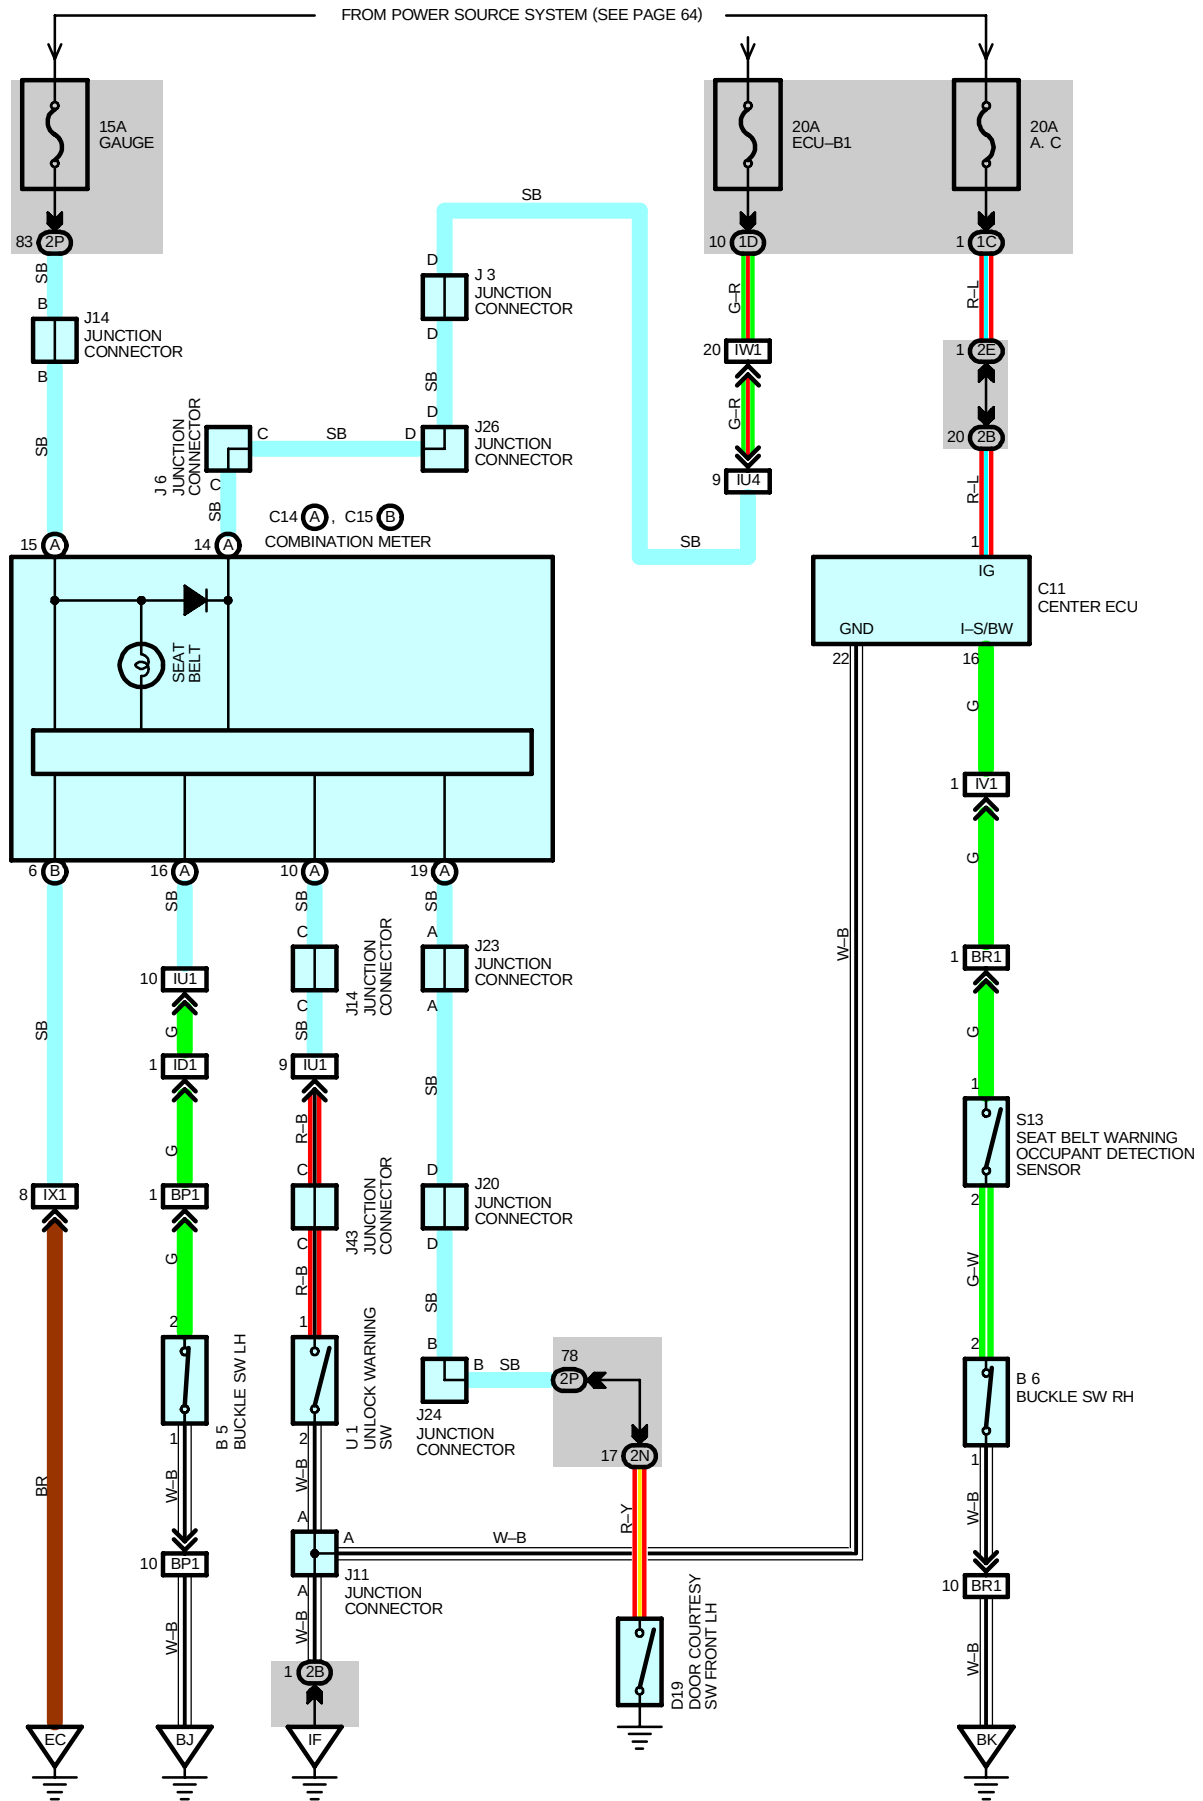

SYSTEM OUTLINE

1. SEAT BELT WARNING SYSTEM

When the ignition SW turned on, a signal is input to the combination meter and center ECU. To determine whether the driver has fastened the seat belt, a signal is input from the buckle SW LH to the combination meter TERMINAL (A) 16. When the seat belt is not fastened, the seat belt warning light in the combination meter blinks, and emits a warning sound.

In addition, the front passenger is recognized by a sensor (Seat belt warning occupant detection sensor) is installed in the front passenger seat, and determines whether the seat belt is fastened. When not fastened, the signals from the seat belt warning occupant detection sensor and buckle SW RH is input to center ECU TERMINAL 16, and the passenger seat belt warning light blinks to warn the passenger.

2. KEY REMINDER SYSTEM

When the driver door is opened with the ignition SW off and ignition key remaining in the key cylinder (Unlock warning SW on), a signal is input from the unlock warning SW to the combination meter TERMINAL (A) 10, and from the door courtesy SW front LH to combination meter TERMINAL (A) 19. As a result, the buzzer in the combination meter goes on and warns the driver that the key is remaining in the key cylinder.

SERVICE HINTS

S13 SEAT BELT WARNING OCCUPANT DETECTION SENSOR

1-2 : Closed with passenger sit on the front passenger seat

: PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
B5		44	J3		41	J24		41
B6		44	J6		41	J26		41
C11		40	J11		41	J43		41
C14	A	40	J14		41	S13		44
C15	B	40	J20		41	U1		41
D19		42	J23		41			

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1D		
2B	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2E	26	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2N	26	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	48	Dash Wire and Floor Wire (Left Kick Panel)
IU1	52	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU4		
IV1	54	Dash Wire and Floor No.2 Wire (Behind the Glove Box)
IW1	54	Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)
IX1	54	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
BP1	60	Floor Wire and Front Seat LH Wire (Front Side Under the Driver's Seat)

**: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BR1	60	Floor No.2 Wire and Front Seat RH Wire (Front Side Under the Front Passenger's Seat)

**: GROUND POINTS**

Code	See Page	Ground Points Location
EC	46	Rear Bank of Right Cylinder Head
IF	48	Set Bolt of Cowl Side J/B LH
BJ	56	Under the Driver's Seat
BK	56	Front Side Under the Front Passenger's Seat