



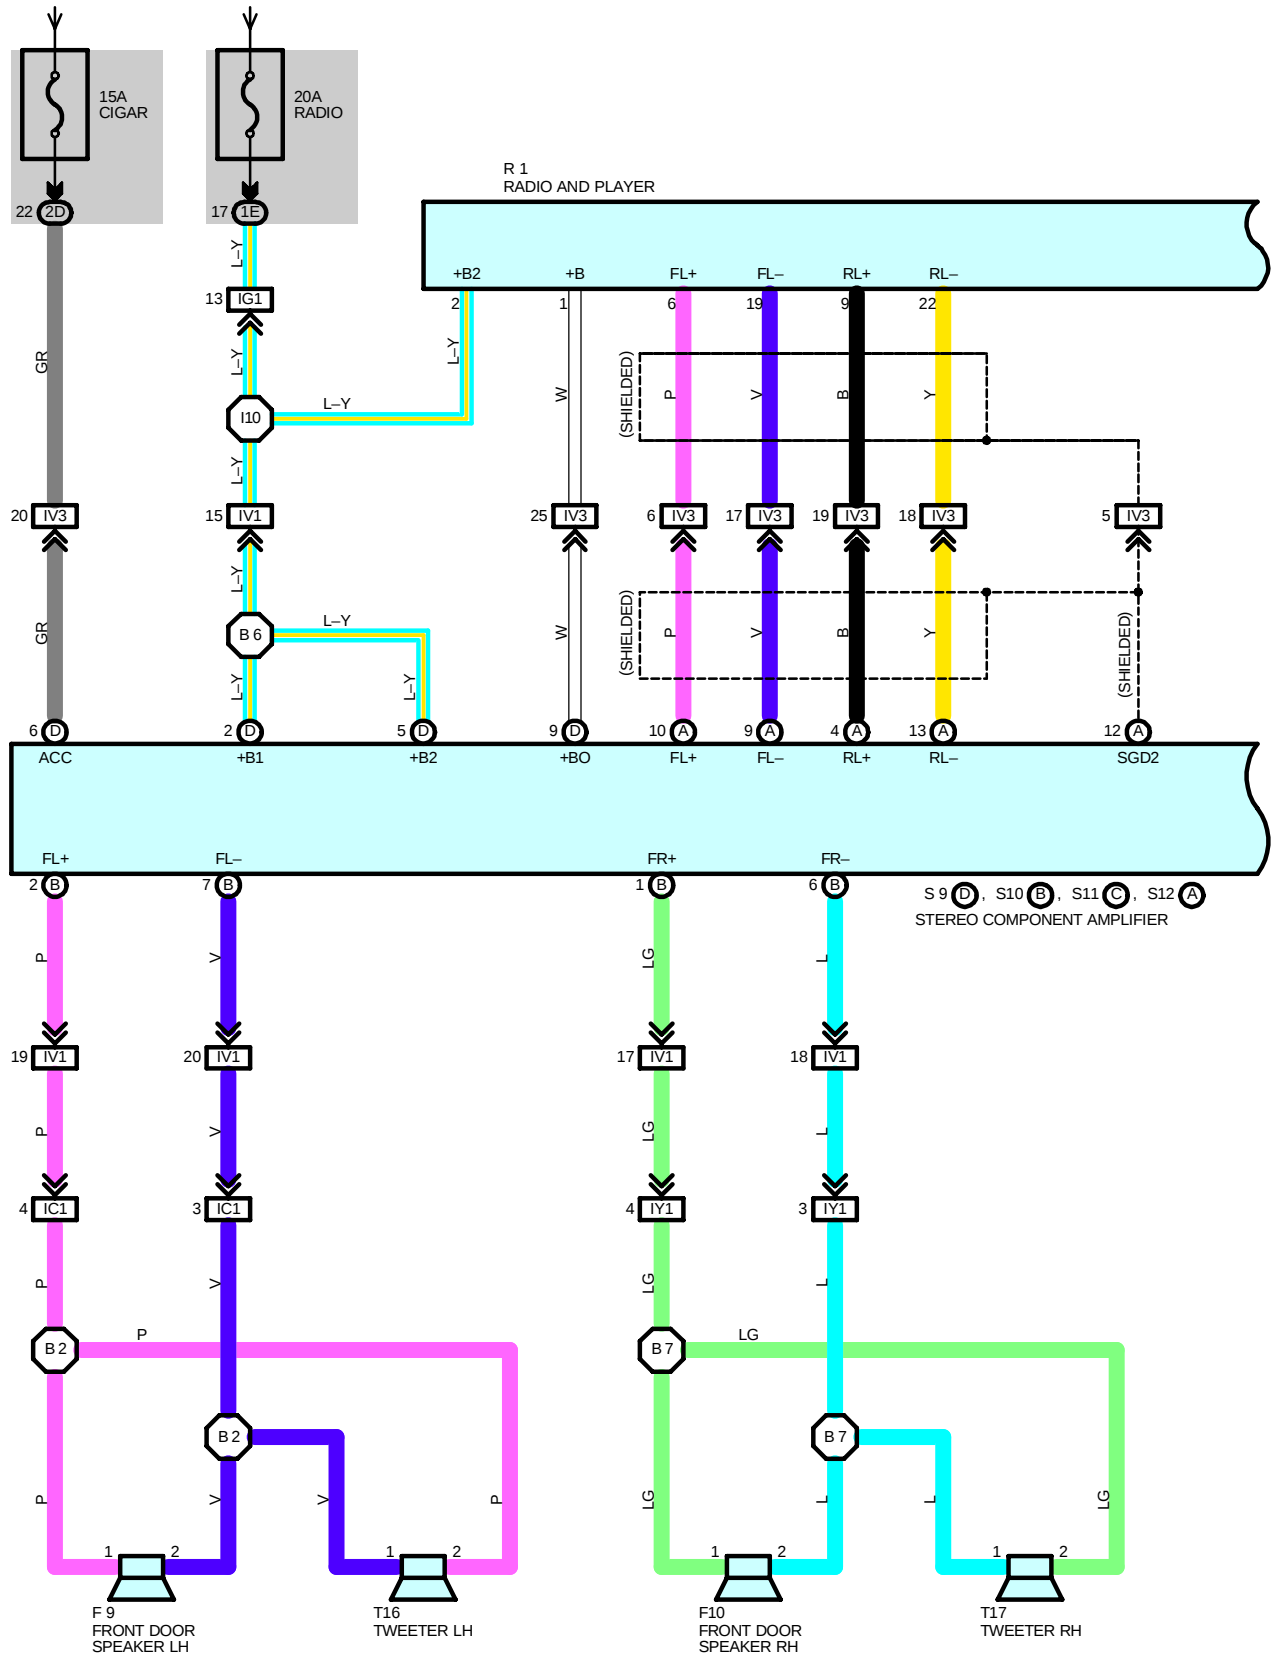

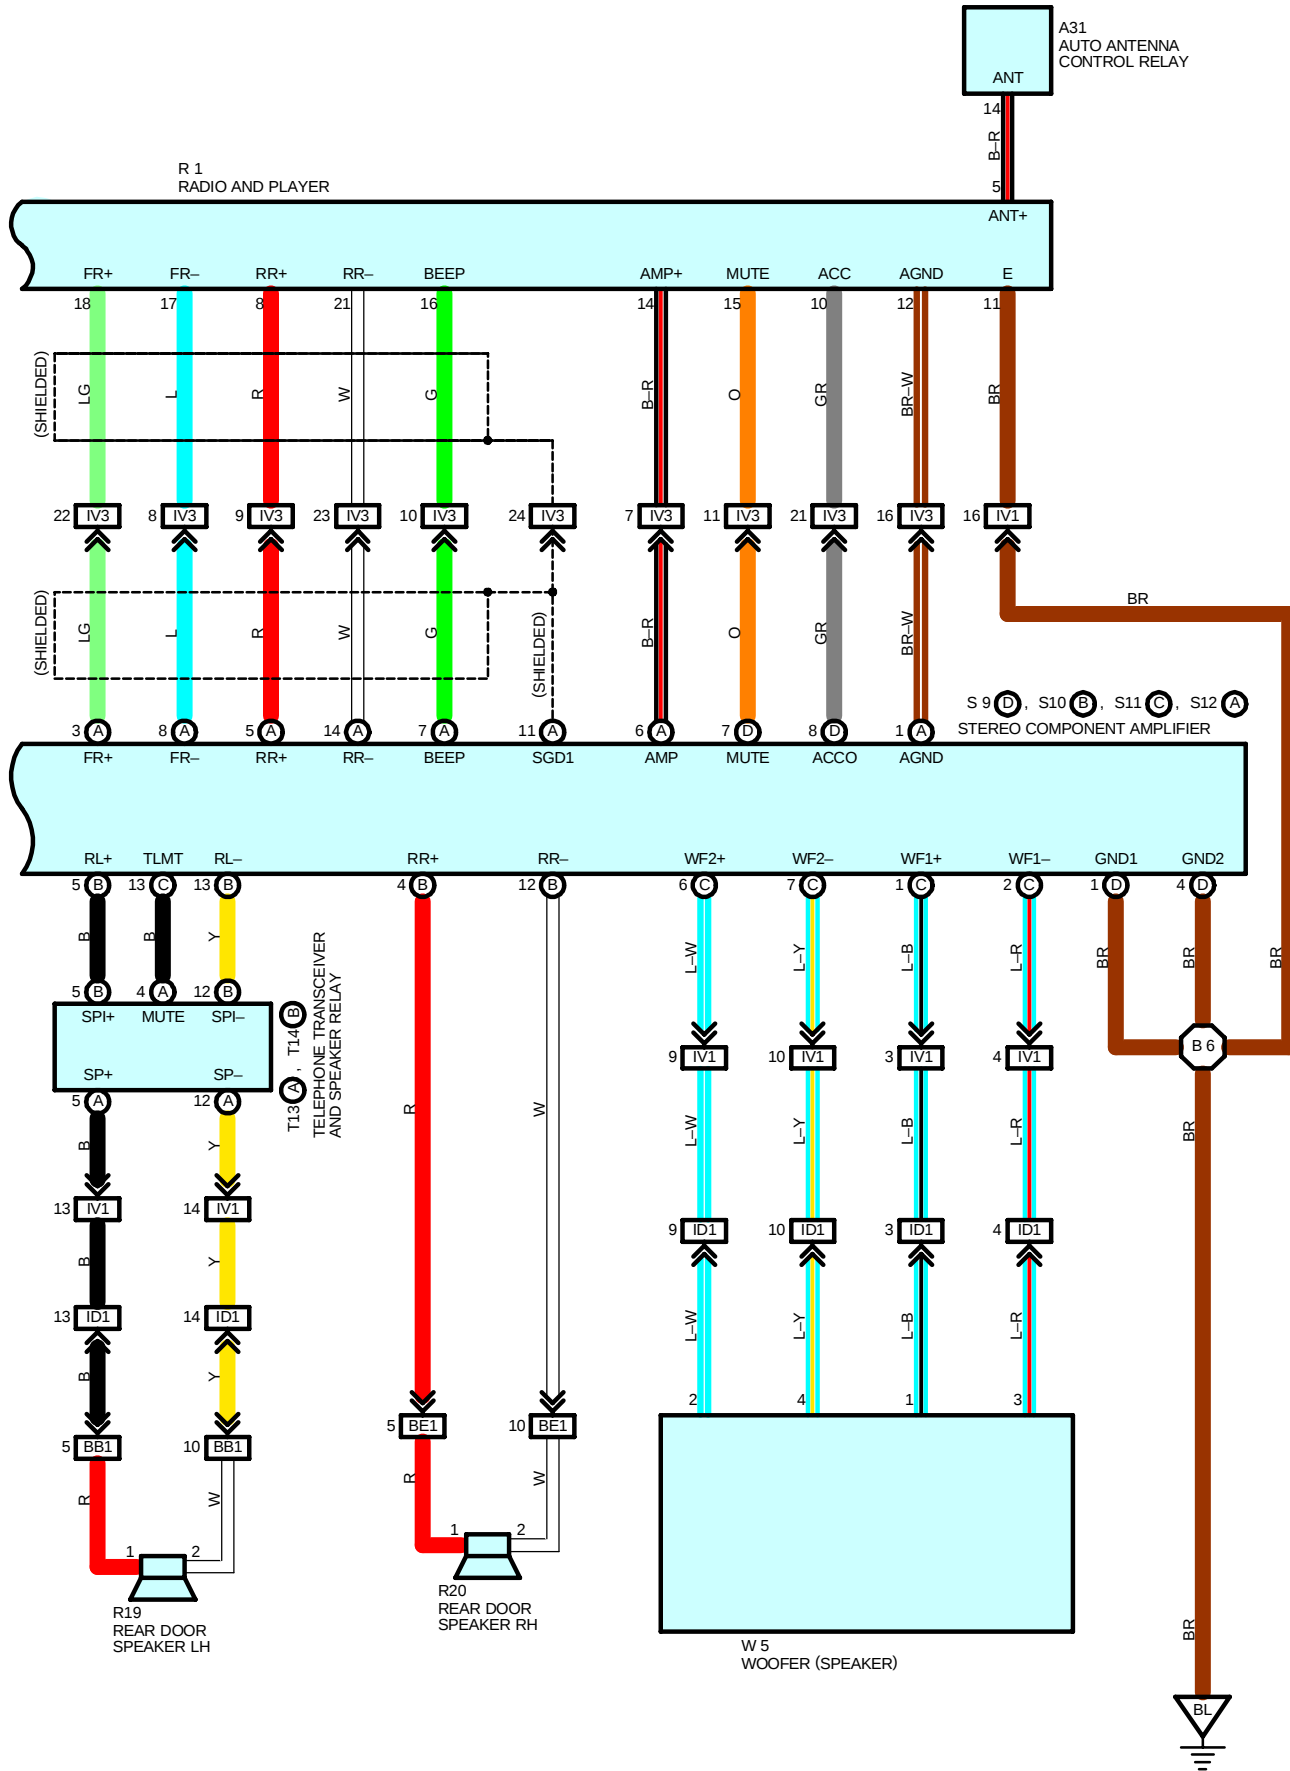

RADIO AND PLAYER

SERVICE HINTS

R1 RADIO AND PLAYER

2-GROUND : Always approx. **12** volts

11-GROUND : Always continuity

S9 STEREO COMPONENT AMPLIFIER

6-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position

2,5-GROUND : Always approx. **12** volts

1,4-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A31	40	R20	43	T13	A 43
F9	42	S9	D 43	T14	B 43
F10	42	S10	B 43	T16	43
R1	41	S11	C 43	T17	43
R19	43	S12	A 43	W5	43

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2D	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	48	Front Door LH Wire and Dash Wire (Left Kick Panel)
ID1	48	Dash Wire and Floor Wire (Left Kick Panel)
IG1	50	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
IV1	54	Dash Wire and Floor No.2 Wire (Behind the Glove Box)
IV3		
IY1	54	Front Door RH Wire and Dash Wire (Right Kick Panel)
BB1	56	Rear Door LH Wire and Floor Wire (Left Side of Center Pillar)
BE1	56	Rear Door RH Wire and Floor No.2 Wire (Right Side of Center Pillar)

: GROUND POINTS

Code	See Page	Ground Points Location
BL	56	Rear Side Under the Front Passenger's Seat

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I10	50	Dash Wire	B6	58	Floor No.2 Wire
B2	58	Front Door LH Wire	B7	58	Front Door RH Wire

