


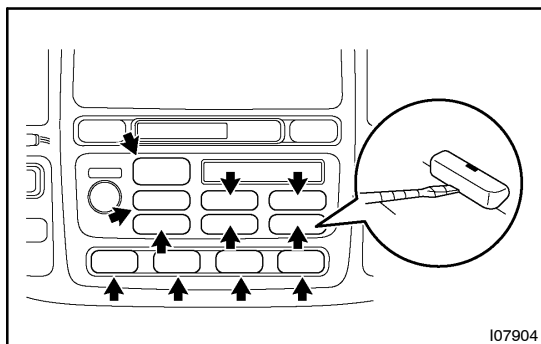

DISASSEMBLY

1. w/o Lexus navigation system:

DISASSEMBLE INTEGRATION PANEL


(a) Remove the knob.

- (1) Pull out the dial knobs.
- (2) Using a screwdriver, pull out the switch knobs.

AC3BF-01


HINT:

Tape the screwdriver tip before use.

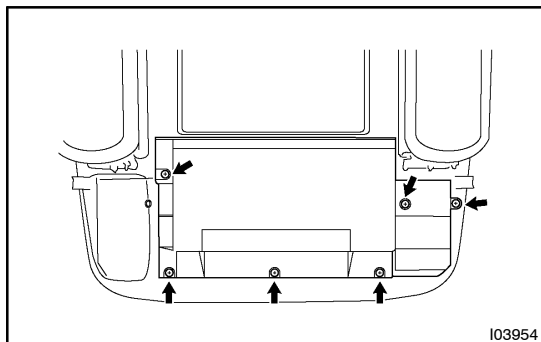


(b) Remove the A/C amplifier.


- (1) Remove the 6 screws and cover.

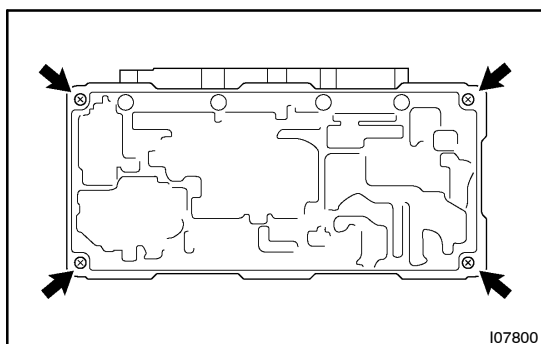

- (2) Remove the 4 set screws.

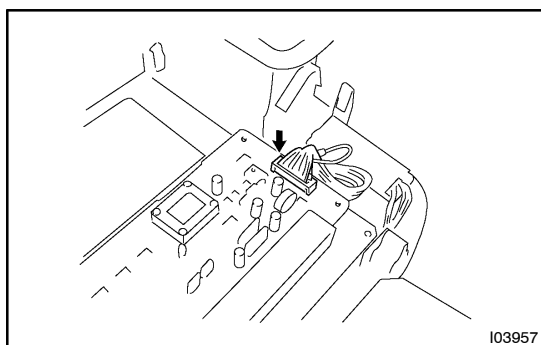

- (3) Disconnect the connector and remove the amplifier.

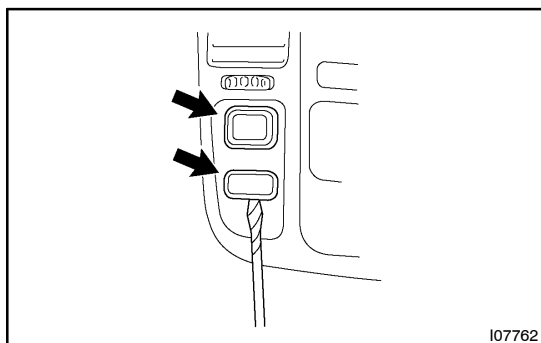


(c) Remove the diff lock and hazard switch


- (1) Using a screwdriver, pull out the switch knobs.

HINT:


Tape the screwdriver tip before use.

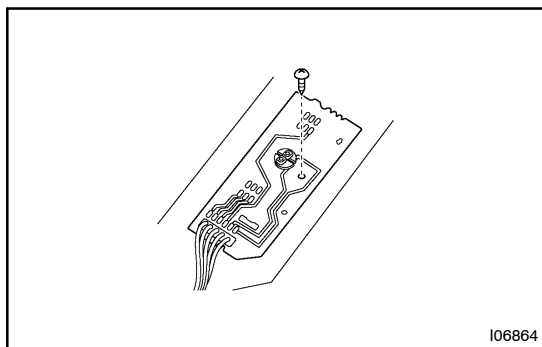


(2) Remove the screw and switch.

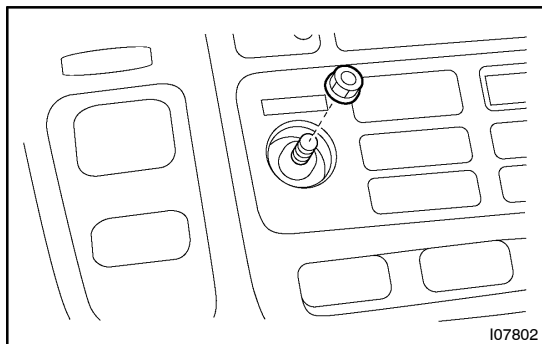


(d) Remove the heater control
(1) Remove the nut from the control switch.

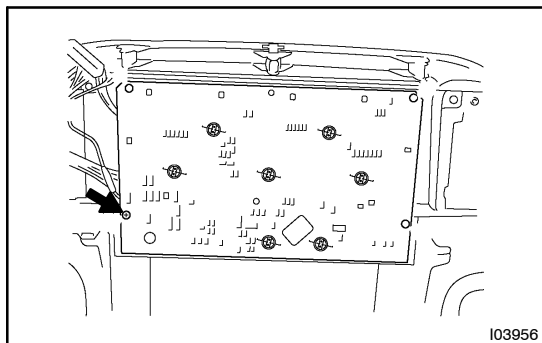


(2) Remove the screw and heater control, then disconnect the connectors.

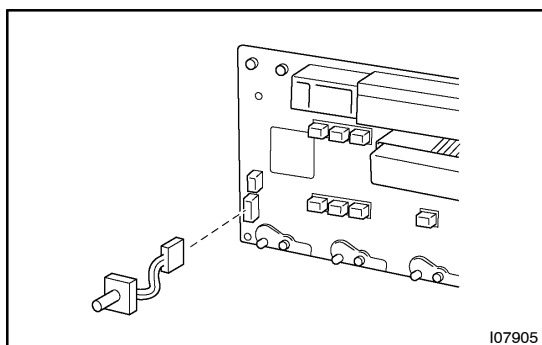


(e) Remove the control switch.
Disconnect the connectors and remove the switches.

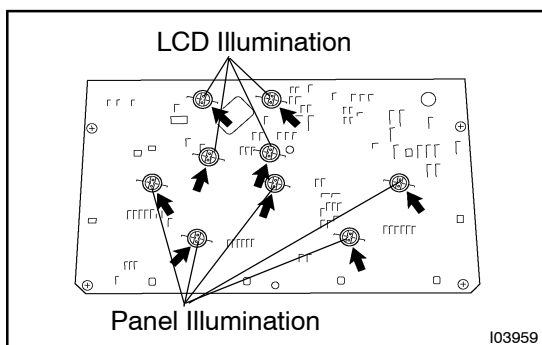

(f) Remove the bulbs.
Using a screw driver, turn the bulb to the left and pull out the bulb.

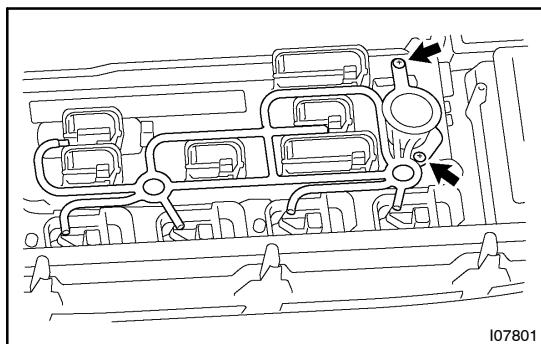

- (g) Remove the heater control lens.
Remove the 2 screws and heater control lens.

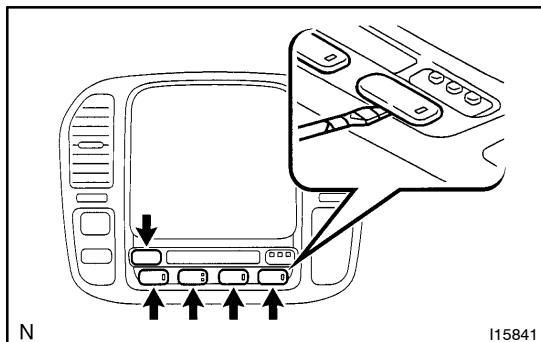


**2. w/ Lexus navigation system:
DISASSEMBLE INTEGRATION PANEL**


- (a) Remove the knob.
(1) Pull out the dial knobs.
(2) Using a screwdriver, pull out the switch knobs.

HINT:

Tape the screwdriver tip before use.

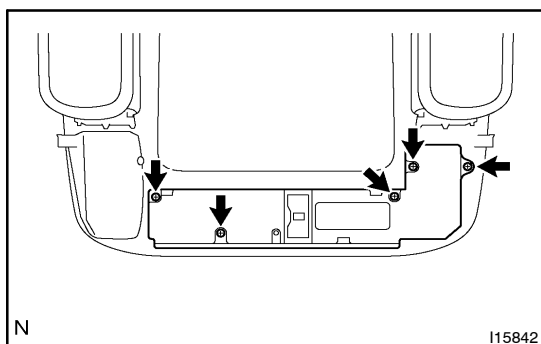


- (b) Remove the A/C amplifier.
(1) Remove the 5 screws and cover.
(2) Disconnect the connector and remove the amplifier.

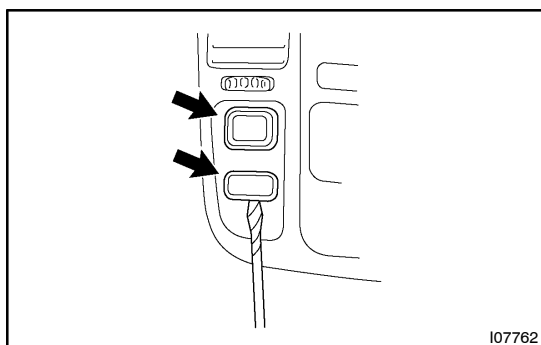

- (c) Remove the diff lock and hazard switch
(1) Using a screwdriver, pull out the switch knobs.

HINT:

Tape the screwdriver tip before use.

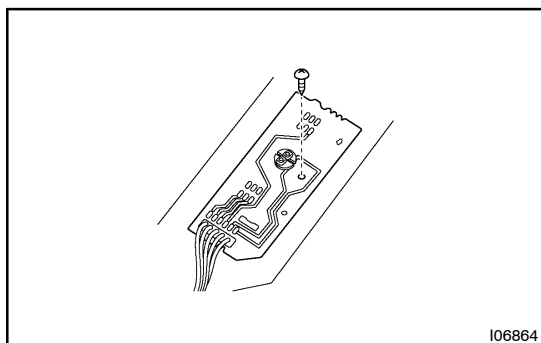

- (2) Remove the screw and switch.
(3) Using a screwdriver, turn the bulb to the left and pull out the bulb.