



REMOVAL

1. REMOVE TRANSFER SHIFT LEVER KNOB
2. REMOVE UPPER CONSOLE PANEL
(See page [BO-99](#))

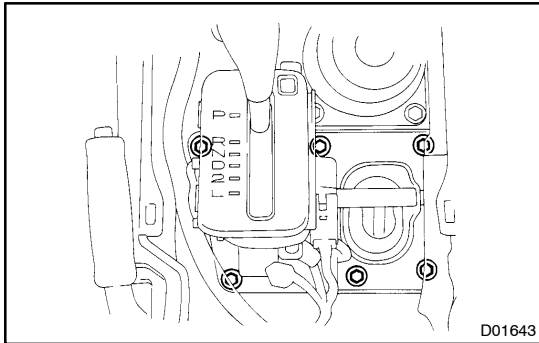

3. REMOVE SHIFT LEVER ASSEMBLY
 - (a) Disconnect the connector.
 - (b) Remove the 6 bolts.
Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

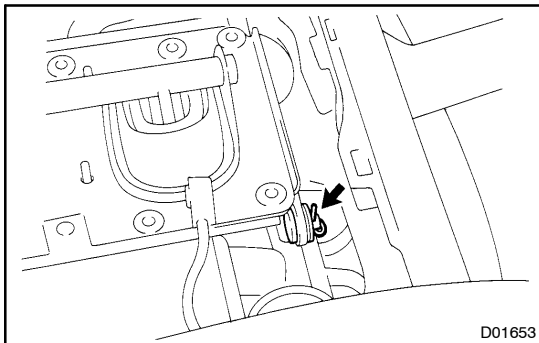

- (c) Lift the shift lever assembly up, using a needle nose pliers, remove the clip and plate washer.
 - (d) Remove the transmission control rod and washer from the shift lever assembly and remove the remove.