 


Wire Harness Side



106195

INSPECTION

1. INSPECT RADIO RECEIVER ASSEMBLY CIRCUIT


Disconnect the connectors from the radio receiver assembly, and inspect the connector on the wire harness side.

Tester connection	Condition	Specified condition
11 – Ground	Constant	Continuity
1 – Ground	Constant	Continuity
10 – Ground	Ignition switch LOCK	No voltage
10 – Ground	Ignition switch ACC or ON	Battery positive voltage


If the circuit is not as specified, inspect the circuits connected to other parts.

Wire Harness Side

 
Connector "A"




Connector "B"

 

Connector "C"

 

Connector "D"

 

104309

2. INSPECT POWER AMPLIFIER CIRCUIT

Disconnect the connector from power amplifier and inspect the connector on the wire harness side.

BODY ELECTRICAL - AUDIO SYSTEM

Tester connection	Condition	Specified condition
A1 – Ground A4 – Ground D1 – Ground	Constant	Continuity
A6 – Ground	Ignition switch LOCK and radio switch ON	No voltage
A6 – Ground	Ignition switch ACC or ON and radio switch ON	Battery positive voltage
A2 – Ground	Constant	Battery positive voltage
A5 – Ground	Constant	Battery positive voltage

If the circuit is not as specified, inspect the circuits connected to other parts.