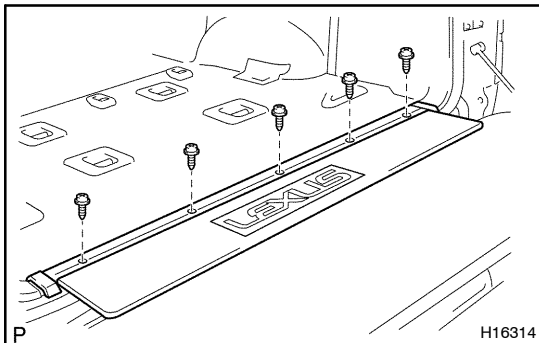


REMOVAL

1. **REMOVE REAR NO. 2 SEATS** (See page [BO-149](#))
Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)
2. **REMOVE REAR NO. 1 SEATS**
(See page [BO-135](#) and [BO-143](#))
Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)
 - (a) Fold the seatback down.
 - (b) Unlock the seat lock, and swing the whole seat up and forward.
 - (c) Remove the 4 bolts and rear No. 1 seat.
3. **REMOVE REAR FLOOR MAT PLATES**
Remove the 2 screws and rear floor mat plate.

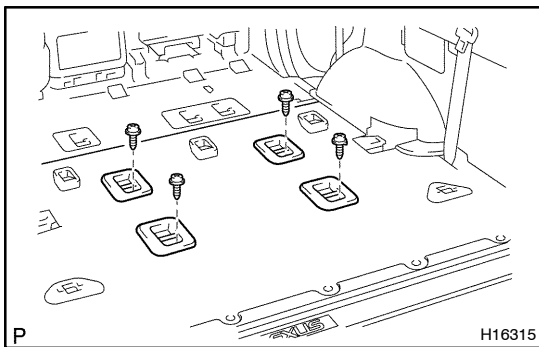


4. REMOVE REAR MAT SET PLATE

- (a) Remove the 5 screws.
- (b) Using a screwdriver, remove the rear mat set plate.

HINT:

Tape the screwdriver tip before use.



5. REMOVE NO. 3 REAR SEAT PROTECTOR

- (a) Remove the screw.
- (b) Remove the No. 3 rear seat protector.

6. REMOVE NO. 3 SEAT FRONT BRACKET COVER

- (a) Remove the screw.
- (b) Remove the No. 3 seat front bracket cover.

7. REMOVE NO. 3 SEAT BRACKET SUPPORT COVER

8. REMOVE NO. 1 SEAT PROTECTOR

- (a) Remove the screw.
- (b) Remove the No. 1 rear seat protector.

9. REMOVE NO. 2 REAR SEAT PROTECTOR

- (a) Remove the 2 screws.
- (b) Remove the No. 2 rear seat protector.

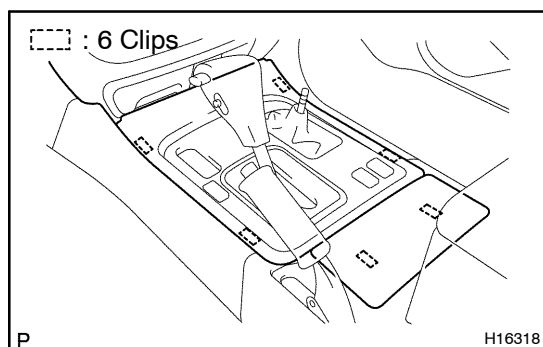
10. REMOVE FRONT SEAT (See page [BO-122](#))

Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)

11. REMOVE 3 CRS TETHER ANCHOR BRACKETS

- (a) Remove the 3 CRS tether anchor bracket covers.
- (b) Remove the 3 CRS tether anchor brackets.

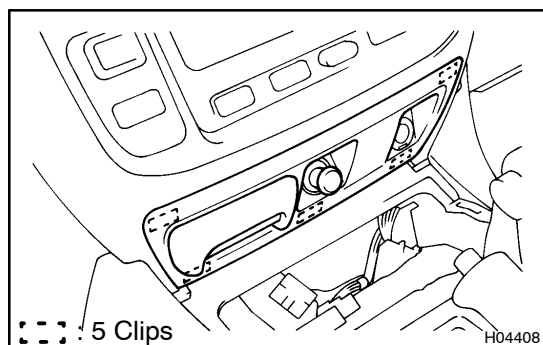
Torque: 26 N·m (270 kgf·cm, 20 ft·lbf)

**12. REMOVE REAR CONSOLE PANEL**

- (a) Remove the transfer shift lever knob.
- (b) Using a screwdriver, remove the rear console panel.

HINT:

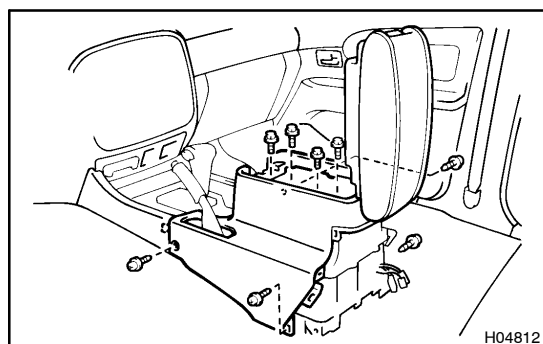
Tape the screwdriver tip before use.

**13. REMOVE CENTER LOWER CLUSTER FINISH PANEL**

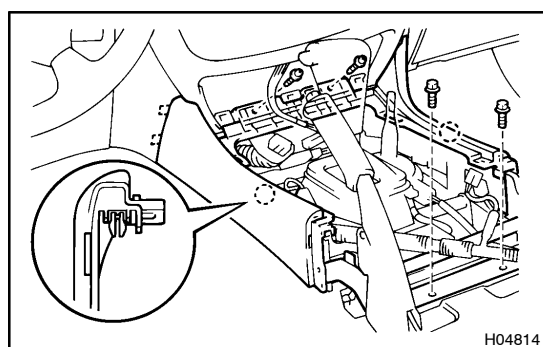
Using a screwdriver, remove the center lower cluster finish panel, then disconnect the connectors.

HINT:

Tape the screwdriver tip before use.

**14. REMOVE REAR CONSOLE BOX**

- (a) w/o LEXUS Navigation system:
Remove the 4 bolts, 4 screws and rear console box.
- (b) w/ LEXUS Navigation system:
Remove the 2 bolts, 6 screws and rear console box.

**15. REMOVE FRONT CONSOLE BOX**

Remove the 2 screws and front console box.

16. REMOVE FRONT DOOR SCUFF PLATE

Using a screwdriver, remove the front door scuff plate.

HINT:

Tape the screwdriver tip before use.

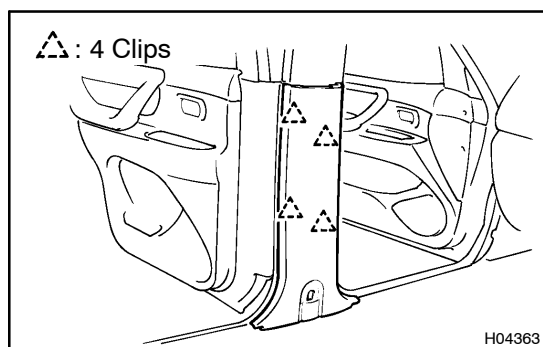
17. REMOVE REAR DOOR SCUFF PLATE

Using a screwdriver, remove the front door scuff plate.

HINT:

Tape the screwdriver tip before use.

18. REMOVE FRONT DOOR OPENING TRIM**19. REMOVE REAR DOOR OPENING TRIM**

**20. REMOVE CENTER PILLAR LOWER GARNISH**

- (a) Using a screwdriver, remove the seat belt floor anchor cover caps.

HINT:

Tape the screwdriver tip before use.

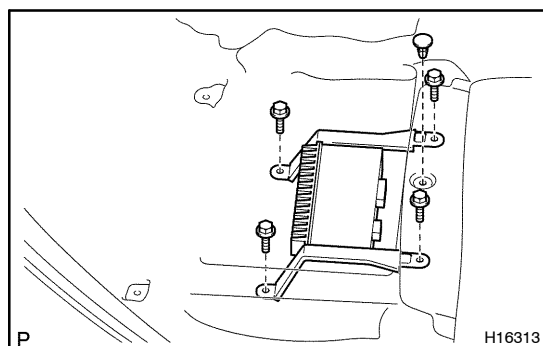
- (b) Remove the bolts and front seat outer belt floor anchors.
 (c) Using a screwdriver, remove the center pillar lower garnishes as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

21. REMOVE FLOOR CARPET CENTER COVER

Remove the 2 clips and floor center cover.

**22. REMOVE FRONT FLOOR CARPET**

- (a) Remove the clip and 4 bolts.
 (b) Remove the power amplifier.
 (c) Remove the front carpet.