



REMOVAL


1. **REMOVE REAR NO. 2 SEATS**
Torque: 37 N·m (375 kgf·cm, 27ft·lbf)
2. **REMOVE REAR DOOR SCUFF PLATE**
3. **REMOVE REAR NO. 2 SEAT OUTER BELT FLOR AN-
CHOR**
Torque: 42 N·m (430 kgf·cm, 31 in·lbf)
4. **REMOVE REAR NO. 1 SEAT OUTER BELT FLOR AN-
CHOR**
Torque: 42 N·m (430 kgf·cm, 31 in·lbf)
5. **REMOVE REAR DOOR OPENING TRIM**
6. **REMOVE REAR MAT SET PLATE**
Remove the 5 bolts and rear mat set plate.

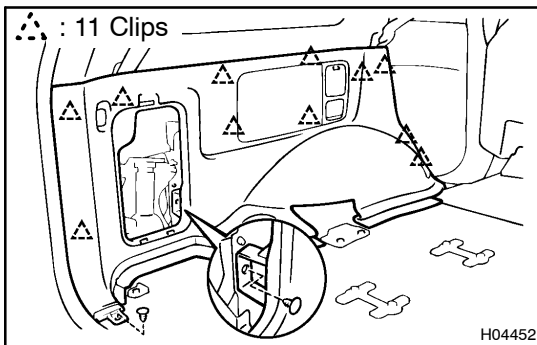

7. **REMOVE LH QUARTER TRIM PANEL**
 - (a) Remove the quarter trim jack cover.
 - (b) Using a clip remover, remove the 2 clips.
 - (c) Remove the quarter trim panel, then disconnect the connector.

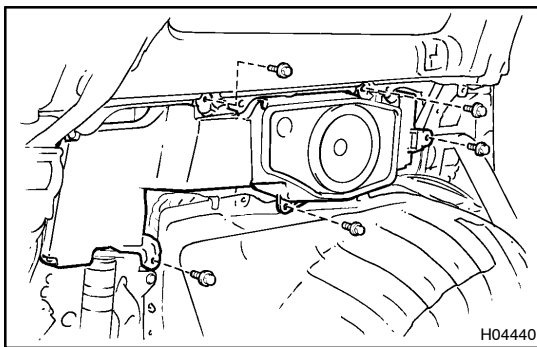


8. **REMOVE SPEAKER**
 - (a) Remove the 5 bolts, then disconnect the connector.
 - (b) Remove the speaker.

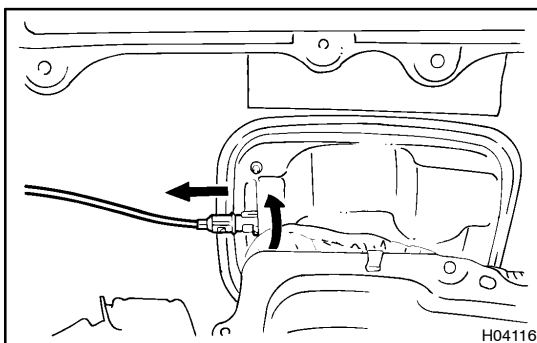


9. **REMOVE FUEL FILLER OPENING LID LOCK**
 - (a) Turn the fuel filler opening lid lock to remove it.
 - (b) Remove the fuel filler opening lid lock.
10. **REMOVE FUEL TANK CAP TETHER FROM FUEL FILL-
ER OPENING LID**

Remove the cap and fuel tank cap tether from the fuel filler opening lid.

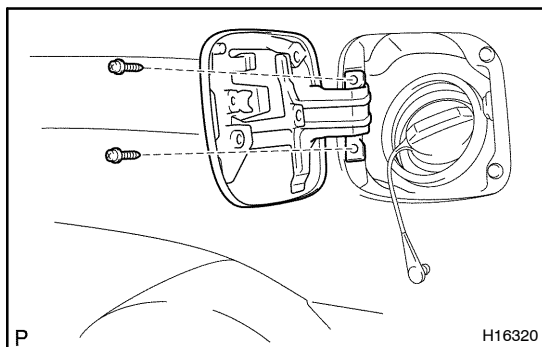**11. REMOVE FUEL FILLER OPENING LID**

- (a) Open the opening lid.
- (b) Remove the 2 screws and opening lid.

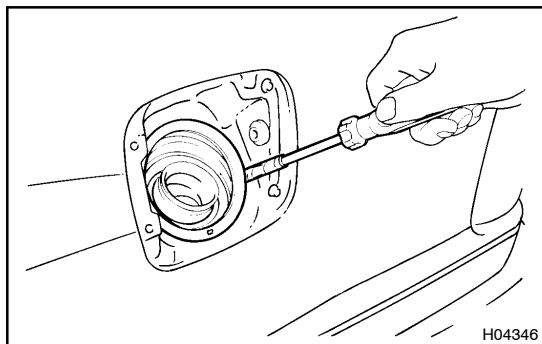**12. REMOVE FUEL TANK FILLER PIPE SHIELD**

- (a) Remove the fuel filler opening lid lock retainer.
- (b) Using a screwdriver, remove the 2 fuel tank filler pipe shield rings.

HINT:

Tape the screwdriver tip before use.

- (c) Remove the fuel tank filler pipe shield.

CAUTION:

- **Always keep the tank cap closed when it is not required to be opened.**
- **Keep all fire away during the operation.**