


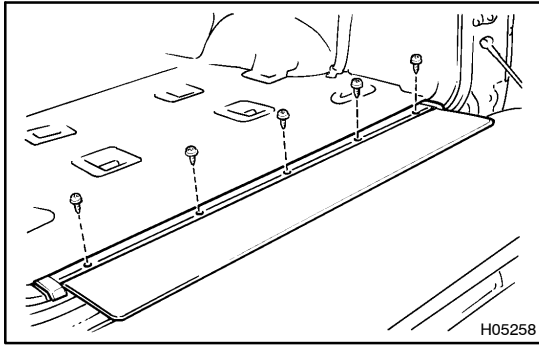


DISASSEMBLY

1. REMOVE REAR MAT SET PLATE

- Remove the 5 screws.
- Using a screwdriver, remove the rear mat set plate.

HINT:

Tape the screwdriver tip before use.

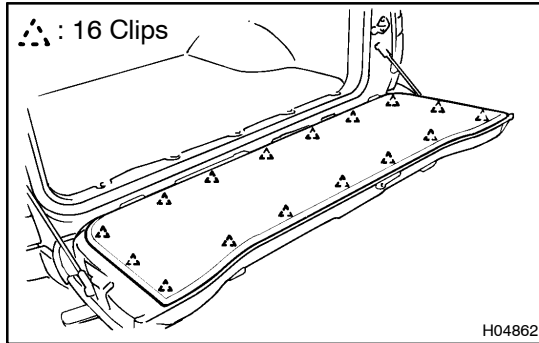


2. REMOVE BACK DOOR TRIM

- Insert a screwdriver between the door and door trim to pry out.

HINT:


Tape the screwdriver tip before use.

- Remove the door trim.

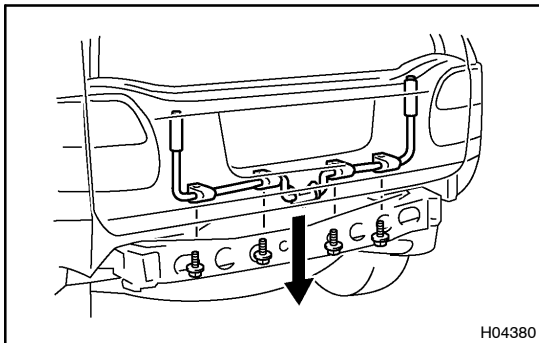


3. REMOVE LOWER TORSION BAR

- Remove the rear bumper.
(See page [BO-5](#))
- Remove the 4 bolts and lower torsion bar as shown in the illustration.
- Remove the torsion bar guide.

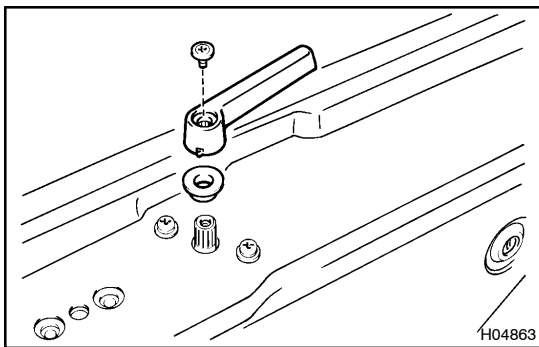

4. REMOVE BACK DOOR INSIDE HANDLE

- Remove the screw and back door inside handle.
- Remove the spacer.

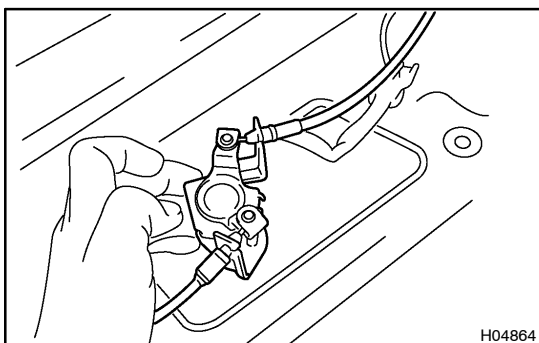


5. REMOVE BACK DOOR LOCK CONTROL

- Remove the 2 screws.
- Disconnect the door lock control cables, then remove the back door control.


6. REMOVE SERVICE HOLE COVER

NOTICE:

Do not tear the service hole cover.

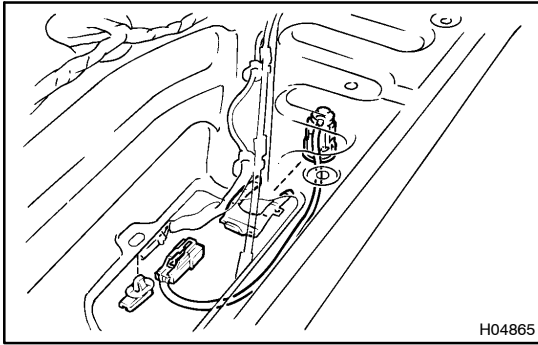**7. REMOVE KEY CYLINDER**


- (a) Disconnect the connector.
- (b) Remove the clip and key cylinder.

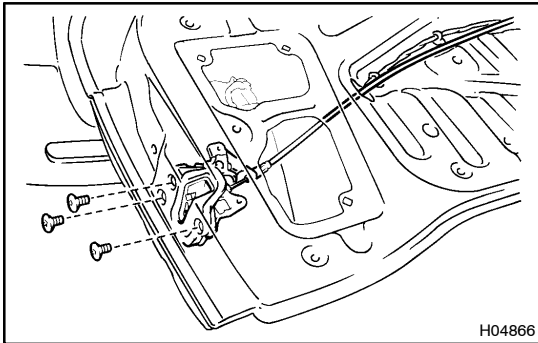**8. REMOVE BACK DOOR LOCK**


- (a) Disconnect the control cables from the clamps.
- (b) Using a torx wrench, remove the 6 screws and back door locks.

Torx wrench: T30 (Part No. 09042-00010 or locally manufactured tool)

Torque: 7.4 N·m (75 kgf·cm, 65 in·lbf)

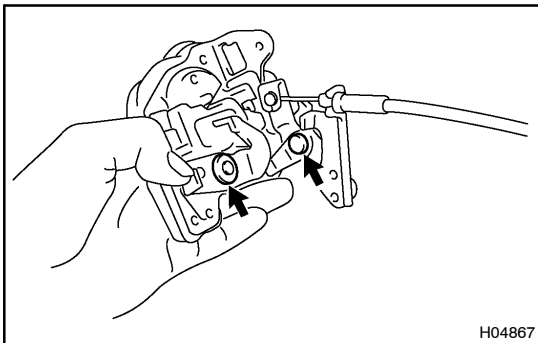**HINT:**

At the time of assembly, please refer to the following item.
Apply MP grease to the rotating parts of the door lock.

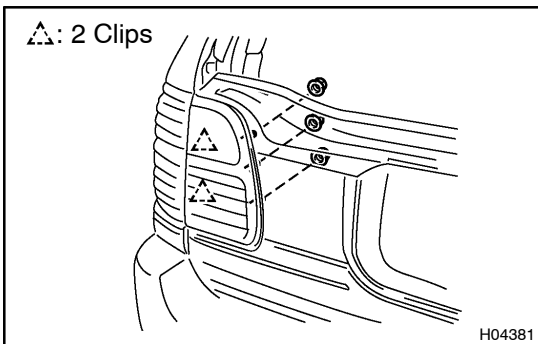


△: 2 Clips

9. REMOVE REAR LAMP ASSEMBLY

- (a) Disconnect the connector.
- (b) Remove the 6 nuts.
- (c) Using a screwdriver, remove the rear lamp assemblies.

HINT:

Tape the screwdriver tip before use.

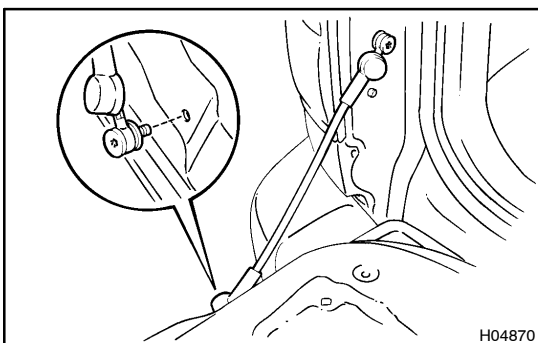**10. REMOVE TAIL GATE STAY**

Using a torx wrench, remove the 4 screws and 2 tail gate stays.

Torx wrench: T30 (Part No. 09042-00010 or locally manufactured tool)

Torque: 17 N·m (170 kgf·cm, 12 ft·lbf)