


REMOVAL

1. REMOVE THESE PARTS:

- (a) Rear No.2 seat
- (b) Rear door scuff plate
- (c) Rear mat set plate

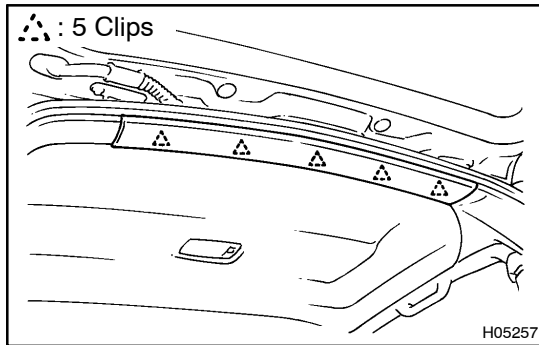

2. REMOVE ROOF HEADLINING REAR TRIM


Using a screwdriver, remove the roof headlining rear trim.

HINT:

Tape the screwdriver tip before use.

3. REMOVE THESE PARTS:

- (a) Rear No.2 seat outer belt floor anchor
Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)
- (b) Rear No.1 seat outer belt floor anchor
Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)
- (c) Rear door opening trim
- (d) Rear mat set plate

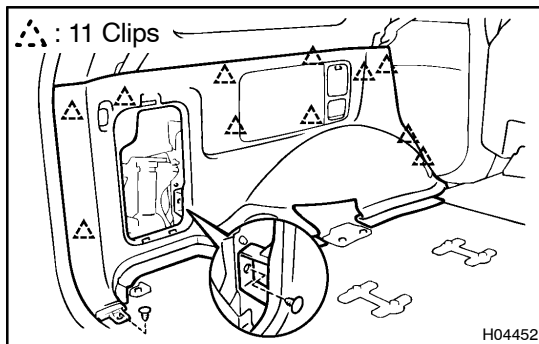


4. REMOVE QUARTER TRIM PANEL

- (a) Remove the quarter trim jack cover.
- (b) Using a clip remover, remove the 2 clips.
- (c) Remove the quarter trim panel, then disconnect the connector.

5. REMOVE THESE PARTS:

- (a) Anchor cover
- (b) Rear No.2 seat outer belt shoulder anchor
Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)
- (c) Rear No.1 seat outer belt shoulder anchor
Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)

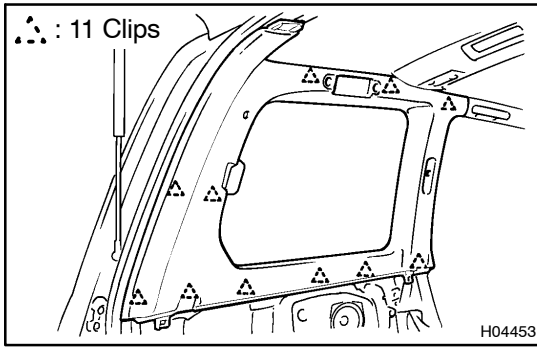

6. REMOVE UPPER ROOF SIDE INNER GARNISH

- (a) Using a screwdriver, remove the assist grip plugs, then remove the 4 screws and assist grip.


HINT:

Tape the screwdriver tip before use.

- (b) Using a screwdriver, remove the upper roof side inner garnish.


HINT:

Tape the screwdriver tip before use.

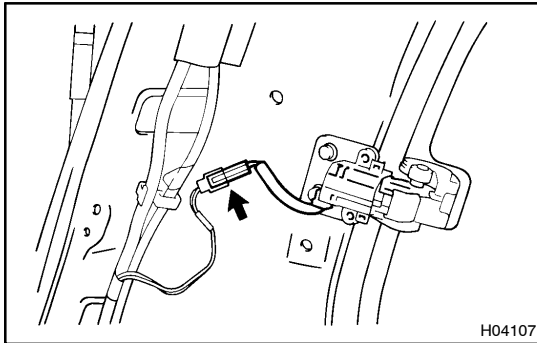


7. REMOVE QUARTER WINDOW GLASS ASSEMBLY

- (a) Disconnect the connector.

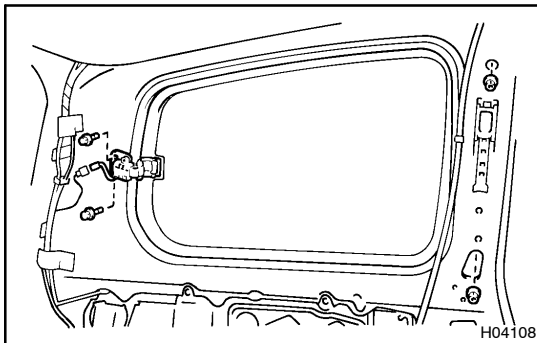


- (b) Remove the 2 nuts and 2 bolts.
 (c) Remove the quarter window glass.
 (d) Remove the quarter window weatherstrip.

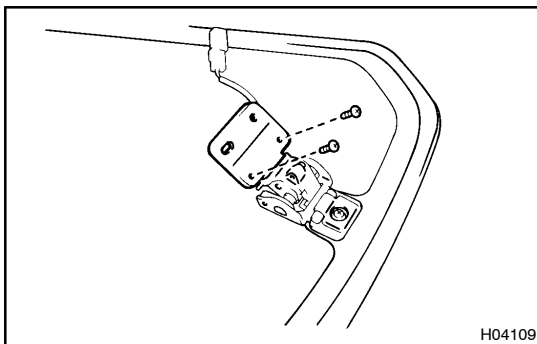


8. REMOVE POWER VENT MOTOR ASSEMBLY

- (a) Remove the 2 screws, then remove the bracket.

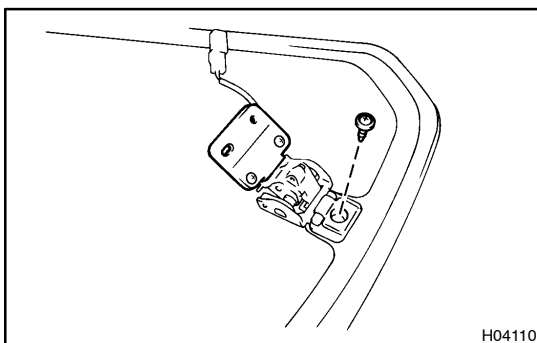

- (b) Remove the screw and the power vent motor assembly.

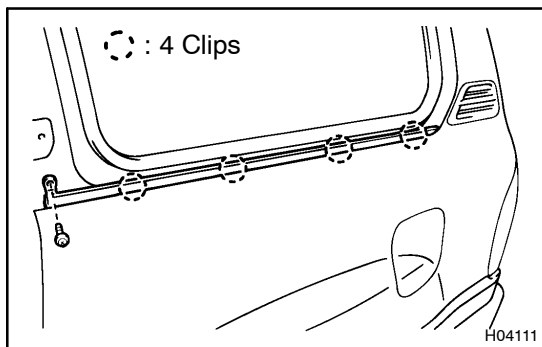**9. REMOVE QUARTER BELT MOULDING**

- (a) Remove the screw.
- (b) Using a screwdriver, remove the quarter belt moulding.

HINT:

Tape the screwdriver tip before use.