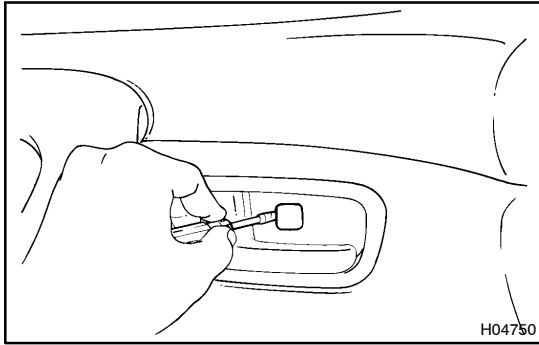




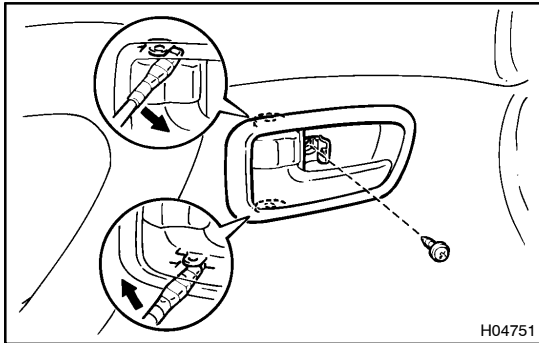
DISASSEMBLY

1. REMOVE DOOR INSIDE HANDLE BEZEL

- (a) Using a screwdriver, open the cover as shown in the illustration.

HINT:

Tape the screwdriver tip before use.



- (b) Remove the screw.

- (c) Using a screwdriver, remove the inside handle bezel as shown in the illustration.

HINT:

Tape the screwdriver tip before use.



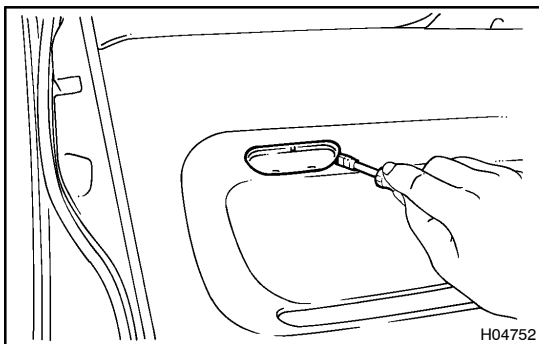
2. REMOVE POWER WINDOW SWITCH

- (a) Using a screwdriver, remove the power window switch as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

- (b) Disconnect the connector.

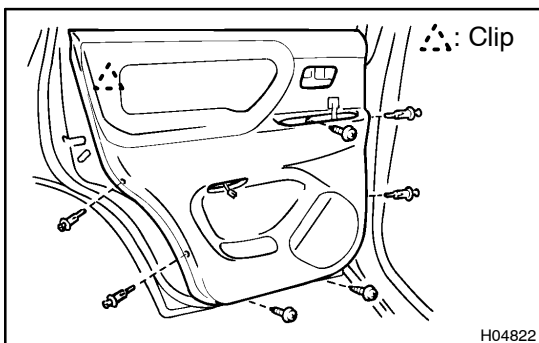


3. REMOVE DOOR COURTESY LIGHT

Using a screwdriver, remove the courtesy light, then disconnect the connector.

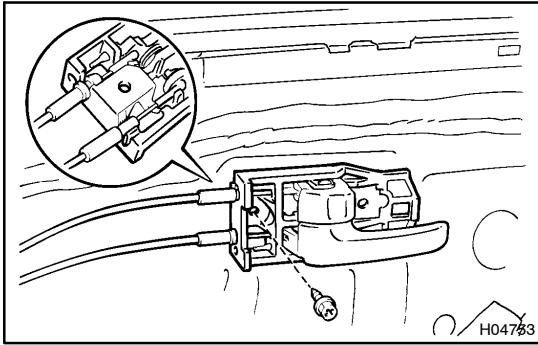
HINT:

Tape the screwdriver tip before use.

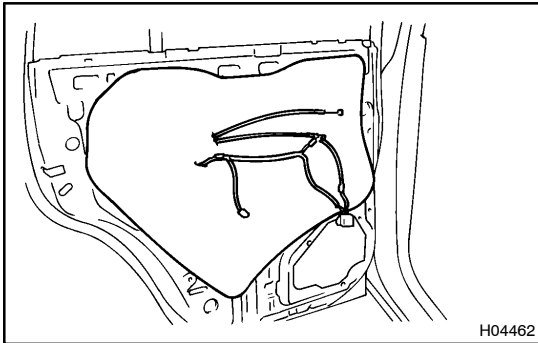


4. REMOVE DOOR TRIM

- (a) Remove the 3 screws and 4 clips.
- (b) Pull the trim upward to remove it.

**5. REMOVE INSIDE HANDLE**

- (a) Remove the screw.
- (b) Disconnect the 2 control cables from the inside handle as shown in the illustration.

6. REMOVE SPEAKER**7. REMOVE SERVICE HOLE COVER**

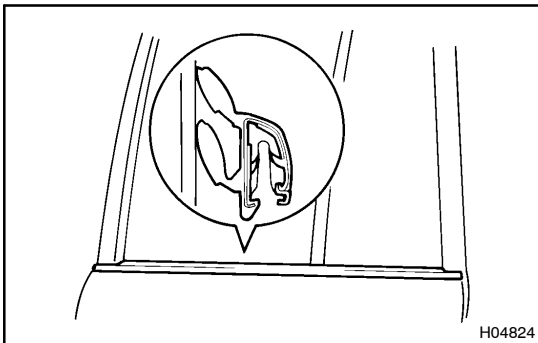
- (a) Remove the clamps and wire harness.
- (b) Remove the service hole cover.

NOTICE:

Do not tear the cover.

HINT:

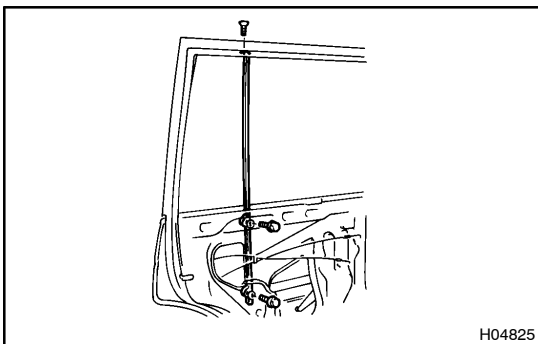
At the time of assembly, please refer to the following item.
Bring out the 2 control cables and wire harness through the service hole cover.

**8. REMOVE DOOR BELT MOULDING**

Using a scraper, remove the door belt moulding.

HINT:

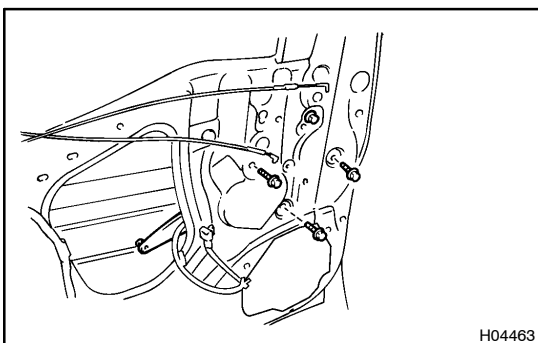
Tape the scraper tip before use.

9. REMOVE DOOR GLASS RUN**10. REMOVE DIVISION BAR**

Remove the 2 bolts, screw and division bar.

11. REMOVE THESE PARTS:

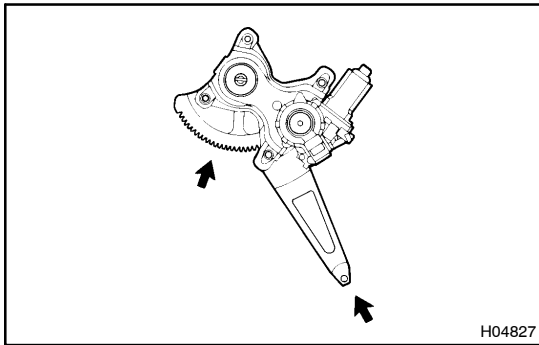
- (a) Door glass
- (b) Quarter window glass with weatherstrip

**12. REMOVE WINDOW REGULATOR**

- (a) Disconnect the connector, then remove the 3 bolts.
Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)
- (b) Loosen the bolts and remove the window regulator.
Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)

HINT:

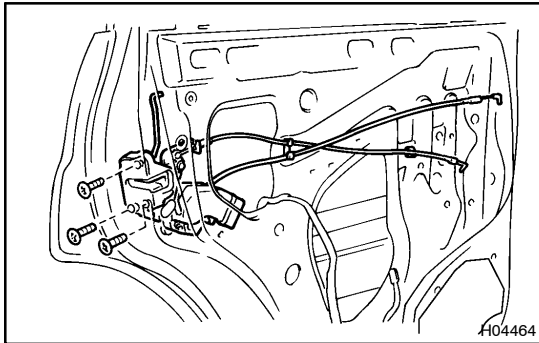
Remove the regulator through the service hole.

**HINT:**

At the time of assembly, please refer to the following item.
Apply MP grease to the window regulator.

NOTICE:

At the time of assembly, please refer to the following item.
Do not apply grease to the spring of the window regulator.

**13. REMOVE DOOR LOCK**

- (a) Disconnect the connector.
- (b) Disconnect the link from outside handle.
- (c) Using a torx wrench, remove the 3 screws and door lock.

Torx wrench: T30 (Part No. 09042-00010 or locally manufactured tool)

Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)

HINT:

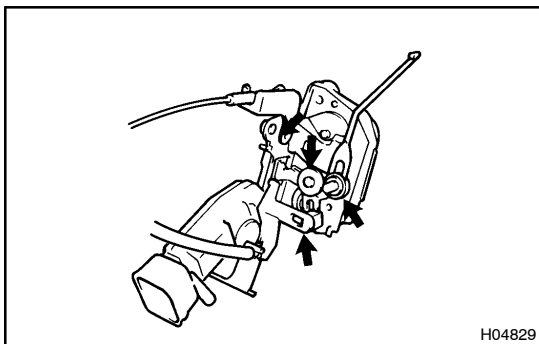
Remove the door lock through the service hole.

HINT:

At the time of assembly, please refer to the following items.

- Apply adhesive to 3 screws.

Part No. 08833-00070, THREE BOND 1324 or equivalent.



- Apply MP grease to the sliding and rotating parts of the door lock.

14. REMOVE OUTSIDE HANDLE

Remove the 2 bolts and outside handle.

Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)