


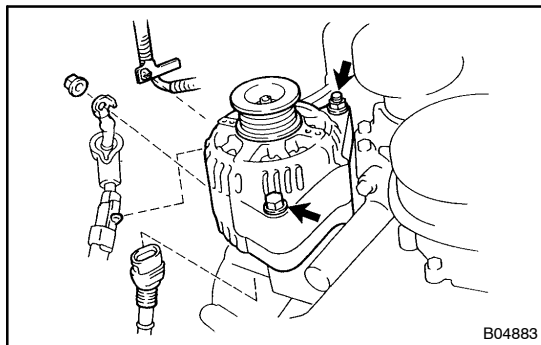

INSTALLATION

1. INSTALL GENERATOR


- (a) Install the generator with the bolt and nut.
Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)
- (b) Connect the generator connector.
- (c) Connect the generator wire with the nut and rubber cap.
- (d) Install the generator wire clamp to the cord clip on the generator.

2. INSTALL PS VANE PUMP PULLEY

(See page [SR-34](#))

3. INSTALL RADIATOR ASSEMBLY

(See page [CO-19](#))

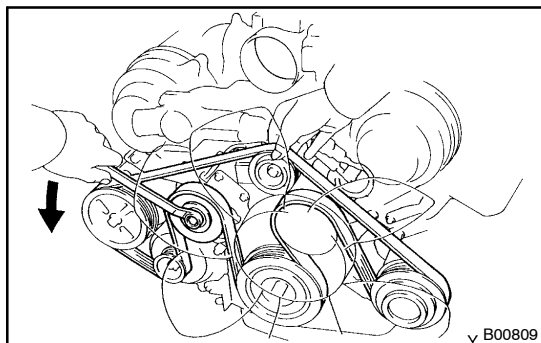

4. INSTALL GENERATOR DRIVE BELT

Install the belt by turning the belt tensioner counterclockwise.

HINT:

The pulley bolt for the belt tensioner has a left – hand thread.

5. FULL ENGINE COOLANT

6. START ENGINE AND CHECK FOR LEAKS

7. RECHECK ENGINE COOLANT LEVEL

8. PERFORM ON-VEHICLE INSPECTION

(See page [CH-2](#))

9. INSTALL ENGINE UNDER COVER NO.1