


DTC	C1268 / 68	Transfer L4 Position Switch Circuit
------------	-------------------	--

CIRCUIT DESCRIPTION


DTC No.	DTC Detecting Condition	Trouble Area
C1268 / 68	Open or short circuit in transfer L4 position switch.	- Transfer L4 position switch - Transfer L4 position switch circuit

WIRING DIAGRAM

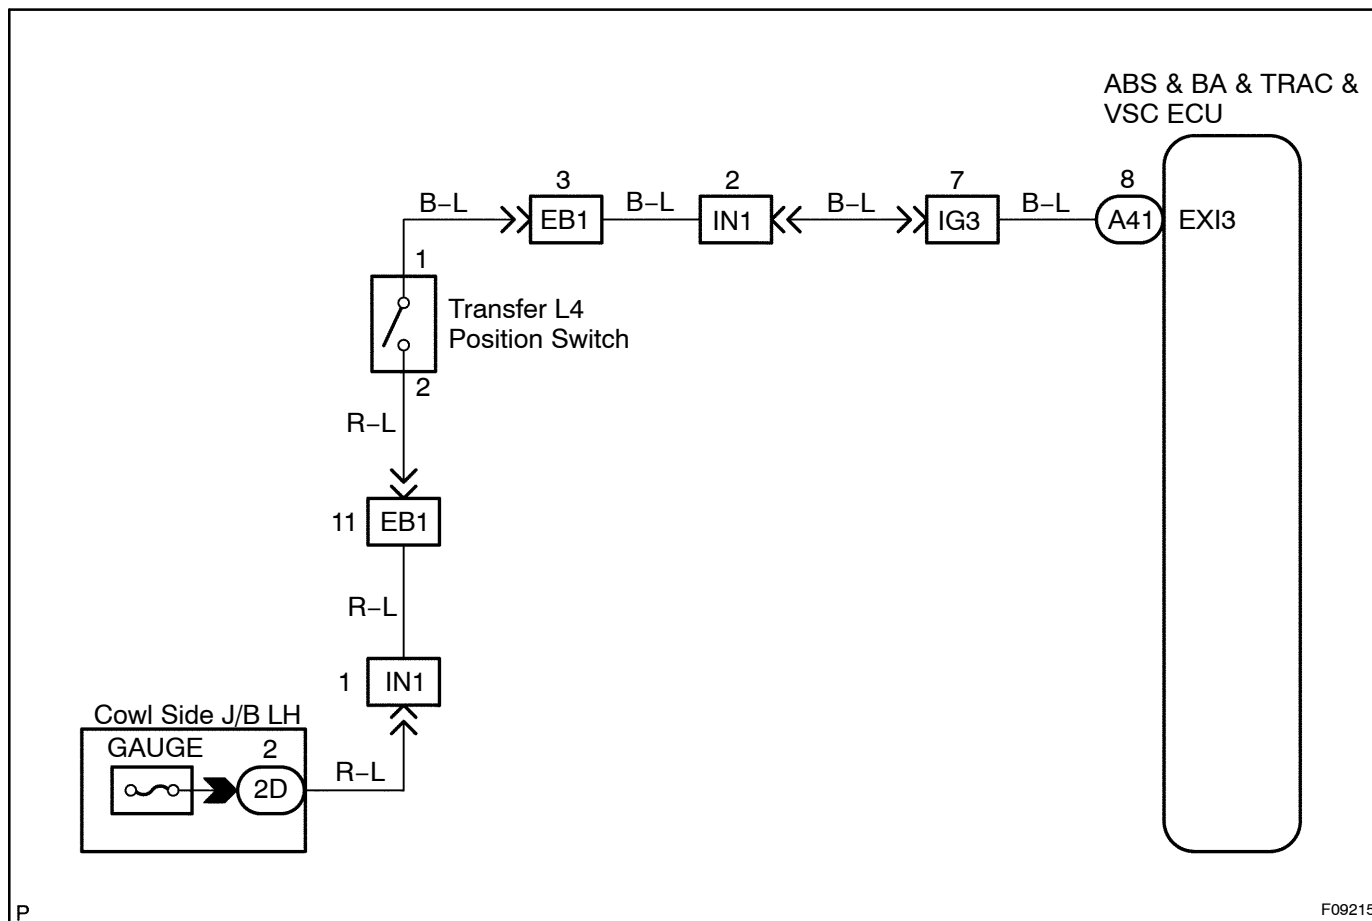

INSPECTION PROCEDURE

- | | |
|----------|--|
| 1 | Check voltage between terminal EXI3 of ABS & BA & TRAC & VSC ECU and body ground. |
|----------|--|

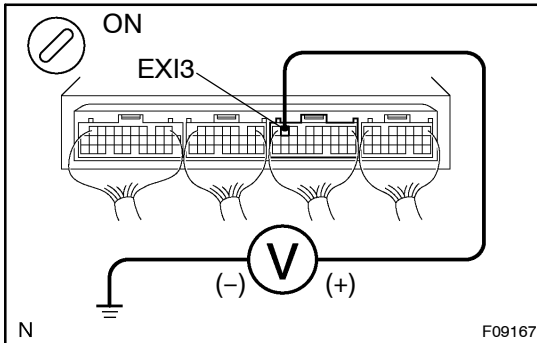

PREPARATION:

Remove the ABS & BA & TRAC & VSC ECU with connectors still connected.

CHECK:

- Turn the ignition switch ON.
- Measure voltage between terminal EXI3 of ABS & BA & TRAC & VSC ECU and body ground when transfer in L4 position.

OK:

Voltage: 10 – 14 V

OK

Proceed to next circuit inspection shown in problem symptoms chart (See page [DI-326](#)).

NG

- | | |
|----------|---|
| 2 | Check transfer L4 position switch (See page TR-49). |
|----------|---|

NG

Replace transfer L4 position switch.

OK

- | | |
|----------|--|
| 3 | Check for open or short circuit in harness and connector between transfer L4 position switch and ABS & BA & TRAC & VSC ECU (See page IN-34). |
|----------|--|

NG

Repair or replace harness or connector.

4	Check for open or short circuit in harness and connector between ABS & BA & TRAC & VSC ECU and ECM (See page IN-34).
---	---

NG**Repair or replace harness or connector.****OK****Check and replace ABS & BA & TRAC & VSC ECU.**