


Tc Terminal Circuit

CIRCUIT DESCRIPTION


Connecting terminals Tc and E₁ of DLC1 or Tc and CG of DLC3 causes the ECU to display the DTC by flashing the ABS warning light and VSC TRAC warning light.

WIRING DIAGRAM

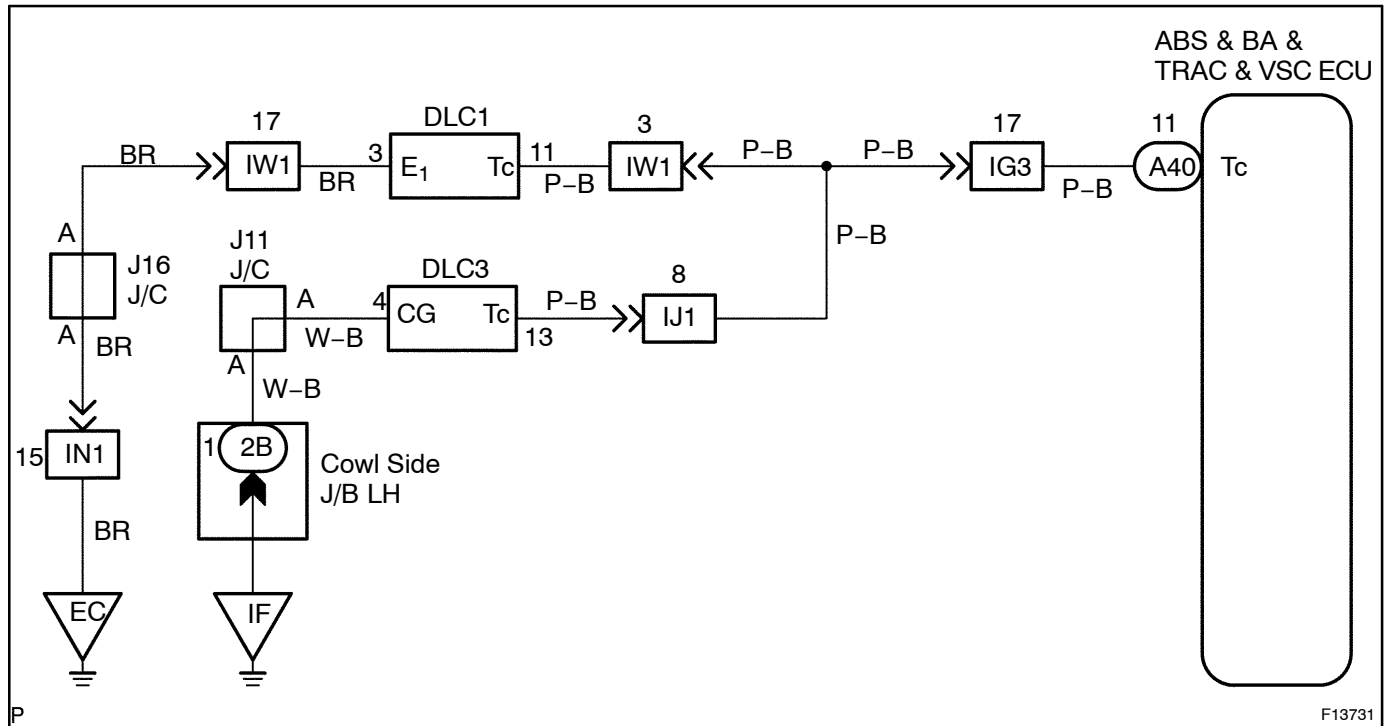

INSPECTION PROCEDURE

- | | |
|---|---|
| 1 | Check voltage between terminals Tc and E₁ of DLC1 or Tc and CG of DLC3. |
|---|---|

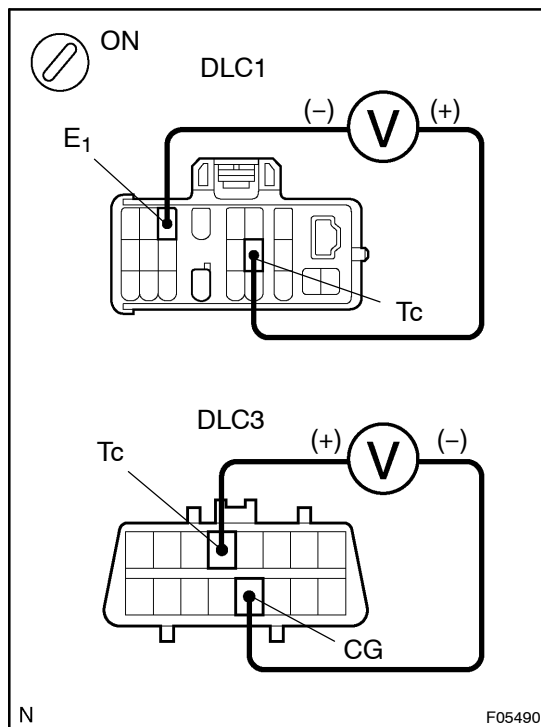**CHECK:**

- (a) Turn ignition switch ON.
- (b) Measure voltage between terminals Tc and E₁ of DLC1 or Tc and CG of DLC3.

OK:

Voltage: 10 – 14 V

OK

If ABS warning light does not blink even after Tc and E₁ of DLC1 or Tc and CG of DLC3 have been connected, the ECU may be defective.

NG

- | | |
|---|--|
| 2 | IG switch OFF, and check for open and short circuit in harness and connector between ABS & BA & TRAC & VSC ECU and DLC1 or DLC3, DLC1 or DLC3 and body ground (See page IN-34). |
|---|--|

NG

Repair or replace harness or connector.

OK

Check and replace ABS & BA & TRAC & VSC ECU.