


CIRCUIT DESCRIPTION

WIRING DIAGRAM

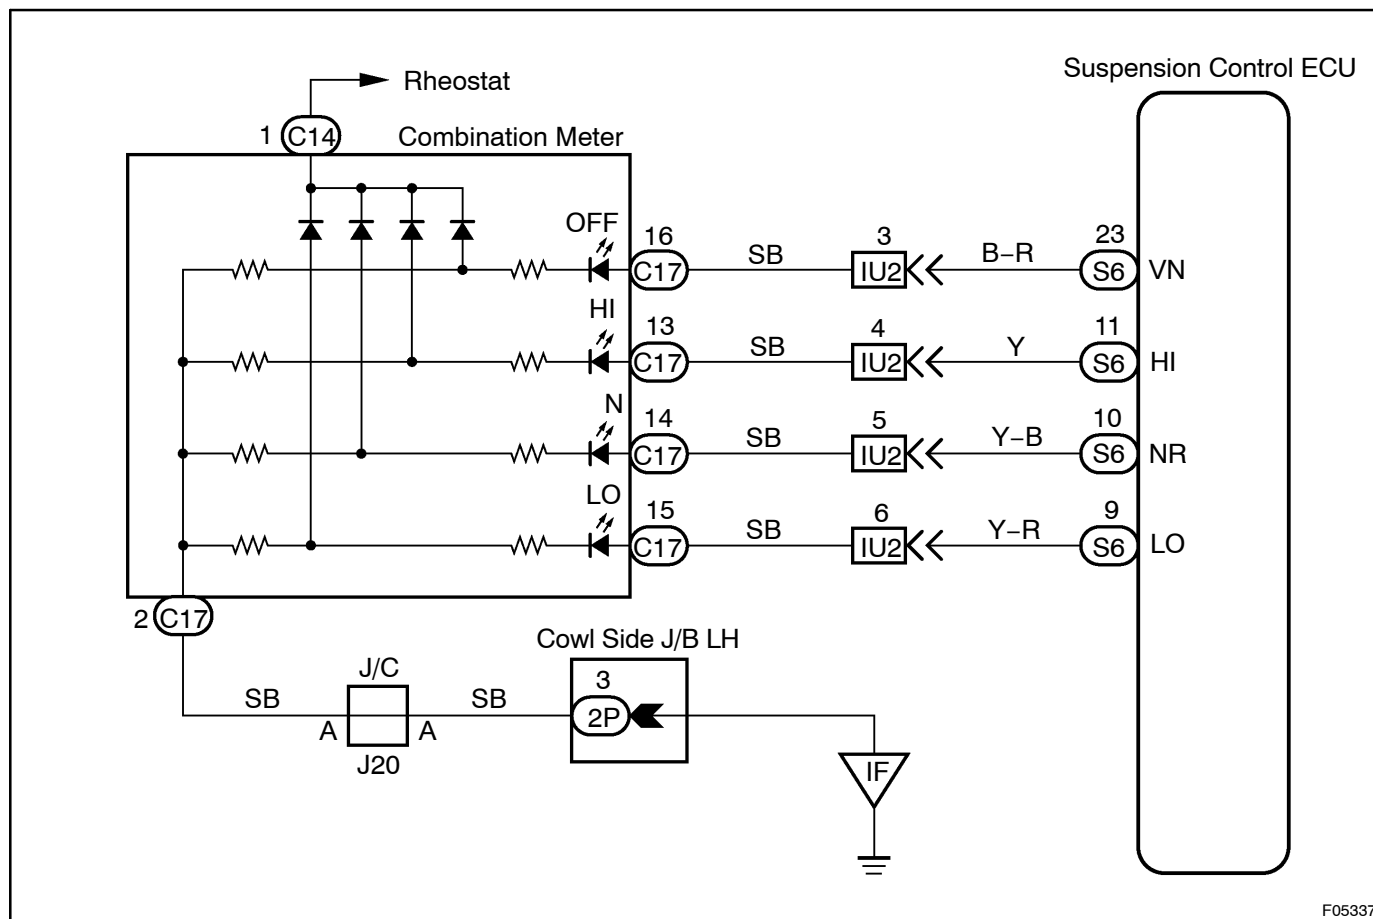

INSPECTION PROCEDURE

1	Check height control indicator light.
---	---------------------------------------

See combination meter troubleshooting on page [BE-79](#).

NG

Repair bulb or combination meter assembly.

OK

2	Check for open and short circuit in harness and connector between height control indicator and suspension control ECU (See page IN-34).
---	--

NG

Repair or replace harness or connector.

OK

Check and replace suspension control ECU.