


Door lock control switch circuit

CIRCUIT DESCRIPTION

Door lock control switch circuit can be checked using DTC check. (Refer to [DI-802](#))

WIRING DIAGRAM

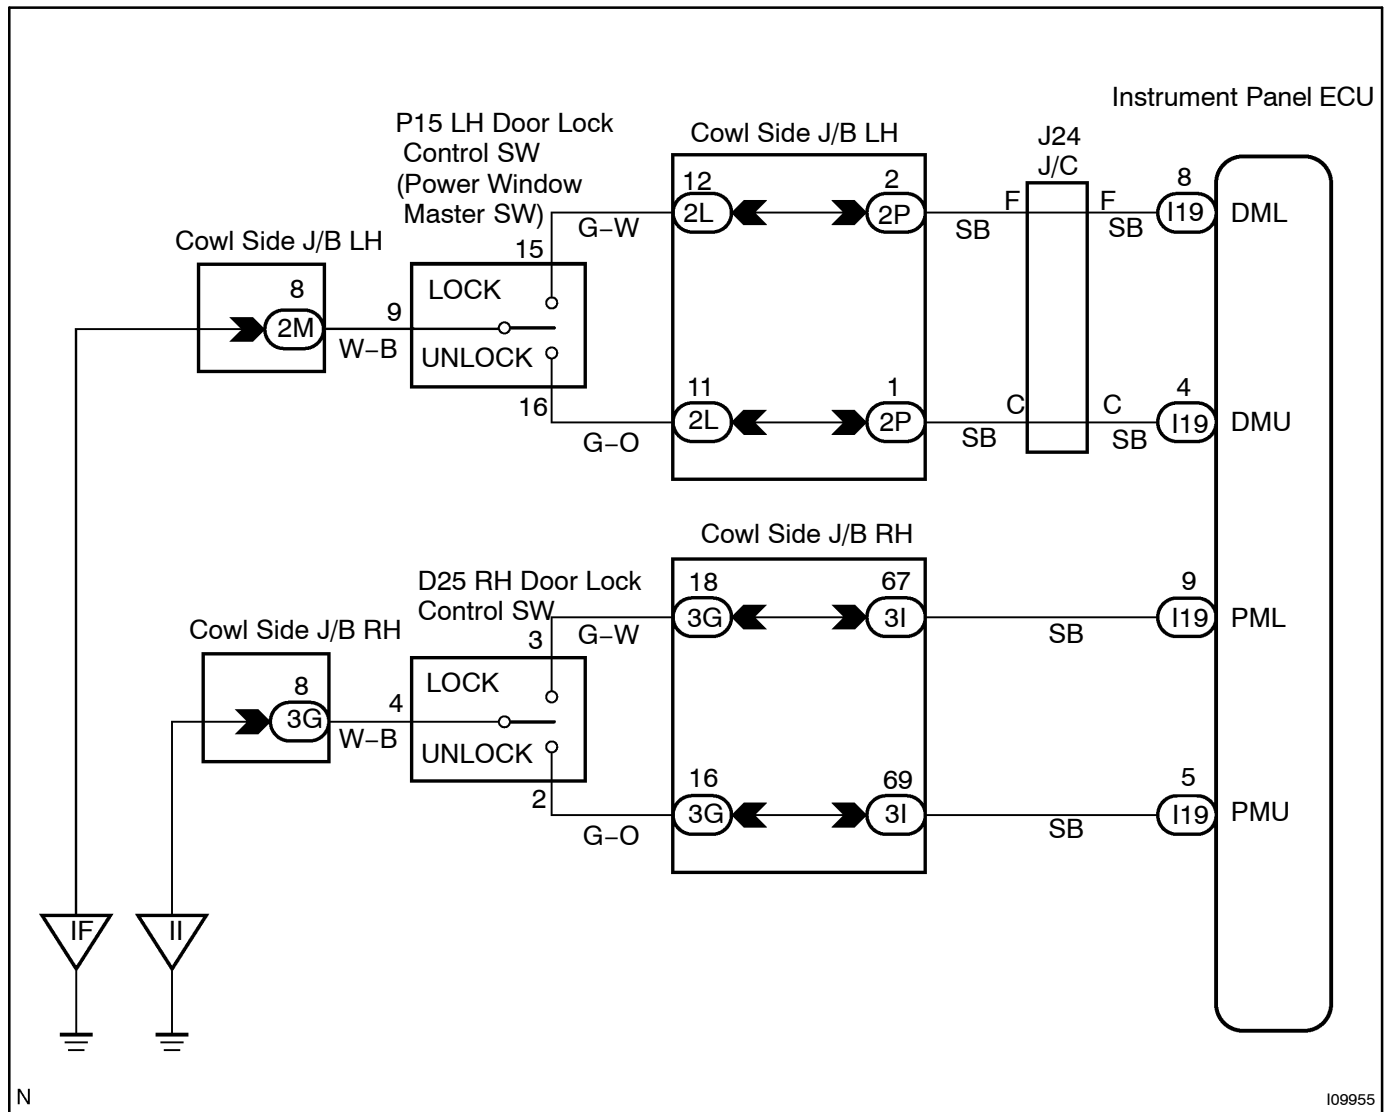

INSPECTION PROCEDURE

1	Check the door lock control switch (See page BE-120).
----------	--

NG**Replace the door lock control switch.****OK**

2	Check wireharness and connector between door lock control switch and Body ECU.
----------	---

NG**Repair or replace wireharness or connector.****OK**

3	Check wireharness and connector between door lock control switch and power window master switch.
----------	---

NG**Repair or replace wireharness or connector.****OK**

**Proceed to next circuit inspection shown on
problem symptoms table
(See page [DI-747](#)).**