


Stop light switch circuit

CIRCUIT DESCRIPTION

The Body ECU is detecting the condition of the stop light switch.

WIRING DIAGRAM

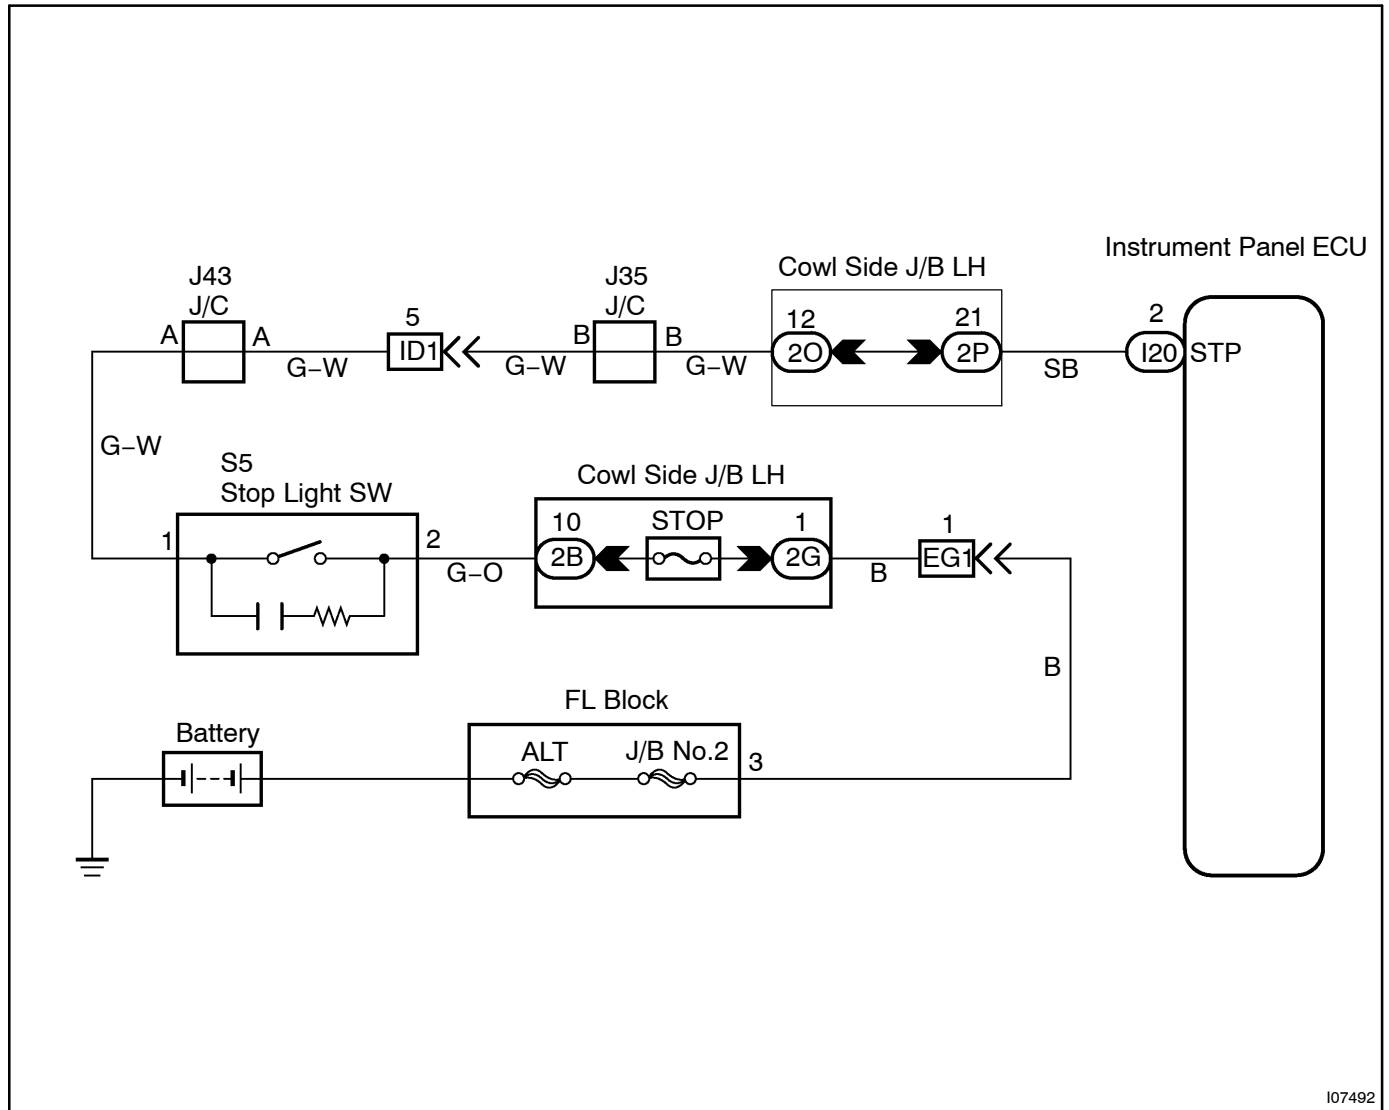

I07492

INSPECTION PROCEDURE

1	Check stop light switch (See page BE-60).
----------	--

NG**Replace the stop light switch.****OK**

2	Check wireharness and connector between stop light switch and Body ECU, battery and stop light switch.
----------	---

NG**Repair or replace wireharness or connector.****OK**

**Proceed to next circuit inspection shown on
problem symptoms table
(See page [DI-747](#)).**