


DTC	B2796/99	No Communication in Immobiliser system
------------	-----------------	---

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
B2796/99	No communication	• Key • Transponder Key Coil • Transponder Key Amplifier • Wire harness • ECM

WIRING DIAGRAM

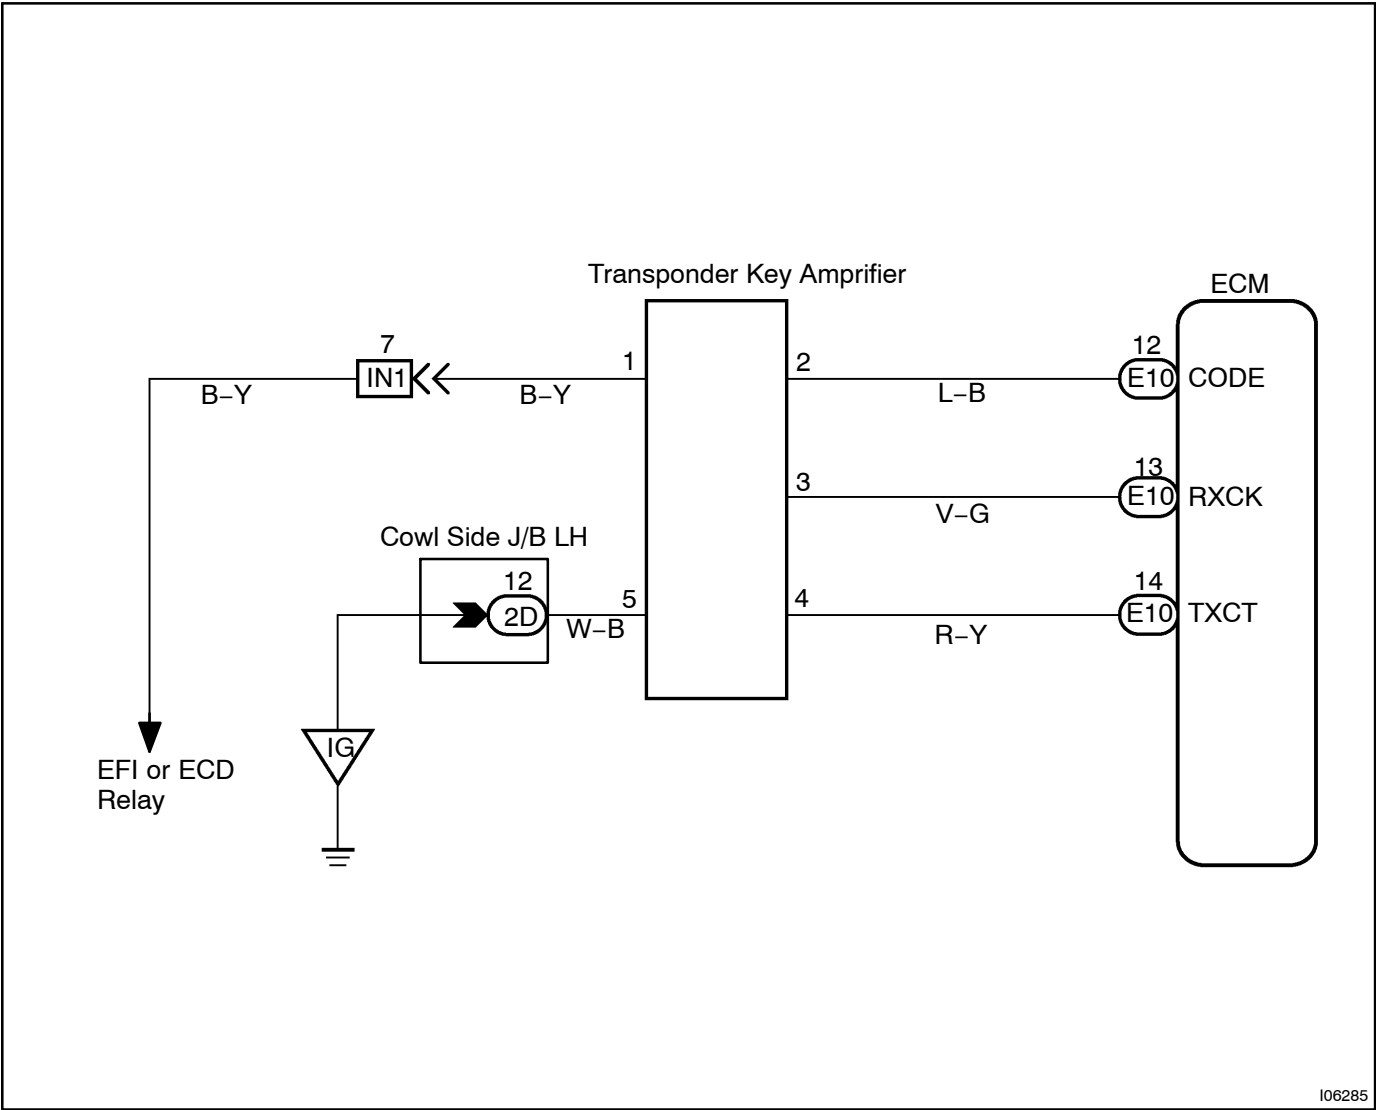

I06285

INSPECTION PROCEDURE

1	Check transponder key coil (See page BE-206).
----------	--

NG**Replace transponder key coil.****OK**

2	Check harness and connector between transponder key amplifier and ECM.
----------	---

NG**Repair or replace harness and connector.****OK**

3	Does it operate normally after replacement of transponder key amplifier?
----------	---

Yes**Replace transponder key amplifier.****No****Replace ECM.**