

DTC	B2798/99	Communication malfunction No.2
------------	-----------------	---------------------------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
B2798/99	Communication error	• Key • Transponder Key Coil • Transponder Key Amplifier • Wire harness • ECM

WIRING DIAGRAM

See page [DI-737](#).

INSPECTION PROCEDURE

1	Check transponder key coil (See page BE-206).
----------	--

NG

Replace transponder key coil.

OK

2	Check harness and connector between transponder key amplifier and ECM.
----------	---

NG

Repair or replace harness and connector.

OK

3	Does the system operate normally after replacement of transponder key amplifier?
----------	---

Yes

Replace transponder key amplifier.

No

Replace ECM.