

## 13. MAP screen display does not appear. (Disc Caution screen does not change)

### INSPECTION PROCEDURE

|   |                                                            |
|---|------------------------------------------------------------|
| 1 | Take appropriate measures according to the caution screen. |
|---|------------------------------------------------------------|

OK

Normal.

NG

|   |                 |
|---|-----------------|
| 2 | Check map DISC. |
|---|-----------------|

NG

Replace the disc.

OK

Replace the navigation ECU.

### CAUTION SCREEN

| CAUTION MESSAGE                                                  | CAUSE                                                           | CORRECTIVE ACTION                                                                                                                                                                      |
|------------------------------------------------------------------|-----------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cover is open.<br>Close it.                                      | The cover of the map disk slot is open.                         | Close the cover,                                                                                                                                                                       |
| No disc is set.<br>Set a map disc.                               | No map disk is inserted.                                        | Insert a proper map disc.                                                                                                                                                              |
| Data cannot be read properly.<br>Check it for scratches or dirt. | Data cannot be read because the map disc is dirty or scratched. | Wipe off dirt on the both disc surface with soft cloth.                                                                                                                                |
| Data cannot be read.<br>Check the correct map disc is set.       | Something other than map disc is inserted.                      | Insert a correct map disc.                                                                                                                                                             |
| Due to high temperature of the player,<br>data cannot be read.   | Pick-up part of the player is heated to a high temperature.     | Stop the vehicle at a shaded cool place and turn the ignition switch OFF.<br>When confirming that the temperature of the navigation ECU has been lowered, turn the ignition switch ON. |
| Data cannot be read.<br>Contact your sales dealer.               | The player cannot read data from the map disc temporarily.      | Turn the ignition switch OFF and ON.*1                                                                                                                                                 |

\*1: If the same caution screen appears again after turning the ignition switch ON, replace the navigation ECU.