

16. Touch switch does not function. (A/C control screen only)

INSPECTION PROCEDURE

- 1 Display check mode (Touch switch, Touch point screen).

NG

Replace the multi-display.

OK

- 2 Check "AVC-LAN communication circuit". (See page [DI-913](#))

NG

Replace or repair AVC-LAN circuit.

OK

- 3 Check wire harness between gateway ECU and A/C amplifier (Center ECU) (See page [IN-34](#))

NG

Reapair or replace wire harness and connector

OK

Check and replace A/C amplifier (Center ECU).