

## DIAGNOSTIC TROUBLE CODE CHART

If a malfunction code is displayed during the DTC check, check the circuit listed for that code in the table below (Proceed to the page given for that circuit.).

| DTC No.<br>(See Page) | Detection Item                                 | Trouble Area                                                                                                                                             | SRS<br>Warning Light |
|-----------------------|------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|
| B0100/13<br>(DI-505)  | Short in D squib circuit                       | <ul style="list-style-type: none"> <li>Steering wheel pad (squib)</li> <li>Spiral cable</li> <li>Airbag sensor assembly</li> <li>Wire harness</li> </ul> | ON                   |
| B0101/14<br>(DI-511)  | Open in D squib circuit                        | <ul style="list-style-type: none"> <li>Steering wheel pad (squib)</li> <li>Spiral cable</li> <li>Airbag sensor assembly</li> <li>Wire harness</li> </ul> | ON                   |
| B0102/11<br>(DI-516)  | Short in D squib circuit (to ground)           | <ul style="list-style-type: none"> <li>Steering wheel pad (squib)</li> <li>Spiral cable</li> <li>Airbag sensor assembly</li> <li>Wire harness</li> </ul> | ON                   |
| B0103/12<br>(DI-521)  | Short in D squib circuit (to B+)               | <ul style="list-style-type: none"> <li>Steering wheel pad (squib)</li> <li>Spiral cable</li> <li>Airbag sensor assembly</li> <li>Wire harness</li> </ul> | ON                   |
| B0105/53<br>(DI-526)  | Short in P squib circuit                       | <ul style="list-style-type: none"> <li>Front passenger airbag assembly (squib)</li> <li>Airbag sensor assembly</li> <li>Wire harness</li> </ul>          | ON                   |
| B0106/54<br>(DI-530)  | Open in P squib circuit                        | <ul style="list-style-type: none"> <li>Front passenger airbag assembly (squib)</li> <li>Airbag sensor assembly</li> <li>Wire harness</li> </ul>          | ON                   |
| B0107/51<br>(DI-533)  | Short in P squib circuit (to ground)           | <ul style="list-style-type: none"> <li>Front passenger airbag assembly (squib)</li> <li>Airbag sensor assembly</li> <li>Wire harness</li> </ul>          | ON                   |
| B0108/52<br>(DI-536)  | Short in P squib circuit (to B+)               | <ul style="list-style-type: none"> <li>Front passenger airbag assembly (squib)</li> <li>Airbag sensor assembly</li> <li>Wire harness</li> </ul>          | ON                   |
| B0130/63<br>(DI-539)  | Short in P/T squib (RH) circuit                | <ul style="list-style-type: none"> <li>Seat belt pretensioner RH (squib)</li> <li>Airbag sensor assembly</li> <li>Wire harness</li> </ul>                | Blink                |
| B0131/64<br>(DI-544)  | Open in P/T squib (RH) circuit                 | <ul style="list-style-type: none"> <li>Seat belt pretensioner RH (squib)</li> <li>Airbag sensor assembly</li> <li>Wire harness</li> </ul>                | Blink                |
| B0132/61<br>(DI-548)  | Short in P/T squib (RH) circuit<br>(to ground) | <ul style="list-style-type: none"> <li>Seat belt pretensioner RH (squib)</li> <li>Airbag sensor assembly</li> <li>Wire harness</li> </ul>                | Blink                |
| B0133/62<br>(DI-552)  | Short in P/T squib (RH) circuit<br>(to B+)     | <ul style="list-style-type: none"> <li>Seat belt pretensioner RH (squib)</li> <li>Airbag sensor assembly</li> <li>Wire harness</li> </ul>                | Blink                |
| B0135/73<br>(DI-556)  | Short in P/T squib (LH) circuit                | <ul style="list-style-type: none"> <li>Seat belt pretensioner LH (squib)</li> <li>Airbag sensor assembly</li> <li>Wire harness</li> </ul>                | Blink                |
| B0136/74<br>(DI-561)  | Open in P/T squib (LH) circuit                 | <ul style="list-style-type: none"> <li>Seat belt pretensioner LH (squib)</li> <li>Airbag sensor assembly</li> <li>Wire harness</li> </ul>                | Blink                |

## DIAGNOSTICS – SUPPLEMENTAL RESTRAINT SYSTEM

| DTC No.<br>(See Page)          | Detection Item                                 | Trouble Area                                                                                                                                    | SRS<br>Warning Light |
|--------------------------------|------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|
| B0137/71<br>(DI-565)           | Short in P/T squib (LH) circuit<br>(to ground) | <ul style="list-style-type: none"> <li>• Seat belt pretensioner LH (squib)</li> <li>• Airbag sensor assembly</li> <li>• Wire harness</li> </ul> | Blink                |
| B0138/72<br>(DI-569)           | Short in P/T squib (LH) circuit<br>(to B+)     | <ul style="list-style-type: none"> <li>• Seat belt pretensioner LH (squib)</li> <li>• Airbag sensor assembly</li> <li>• Wire harness</li> </ul> | Blink                |
| B1100/31<br>(DI-573)           | Airbag sensor assembly malfunction             | Airbag sensor assembly                                                                                                                          | ON                   |
| B1156/B1157/<br>15<br>(DI-575) | Front airbag sensor (RH) malfunction           | <ul style="list-style-type: none"> <li>• Front airbag sensor (RH)</li> <li>• Airbag sensor assembly</li> <li>• Wire harness</li> </ul>          | ON                   |
| B1158/B1159/<br>16<br>(DI-585) | Front airbag sensor (LH) malfunction           | <ul style="list-style-type: none"> <li>• Front airbag sensor (LH)</li> <li>• Airbag sensor assembly</li> <li>• Wire harness</li> </ul>          | ON                   |
| Normal<br>(DI-595)             | System normal                                  | –                                                                                                                                               | OFF                  |
|                                | Voltage source drop                            | <ul style="list-style-type: none"> <li>• Battery</li> <li>• Airbag sensor assembly</li> </ul>                                                   | ON                   |

## HINT:

- When the SRS warning light remains lit up and the DTC is the normal code, this means a voltage source drops.  
This malfunction is not stored in memory by the airbag sensor assembly and if the power source voltage returns to normal, the SRS warning light will automatically go out.
- When 2 or more codes are indicated, the codes will be displayed in numeral order starting from the lowest numbered code.
- If a code not listed on the chart is displayed, the airbag sensor assembly is faulty.