

INSTALLATION

NOTICE:

Never use airbag parts from another vehicle. When replacing parts, replace them with new parts.

1. **INSTALL FRONT PASSENGER AIRBAG ASSEMBLY**
 - (a) Install the front passenger airbag assembly to the instrument panel with the 4 nuts.
Torque: 6.0 N·m (61 kgf·cm, 53 in·lbf)
 - (b) Install the 2 airbag straps and bolts to front passenger airbag assembly.
Torque: 6.0 N·m (61 kgf·cm, 53 in·lbf)


CAUTION:

- Make sure that no foreign objects are trapped between the airbag bag and the module.
- Do not damage the strap when installing the module.

NOTICE:

If the front passenger airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front passenger airbag assembly with a new one.

2. **INSTALL CENTER BRACKET**
3. **INSTALL NO.2 SIDE DEFROSTER NOZZLE DUCT**
4. **INSTALL NO.5 HEATER TO REGISTER DUCT**
5. **INSTALL DEFROSTER NOZZLE ASSEMBLY**

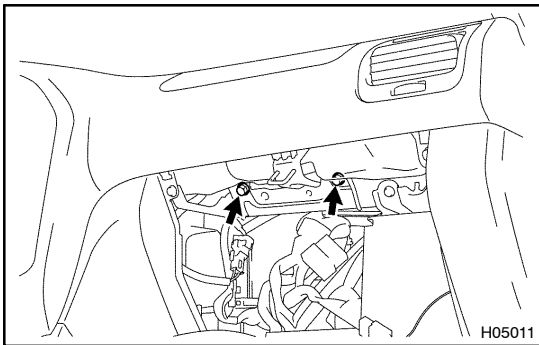


6. **INSTALL INSTRUMENT PANEL**
(See page [BO-105](#))

Install the 2 bolts to instrument panel reinforcement.


Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)

NOTICE:

- Make sure the front passenger airbag assembly is installed with the specified torque.
- When installing the instrument panel, take care that the airbag wire harness does not interfere with other parts and is not pinched between other parts.
- When installing the instrument panel box, carefully pull out the airbag wire harness from the glove compartment upper hole.

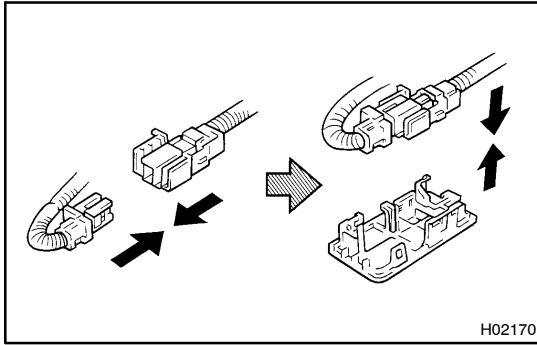**7. CONNECT AIRBAG CONNECTOR**

- (a) Connect the airbag connector.

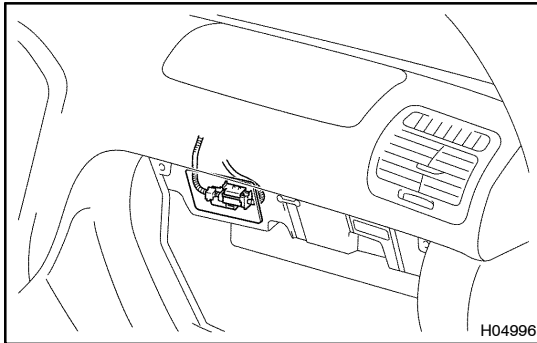

- (b) Set the connector on the No.1 under cover.
(c) Install the No.1 under cover to the lower No.2 finish panel.
(d) Install the glove compartment door.