


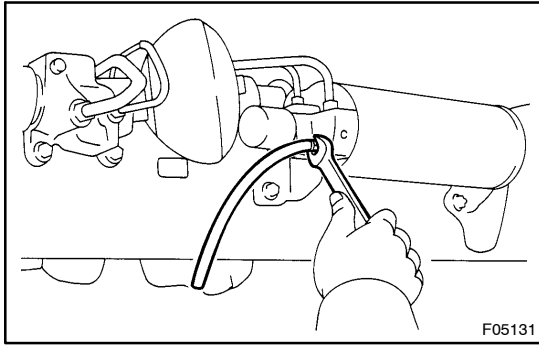

REMOVAL


1. DRAIN SUSPENSION FLUID AHC

- (a) Connect the hose to the bleeder plug for height control accumulator and loosen the bleeder plug.
- (b) After the fluid pressure has dropped and oil has drained out, tighten the bleeder plug and remove the hose.

Torque: 6.9 N·m (70 kgf·cm, 61 in·lbf)

2. REMOVE FRONT LH DAMPING FORCE CONTROL ACTUATOR (See page SA-219)

3. DISCONNECT CONNECTOR

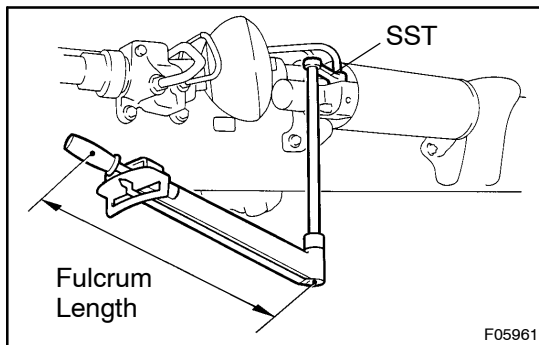


4. REMOVE HEIGHT CONTROL ACCUMULATOR

- (a) Using SST, disconnect the inlet fluid line from the height control accumulator.

SST 09023-38400

Torque: 30 N·m (310 kgf·cm, 22 ft·lbf)

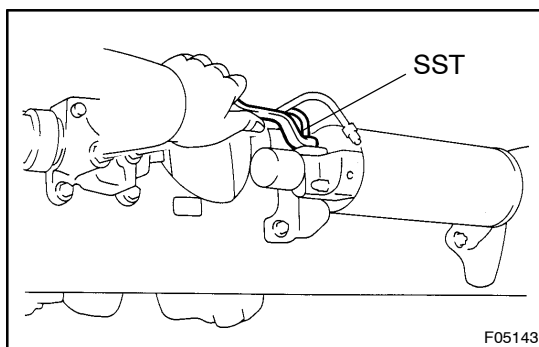

- (b) Using SST, disconnect the outlet fluid line from the height control accumulator.

SST 09751-36011

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

- (c) Remove the nut, 3 bolts and height control accumulator.

Torque: 29 N·m (300 kgf·cm, 22 ft·lbf)