


REMOVAL

1. SUPPORT REAR AXLE HOUSING WITH JACK

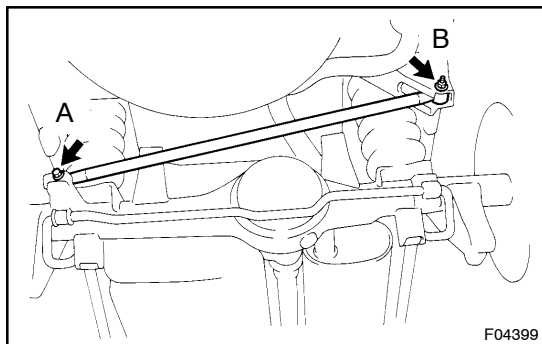

2. REMOVE LATERAL CONTROL ROD

Remove the 2 bolts, nut, washer and lateral control rod.

Torque:

A: 149 N·m (1,520 kgf·cm, 110 ft·lbf)

B: 150 N·m (1,530 kgf·cm, 111 ft·lbf)

HINT:

At the time of installation, please refer to the following items.

- Replace the used nut with a new one.
- After stabilizing the suspension, torque the nut and bolt.