


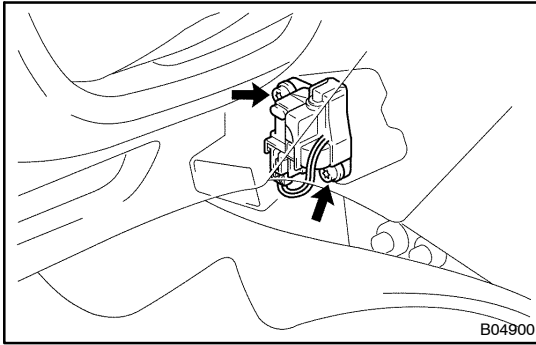


INSPECTION

1. DISCONNECT FUEL PUMP INERTIA SWITCH CONNECTOR

Take off the front floor carpet, and disconnect the connector.

2. REMOVE FUEL PUMP INERTIA SWITCH

Using a torx driver (T30), remove the 2 bolts and switch.

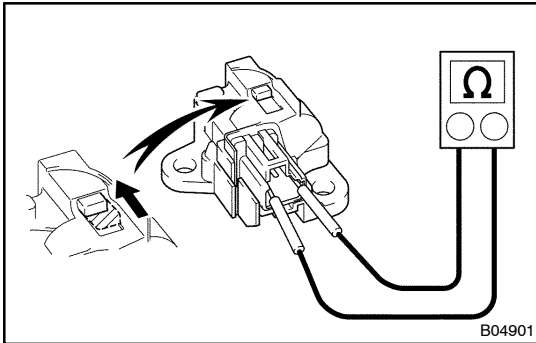

3. INSPECT FUEL PUMP INERTIA SWITCH

- (a) Check that there is no continuity between terminals with the reset switch OFF.
- (b) Check that there is continuity between terminals with the reset switch ON.

If operation is not as specified, replace the switch.

4. REINSTALL FUEL PUMP INERTIA SWITCH

NOTICE:

Check that the reset switch ON position.

5. RECONNECT FUEL PUMP INERTIA SWITCH CONNECTOR

6. CHECK THAT START ENGINE