


G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

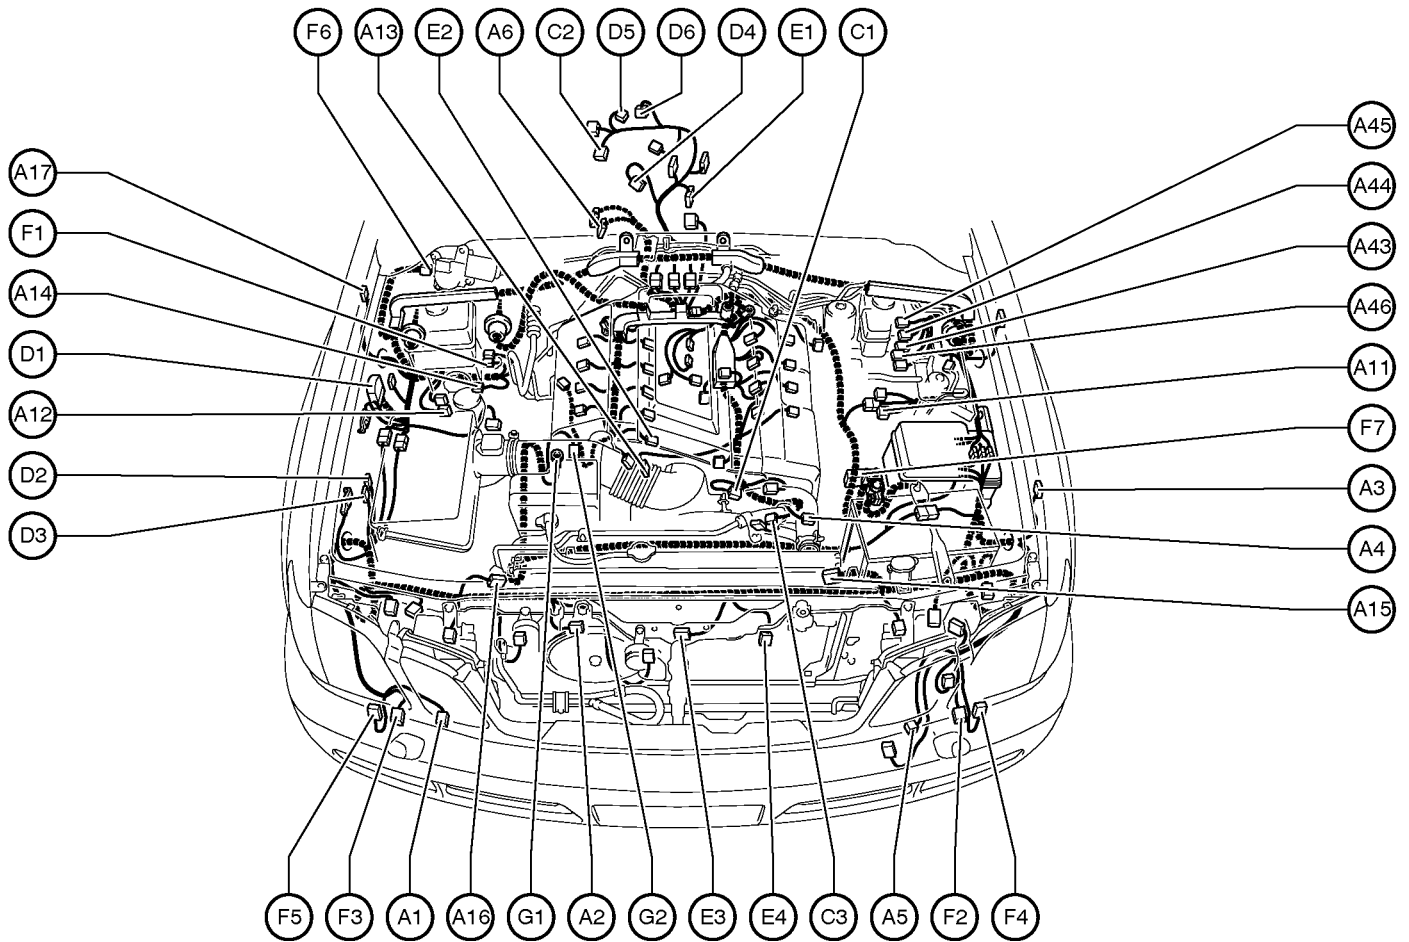

A 1 A/C Ambient Temp. Sensor
 A 2 A/C Condenser Fan Motor
 A 3 A/C Condenser Fan Relay
 A 4 A/C Magnetic Clutch and Lock Sensor
 A 5 A/C Triple Pressure SW
 (A/C Dual and Single Pressure SW)

A 6 A/T Oil Temp. Sensor
 A 11 ABS Speed Sensor Front LH
 A 12 ABS Speed Sensor Front RH
 A 13 Accel Position Sensor
 A 14 AHC Pump Motor
 A 15 Airbag Sensor Front LH
 A 16 Airbag Sensor Front RH
 A 17 Auto Antenna Motor
 A 43 ABS & BA & TRAC & VSC Actuator
 A 44 ABS & BA & TRAC & VSC Actuator
 A 45 ABS & BA & TRAC & VSC Actuator
 A 46 ABS & BA & TRAC & VSC Actuator

C 1 Camshaft Position Sensor
 C 2 Center Diff. Lock Control Motor
 C 3 Crankshaft Position Sensor


D 1 Data Link Connector 1
 D 2 Daytime Running Light Relay No.3
 D 3 Daytime Running Light Relay No.3
 D 4 Detection SW (Center Diff. Lock)
 D 5 Detection SW (Transfer L Position)
 D 6 Detection SW (Transfer Neutral Position)

E 1 Electronically Controlled Transmission Solenoid
 E 2 Engine Coolant Temp. Sensor
 E 3 Engine Hood Courtesy SW
 E 4 Exhaust Gas Sensor

F 1 Fluid Pressure Sensor
 F 2 Front Fog Light LH
 F 3 Front Fog Light RH
 F 4 Front Turn Signal Light LH
 F 5 Front Turn Signal Light RH
 F 6 Front Wiper Motor
 F 7 Fusible Link Block

G 1 Generator
 G 2 Generator

Position of Parts in Engine Compartment

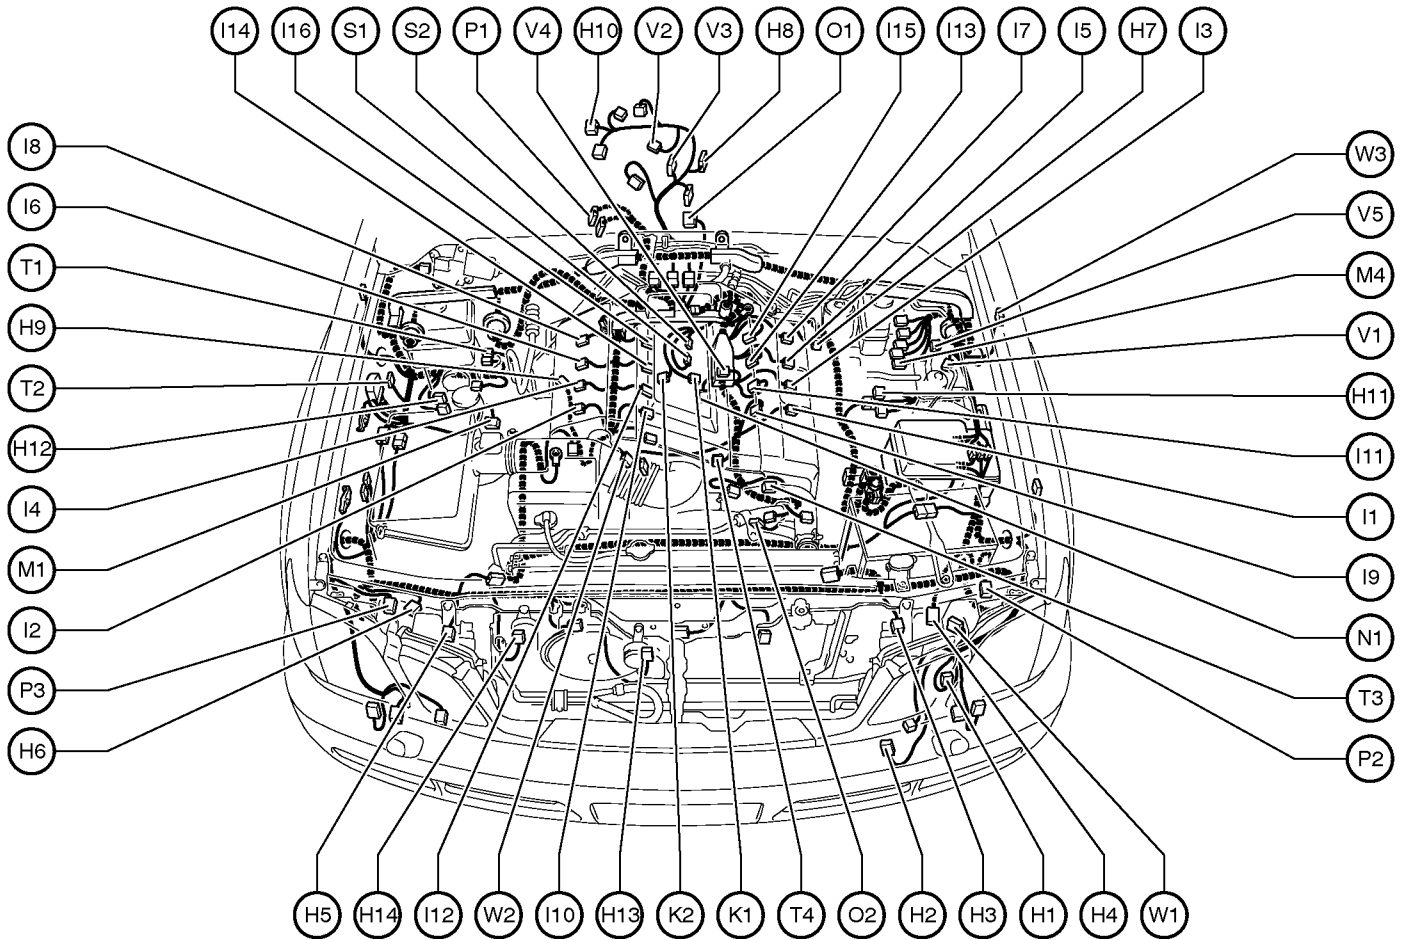

H 1 Headlight Cleaner Control Relay

H 2 Headlight Cleaner Motor

H 3 Headlight LH (High)

H 4 Headlight LH (Low)

H 5 Headlight RH (High)

H 6 Headlight RH (Low)

H 7 Heated Oxygen Sensor (Bank 1 Sensor 1)

H 8 Heated Oxygen Sensor (Bank 1 Sensor 2)

H 9 Heated Oxygen Sensor (Bank 2 Sensor 1)

H10 Heated Oxygen Sensor (Bank 2 Sensor 2)

H11 Height Control Sensor Front LH

H12 Height Control Sensor Front RH

H13 Horn LH

H14 Horn RH

I 1 Ignition Coil and Igniter No.1

I 2 Ignition Coil and Igniter No.2

I 3 Ignition Coil and Igniter No.3

I 4 Ignition Coil and Igniter No.4

I 5 Ignition Coil and Igniter No.5

I 6 Ignition Coil and Igniter No.6

I 7 Ignition Coil and Igniter No.7

I 8 Ignition Coil and Igniter No.8

I 9 Injector No.1

I 10 Injector No.2

I 11 Injector No.3

I 12 Injector No.4

I 13 Injector No.5

I 14 Injector No.6

I 15 Injector No.7

I 16 Injector No.8

K 1 Knock Sensor 1

K 2 Knock Sensor 2

M 1 Mass Air Flow Meter

M 4 Master Cylinder Pressure Sensor

N 1 Noise Filter (Ignition)

O 1 O/D Direct Clutch Speed Sensor

O 2 Oil Pressure Sender

P 1 Park/Neutral Position SW,A/T Indicator Light SW and Back-Up Light SW

P 2 Parking Light and Side Marker Light LH

P 3 Parking Light and Side Marker Light RH

S 1 Starter

S 2 Starter

T 1 Temp. Sensor (AHC)

T 2 Theft Deterrent Horn

T 3 Throttle Control Motor

T 4 Throttle Position Sensor

V 1 Vapor Pressure Sensor

V 2 Vehicle Speed Sensor (Combination Meter)

V 3 Vehicle Speed Sensor

(Electronically Controlled Transmission)

V 4 VSV (EVAP)

V 5 VSV (Vapor Pressure Sensor)


W 1 Washer Motor

W 2 Water Temp. Sender

W 3 Wireless Door Lock Buzzer

G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

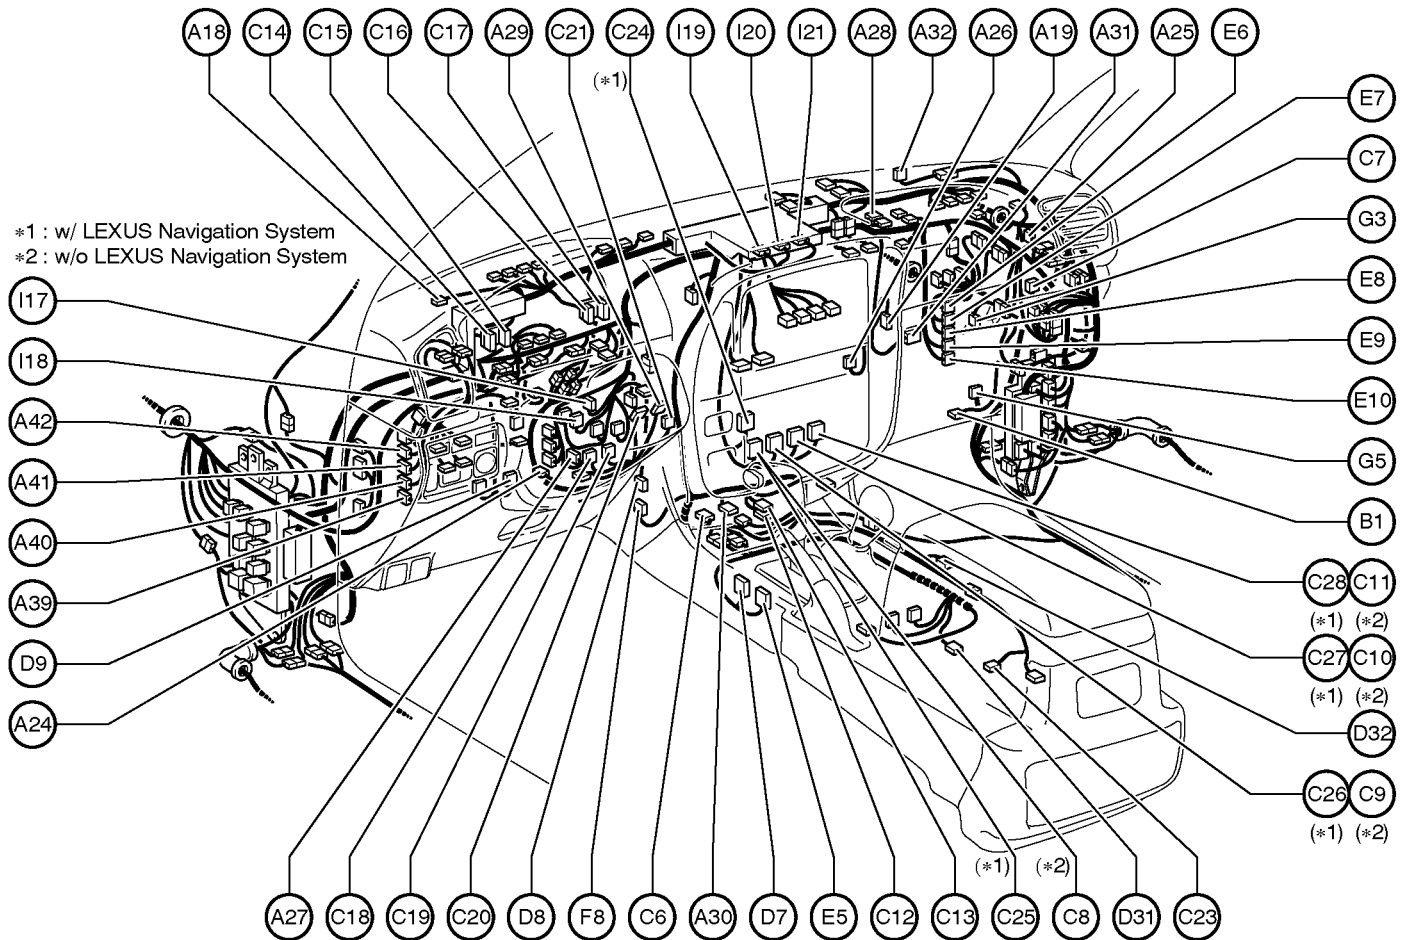

A 18 A/C Solar Sensor
 A 19 A/C Thermistor
 A 24 AHC Main Relay
 A 25 Air Inlet Control Servo Motor
 A 26 Air Mix Control Servo Motor
 A 27 Air Vent Mode Control Servo Motor
 A 28 Airbag Squib (Front Passenger Airbag Assembly)
 A 29 Airbag Squib (Steering Wheel Pad)
 A 30 Ashtray Illumination
 A 31 Auto Antenna Control Relay
 A 32 Automatic Light Control Sensor
 A 39 ABS & BA & TRAC & VSC ECU
 A 40 ABS & BA & TRAC & VSC ECU
 A 41 ABS & BA & TRAC & VSC ECU
 A 42 ABS & BA & TRAC & VSC ECU

B 1 Blower Motor Controller

C 6 Center Airbag Sensor Assembly
 C 7 Center Diff. Lock Control Relay
 C 8 Center ECU
 C 9 Center ECU
 C 10 Center ECU
 C 11 Center ECU
 C 12 Cigarette Lighter
 C 13 Cigarette Lighter Illumination
 C 14 Combination Meter
 C 15 Combination Meter
 C 16 Combination Meter
 C 17 Combination Meter
 C 18 Combination SW
 C 19 Combination SW
 C 20 Combination SW

C 21 Combination SW
 C 23 Cellular Phone (Hand Set)
 C 24 Center ECU
 C 25 Center ECU
 C 26 Center ECU
 C 27 Center ECU
 C 28 Center ECU

D 7 Damping Mode Select SW and Height Control SW
 D 8 Data Link Connector 3
 D 9 Daytime Running Light Relay (Main)
 D 31 Deceleration Sensor
 D 32 DVD Automatic Changer


E 5 Electronically Controlled Transmission Pattern Select SW
 E 6 Engine Control Module
 E 7 Engine Control Module
 E 8 Engine Control Module
 E 9 Engine Control Module
 E 10 Engine Control Module

F 8 Fuel Control SW

G 3 Glove Box Light
 G 5 Gateway ECU

I 17 Ignition Key Cylinder Light
 I 18 Ignition SW
 I 19 Instrument ECU
 I 20 Instrument ECU
 I 21 Instrument ECU

Position of Parts in Instrument Panel

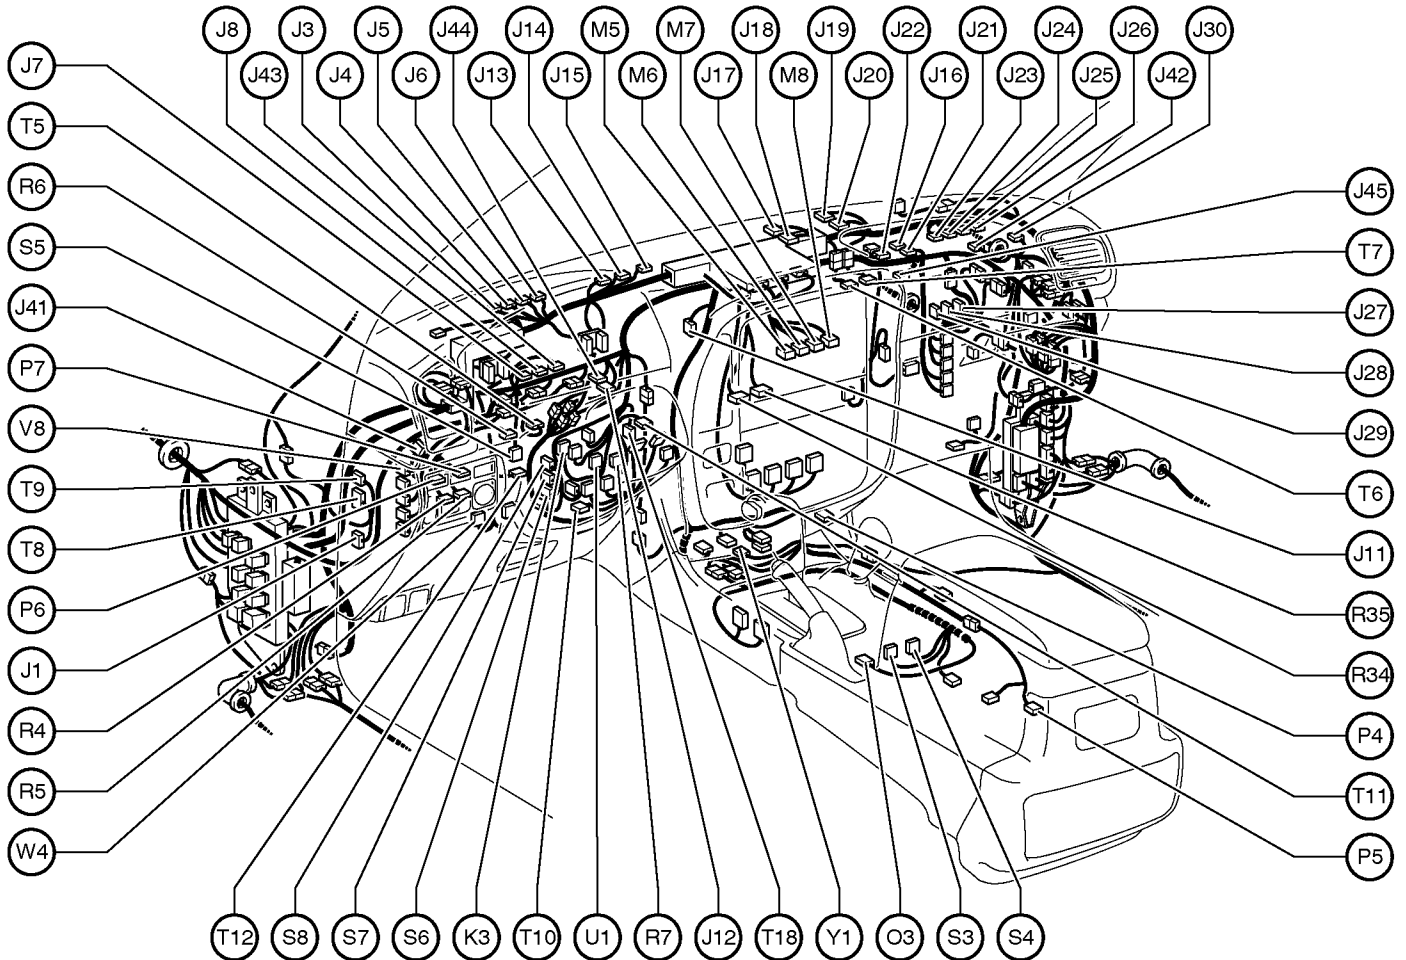


- J 1 Junction Connector
 J 3 Junction Connector
 J 4 Junction Connector
 J 5 Junction Connector
 J 6 Junction Connector
 J 7 Junction Connector
 J 8 Junction Connector
 J 11 Junction Connector
 J 12 Junction Connector
 J 13 Junction Connector
 J 14 Junction Connector
 J 15 Junction Connector
 J 16 Junction Connector
 J 17 Junction Connector
 J 18 Junction Connector
 J 19 Junction Connector
 J 20 Junction Connector
 J 21 Junction Connector
 J 22 Junction Connector
 J 23 Junction Connector
 J 24 Junction Connector
 J 25 Junction Connector
 J 26 Junction Connector
 J 27 Junction Connector
 J 28 Junction Connector
 J 29 Junction Connector
 J 30 Junction Connector
 J 41 Junction Connector
 J 42 Junction Connector
 J 43 Junction Connector
 J 44 Junction Connector
 J 45 Junction Connector
 K 3 Key Interlock Solenoid
 M 5 Multi-Display
 M 6 Multi-Display
 M 7 Multi-Display
 M 8 Multi-Display

- O 3 O/D Main SW and Shift Lock Control ECU
 P 4 Power Outlet (Front)
 P 5 Power Outlet (Rear Console Box)
 P 6 Power Quarter Window SW LH
 P 7 Power Quarter Window SW RH
 R 4 Remote Control Mirror SW
 R 5 Remote Control Mirror SW
 R 6 Rheostat
 R 7 Room Temp. Sensor (Front)
 R 34 Radio and Player
 R 35 Radio and Player
 S 3 Seat Heater SW (Driver's Seat)
 S 4 Seat Heater SW (Front Passenger's Seat)
 S 5 Stop Light SW
 S 6 Suspension Control ECU
 S 7 Suspension Control ECU
 S 8 Suspension Control ECU
 T 5 Telescopic Motor
 T 6 Theft Deterrent ECU
 T 7 Theft Deterrent ECU
 T 8 Tilt and Telescopic ECU
 T 9 Tilt and Telescopic ECU
 T 10 Tilt Motor
 T 11 Transponder Key Amplifier
 T 12 Turn Signal Flasher
 T 18 Telephone Microphone
 U 1 Unlock Warning SW
 V 8 VSC Warning Buzzer
 W 4 Wireless Door Lock ECU
 Y 1 Yaw Rate Sensor


G ELECTRICAL WIRING ROUTING

Position of Parts in Body

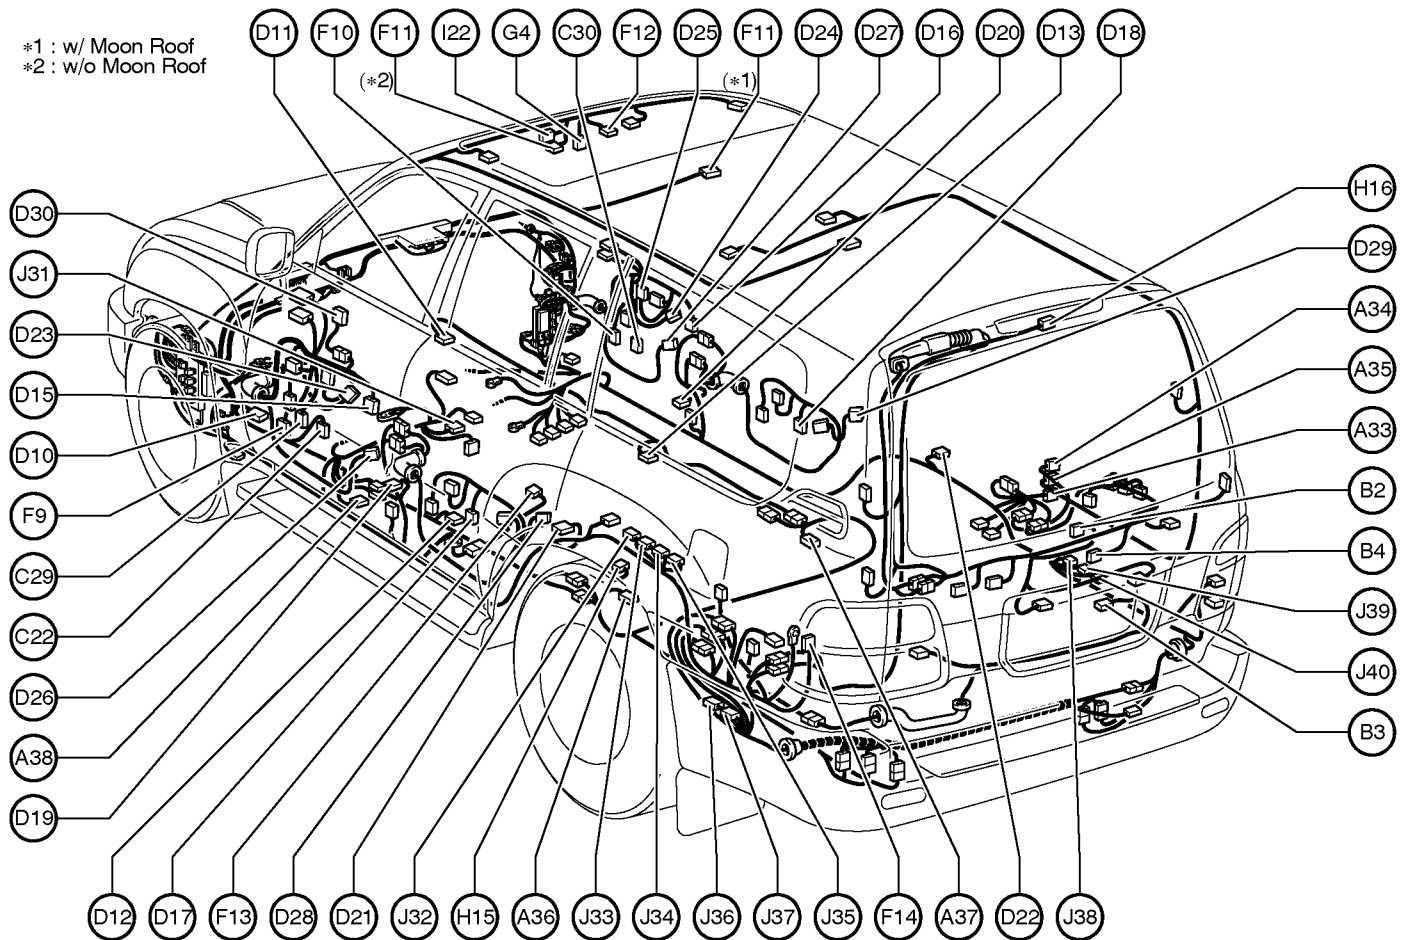

- *1 : w/ Moon Roof
*2 : w/o Moon Roof
- | | |
|--|---|
| A33 A/C Amplifier | D27 Door Lock Motor and Door Unlock Detection SW Front RH |
| A34 A/C Amplifier | D28 Door Lock Motor and Door Unlock Detection SW Rear LH |
| A35 A/C Amplifier | D29 Door Lock Motor and Door Unlock Detection SW Rear RH |
| A36 ABS Speed Sensor Rear LH | D30 Driving Position Memory SW |
| A37 ABS Speed Sensor Rear RH | F 9 Front Door Speaker LH |
| A38 Accumulator Solenoid | F10 Front Door Speaker RH |
| B 2 Back Door Courtesy SW | F11 Front Interior light and Rear Personal Light |
| B 3 Back Door Key Lock and Unlock SW | F12 Front Personal Light |
| B 4 Back Door Lock Motor and Back Door Unlock Detection SW | F13 Fuel Pump and Sender |
| C22 Control Valve Assembly | F14 Fuel Pump Control ECU |
| C29 Center Speaker LH | G 4 Garage Door Opener |
| C30 Center Speaker RH | H15 Height Control Sensor Rear |
| D10 Damping Force Control Actuator Front LH | H16 High Mounted Stop Light |
| D11 Damping Force Control Actuator Front RH | I 22 Inner Mirror |
| D12 Damping Force Control Actuator Rear LH | J 31 Junction Connector |
| D13 Damping Force Control Actuator Rear RH | J 32 Junction Connector |
| D15 Door Courtesy Light Front LH | J 33 Junction Connector |
| D16 Door Courtesy Light Front RH | J 34 Junction Connector |
| D17 Door Courtesy Light Rear LH | J 35 Junction Connector |
| D18 Door Courtesy Light Rear RH | J 36 Junction Connector |
| D19 Door Courtesy SW Front LH | J 37 Junction Connector |
| D20 Door Courtesy SW Front RH | J 38 Junction Connector |
| D21 Door Courtesy SW Rear LH | J 39 Junction Connector |
| D22 Door Courtesy SW Rear RH | J 40 Junction Connector |
| D23 Door Key Lock and Unlock SW LH | |
| D24 Door Key Lock and Unlock SW RH | |
| D25 Door Lock Control SW RH | |
| D26 Door Lock Motor and Door Unlock Detection SW Front LH | |

Position of Parts in Body

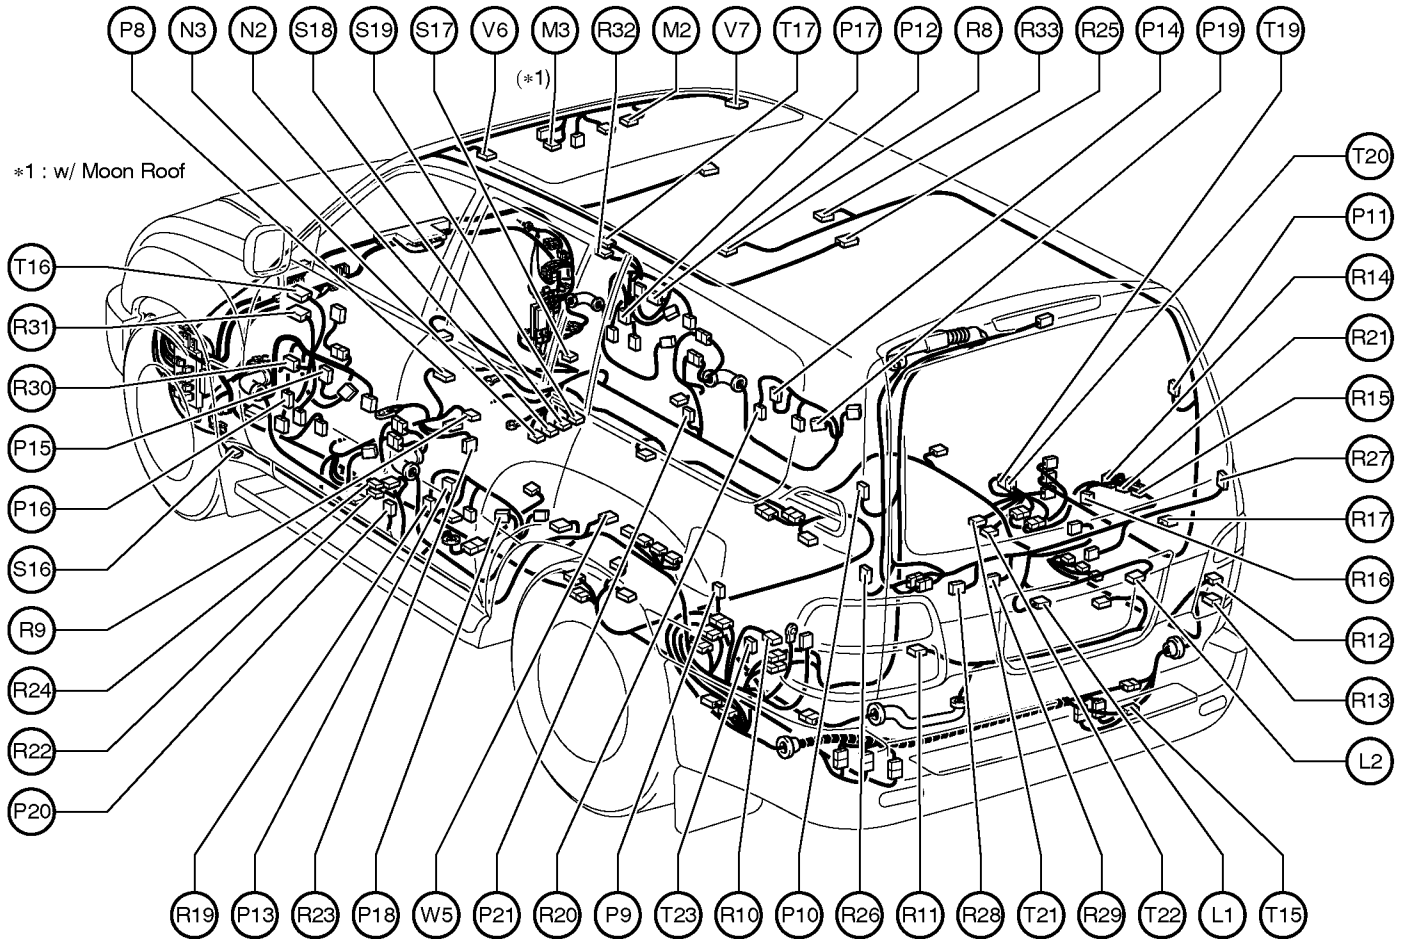

L 1 License Plate Light LH
L 2 License Plate Light RH

M 2 Moon Roof Control ECU
M 3 Moon Roof Control SW

N 2 Navigation ECU
N 3 Navigation ECU

P 8 Parking Brake SW
P 9 Power Outlet (Luggage Compartment)
P10 Power Vent Window Motor LH
P11 Power Vent Window Motor RH
P12 Power Window Control SW Front RH
P13 Power Window Control SW Rear LH
P14 Power Window Control SW Rear RH
P15 Power Window Master SW
P16 Power Window Motor Front LH
P17 Power Window Motor Front RH
P18 Power Window Motor Rear LH
P19 Power Window Motor Rear RH
P20 Pretensioner LH
P21 Pretensioner RH

R 8 Rear A/C Control SW
R 9 Rear Air Mix Control Servo Motor
R10 Rear Combination Light LH
R11 Rear Combination Light LH
R12 Rear Combination Light RH
R13 Rear Combination Light RH
R14 Rear Cooler Blower Motor
R15 Rear Cooler Magnetic Valve
R16 Rear Cooler Power Transistor
R17 Rear Cooler Relay

R19 Rear Door Speaker LH
R20 Rear Door Speaker RH
R21 Rear Evaporator Temp. Sensor
R22 Rear Heater Blower Motor
R23 Rear Heater Power Transistor
R24 Rear Inlet Air Temp. Sensor
R25 Rear Interior Light
R26 Rear Window Defogger
R27 Rear Window Defogger
R28 Rear Wiper Motor
R29 Rear Wiper Relay
R30 Remote Control Mirror ECU
R31 Remote Control Mirror LH
R32 Remote Control Mirror RH
R33 Room Temp. Sensor (Rear)

S16 Side Step Light LH
S17 Side Step Light RH
S18 Stereo Component Amplifier
S19 Stereo Component Amplifier


T15 Trailer Socket
T16 Tweeter LH
T17 Tweeter RH
T19 Telephone Transceiver and Speaker Relay
T20 Telephone Transceiver and Speaker Relay
T21 Telephone Transceiver and Speaker Relay
T22 Telephone Transceiver and Speaker Relay
T23 Towing Converter Relay

V 6 Vanity Light LH
V 7 Vanity Light RH

W 5 Woofer (Speaker)

G ELECTRICAL WIRING ROUTING

Position of Parts in Seat

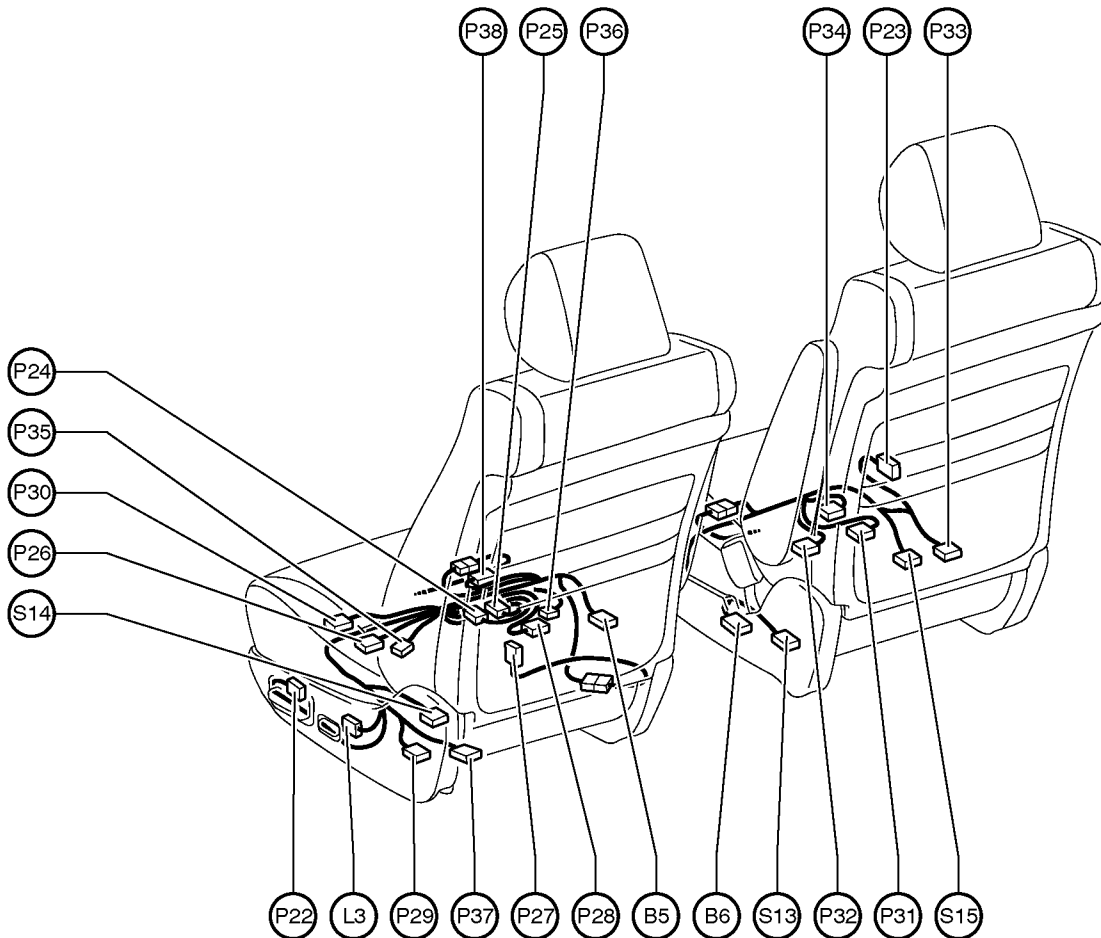

B 5 Buckle SW LH
B 6 Buckle SW RH

L 3 Lumbar Support Control SW (Driver's Seat)

P22 Power Seat Control SW (Driver's Seat)
P23 Power Seat Control SW (Front Passenger's Seat)
P24 Power Seat ECU
P25 Power Seat ECU
P26 Power Seat Motor (Driver's Seat Front Vertical Control)
P27 Power Seat Motor
(Driver's Seat Lumbar Support Control)
P28 Power Seat Motor (Driver's Seat Rear Vertical Control)
P29 Power Seat Motor (Driver's Seat Reclining Control)
P30 Power Seat Motor (Driver's Seat Slide Control)
P31 Power Seat Motor
(Front Passenger's Seat Front Vertical Control)

P32 Power Seat Motor
(Front Passenger's Seat Rear Vertical Control)
P33 Power Seat Motor
(Front Passenger's Seat Reclining Control)
P34 Power Seat Motor
(Front Passenger's Seat Slide Control)
P35 Power Seat Position Sensor
(Driver's Seat Front Vertical Control)
P36 Power Seat Position Sensor
(Driver's Seat Rear Vertical Control)
P37 Power Seat Position Sensor
(Driver's Seat Reclining Control)
P38 Power Seat Position Sensor (Driver's Seat Slide Control)
S13 Seat Belt Warning Occupant Detection Sensor
S14 Seat Heater (Driver's Seat)
S15 Seat Heater (Front Passenger's Seat)

