



J POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

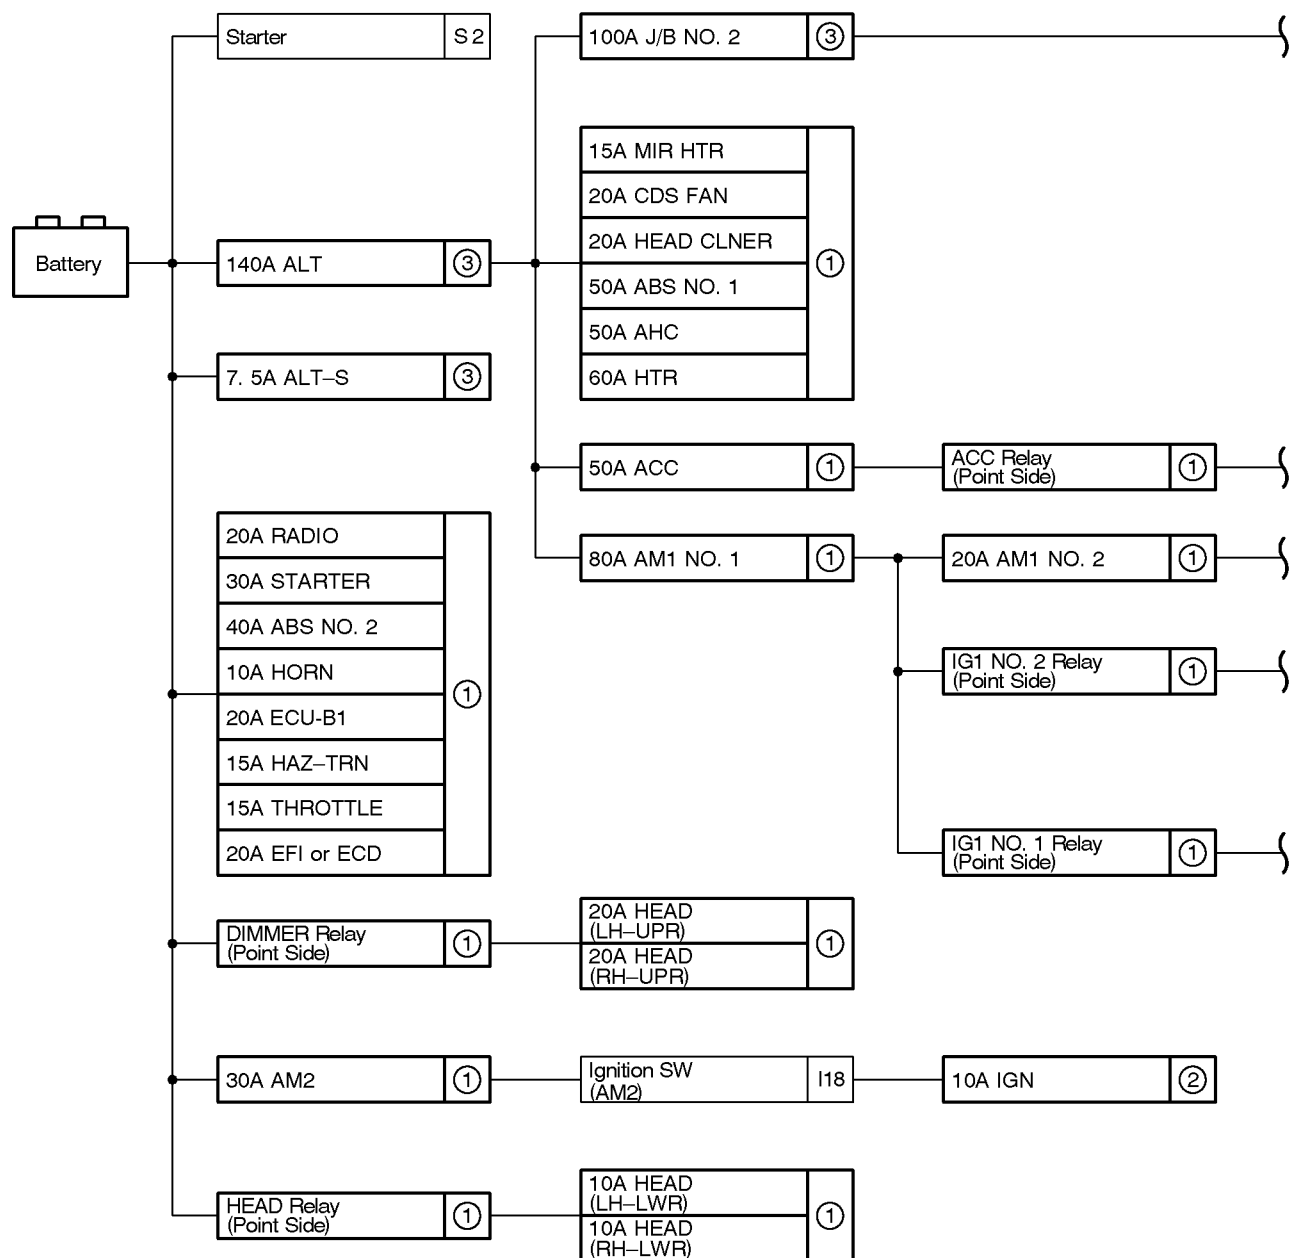

[LOCATION] ① : Engine Room J/B (See Page 22)

② : Cowl Side J/B LH (See Page 26)

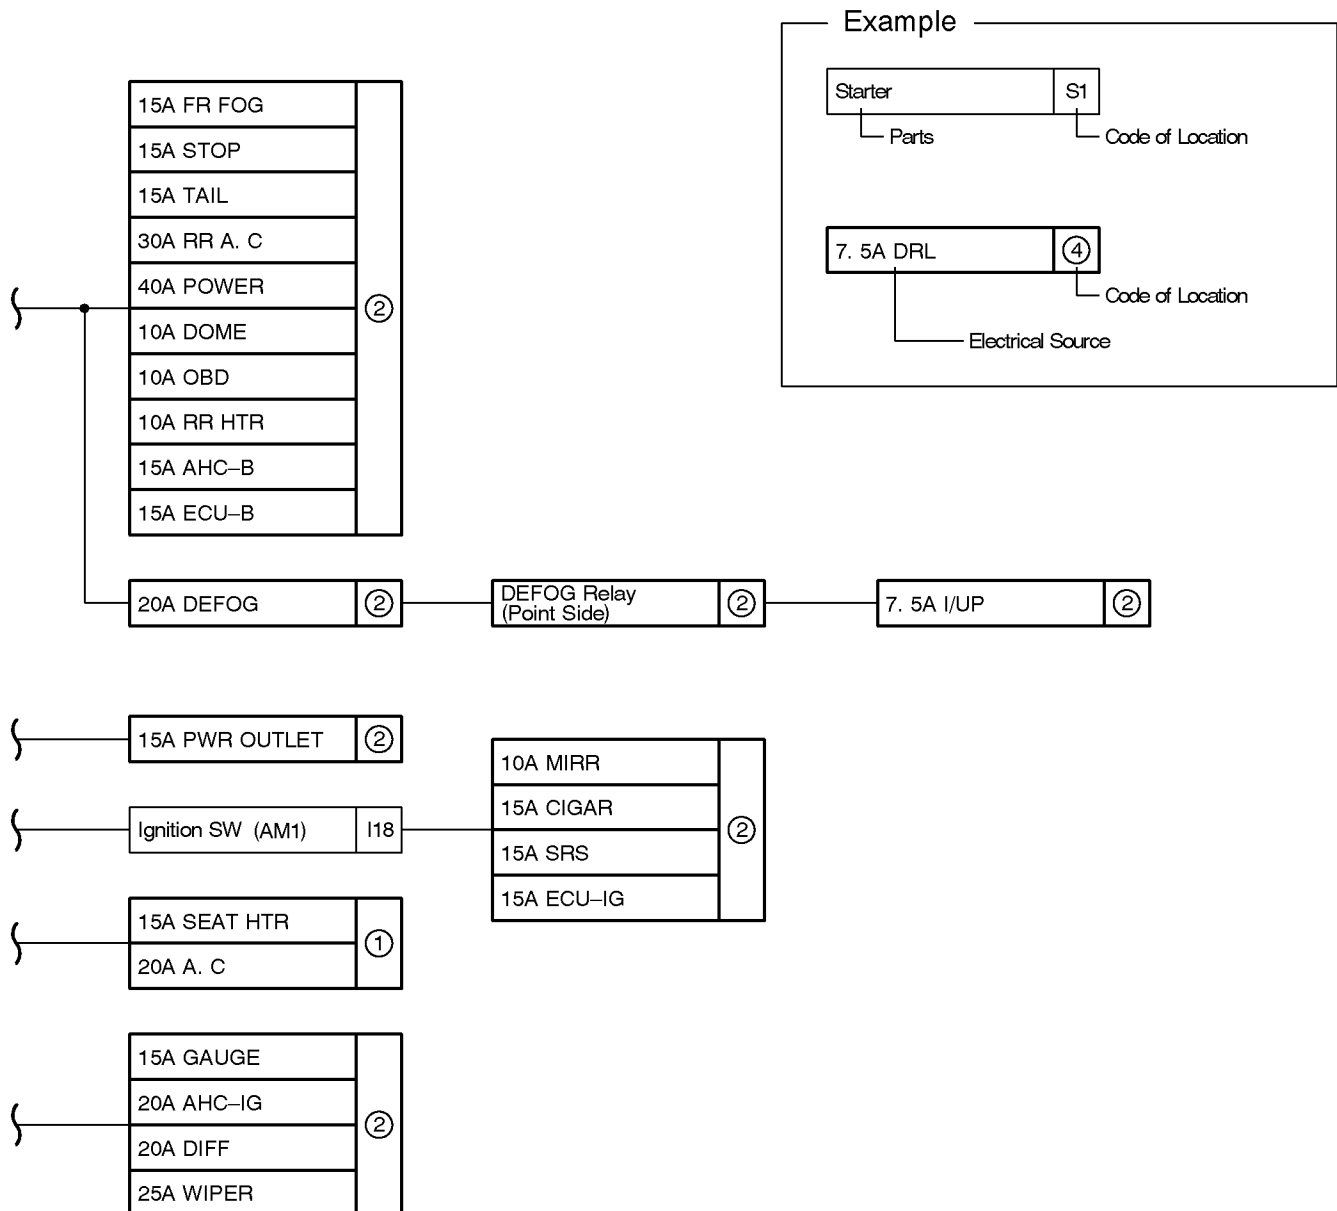

③ : Fusible Link Block (F 7 on See Page 36)

J POWER SOURCE (Current Flow Chart)

Engine Room J/B (See Page 22)

Fuse		System	Page
10A	HEAD (LH-LWR)	Combination Meter	280
		Front Fog Light	92
		Headlight	86
10A	HEAD (RH-LWR)	Headlight	86
10A	HORN	Horn	162
		Theft Deterrent	234
15A	HAZ-TRN	Theft Deterrent	234
		Turn Signal and Hazard Warning Light	94
15A	MIR HTR	Rear Window Defogger and Mirror Heater	262
15A	SEAT HTR	Seat Heater	260
15A	THROTTLE	Cruise Control	174
		Electronically Controlled Transmission and A/T Indicator	166
		Engine Control and Engine Immobiliser System	76
20A	A.C	Condenser Fan and Front Air Conditioning	288
		Key Reminder and Seat Belt Warning	264
		Rear Air Conditioning	296
20A	AM1 NO.2	Turn Signal and Hazard Warning Light	94
20A	CDS FAN	Condenser Fan and Front Air Conditioning	288
20A	ECU-B1	Automatic Light Control	122
		Cellular Mobile Telephone	268
		Clock	156
		Combination Meter	280
		Condenser Fan and Front Air Conditioning	288
		Door Lock Control	218
		Interior Light	108
		Key Reminder and Seat Belt Warning	264
		Light Auto Turn Off	126
		Moon Roof	214
		Multiplex Communication System	132
		Power Seat	240
		Power Tilt and Power Telescopic	246
		Power Window	208
		Radio and Player	272
		Rear Air Conditioning	296
		Remote Control Mirror	250
		Theft Deterrent	234
		Wireless Door Lock Control	224
20A	EFI or ECD	Cruise Control	174
		Electronically Controlled Transmission and A/T Indicator	166
		Engine Control and Engine Immobiliser System	76
20A	HEAD (LH-UPR)	Headlight	86
20A	HEAD (RH-UPR)	Headlight	86

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
20A	HEAD CLNER	Headlight Cleaner	128
20A	RADIO	Auto Antenna	266
		LEXUS Navigation System	276
		Radio and Player	272
30A	AM2	Electronically Controlled Transmission and A/T Indicator	166
		Engine Control and Engine Immobiliser System	76
		Ignition	70
		Starting	68
30A	STARTER	Starting	68
40A	ABS NO.2	VSC	188
50A	ABS NO.1	VSC	188
50A	AHC	Active Height Control Suspension and Adaptive Variable Suspension	180
60A	HTR	Condenser Fan and Front Air Conditioning	288
80A	AM1 NO.1	Rear Window Defogger and Mirror Heater	262
		Turn Signal and Hazard Warning Light	94

Cowl Side J/B LH (See Page 26)

Fuse		System	Page
7.5A	I/UP	Rear Window Defogger and Mirror Heater	262
10A	DOME	Garage Door Opener	164
		Interior Light	108
		Multiplex Communication System	132
10A	IGN	Charging	74
		Combination Meter	280
		Cruise Control	174
		Electronically Controlled Transmission and A/T Indicator	166
		Engine Control and Engine Immobiliser System	76
		SRS	197
		VSC	188
10A	MIRR	Multiplex Communication System	132
		Remote Control Mirror	250
10A	OBD	Cruise Control	174
		Engine Control and Engine Immobiliser System	76
10A	RR HTR	Rear Air Conditioning	296
15A	AHC-B	Active Height Control Suspension and Adaptive Variable Suspension	180
15A	CIGAR	Auto Antenna	266
		Cigarette Lighter	158
		Clock	156
		Condenser Fan and Front Air Conditioning	288
		LEXUS Navigation System	276
		Multiplex Communication System	132
		Radio and Player	272
		Rear Air Conditioning	296

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
15A	CIGAR	Remote Control Mirror	250
		Shift Lock	202
15A	ECU-B	Combination Meter	280
		Condenser Fan and Front Air Conditioning	288
		Headlight	86
		LEXUS Navigation System	276
		Power Tilt and Power Telescopic	246
		Rear Air Conditioning	296
		SRS	197
		Theft Deterrent	234
15A	ECU-IG	Auto Antenna	266
		Automatic Light Control	122
		Cellular Mobile Telephone	268
		Door Lock Control	218
		Interior Light	108
		LEXUS Navigation System	276
		Light Auto Turn Off	126
		Moon Roof	214
		Multiplex Communication System	132
		Power Seat	240
		Power Tilt and Power Telescopic	246
		Power Window	208
		Remote Control Mirror	250
		Shift Lock	202
		Theft Deterrent	234
		VSC	188
		Wireless Door Lock Control	224
15A	FR FOG	Front Fog Light	92
15A	GAUGE	Active Height Control Suspension and Adaptive Variable Suspension	180
		Automatic Glare-Resistant EC Mirror with Compass	256
		Back-Up Light	120
		Center Differential Lock	204
		Charging	74
		Combination Meter	280
		Cruise Control	174
		Electronically Controlled Transmission and A/T Indicator	166
		Engine Control and Engine Immobiliser System	76
		Headlight	86
		Illumination	102
		Key Reminder and Seat Belt Warning	264
		LEXUS Navigation System	276
		Multiplex Communication System	132
		Power Rear Quarter Window	258
		Rear Window Defogger and Mirror Heater	262

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
15A	GAUGE	Remote Control Mirror	250
		VSC	188
		Wireless Door Lock Control	224
15A	PWR OUTLET	Power Outlet	160
15A	SRS	SRS	197
15A	STOP	Active Height Control Suspension and Adaptive Variable Suspension	180
		Cruise Control	174
		Electronically Controlled Transmission and A/T Indicator	166
		Engine Control and Engine Immobiliser System	76
		Multiplex Communication System	132
		Shift Lock	202
		Stop Light	116
		Trailer Towing	118
		VSC	188
15A	TAIL	Automatic Light Control	122
		Illumination	102
		Light Auto Turn Off	126
		Multiplex Communication System	132
		Taillight	98
		Theft Deterrent	234
		Trailer Towing	118
		Wireless Door Lock Control	224
20A	AHC-IG	Active Height Control Suspension and Adaptive Variable Suspension	180
		VSC	188
20A	DEFOG	Rear Window Defogger and Mirror Heater	262
20A	DIFF	Center Differential Lock	204
25A	WIPER	Front Wiper and Washer	148
		Headlight Cleaner	128
		Multiplex Communication System	132
		Rear Wiper and Washer	152
30A	RR A.C	Rear Air Conditioning	296
40A	POWER	Door Lock Control	218
		Moon Roof	214
		Multiplex Communication System	132
		Power Seat	240
		Power Tilt and Power Telescopic	246
		Power Window	208
		Wireless Door Lock Control	224

Fusible Link Block (F7 on See Page 36)

Fuse		System	Page
7.5A	ALT-S	Charging	74
100A	J/B NO.2	Automatic Light Control	122
		Light Auto Turn Off	126

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
100A	J/B NO.2	Stop Light	116
		Taillight	98
140A	ALT	Automatic Light Control	122
		Charging	74
		Light Auto Turn Off	126
		Stop Light	116
		Taillight	98
		Trailer Towing	118
		Turn Signal and Hazard Warning Light	94

* These are the page numbers of the first page on which the related system is shown.

