



IGNITION

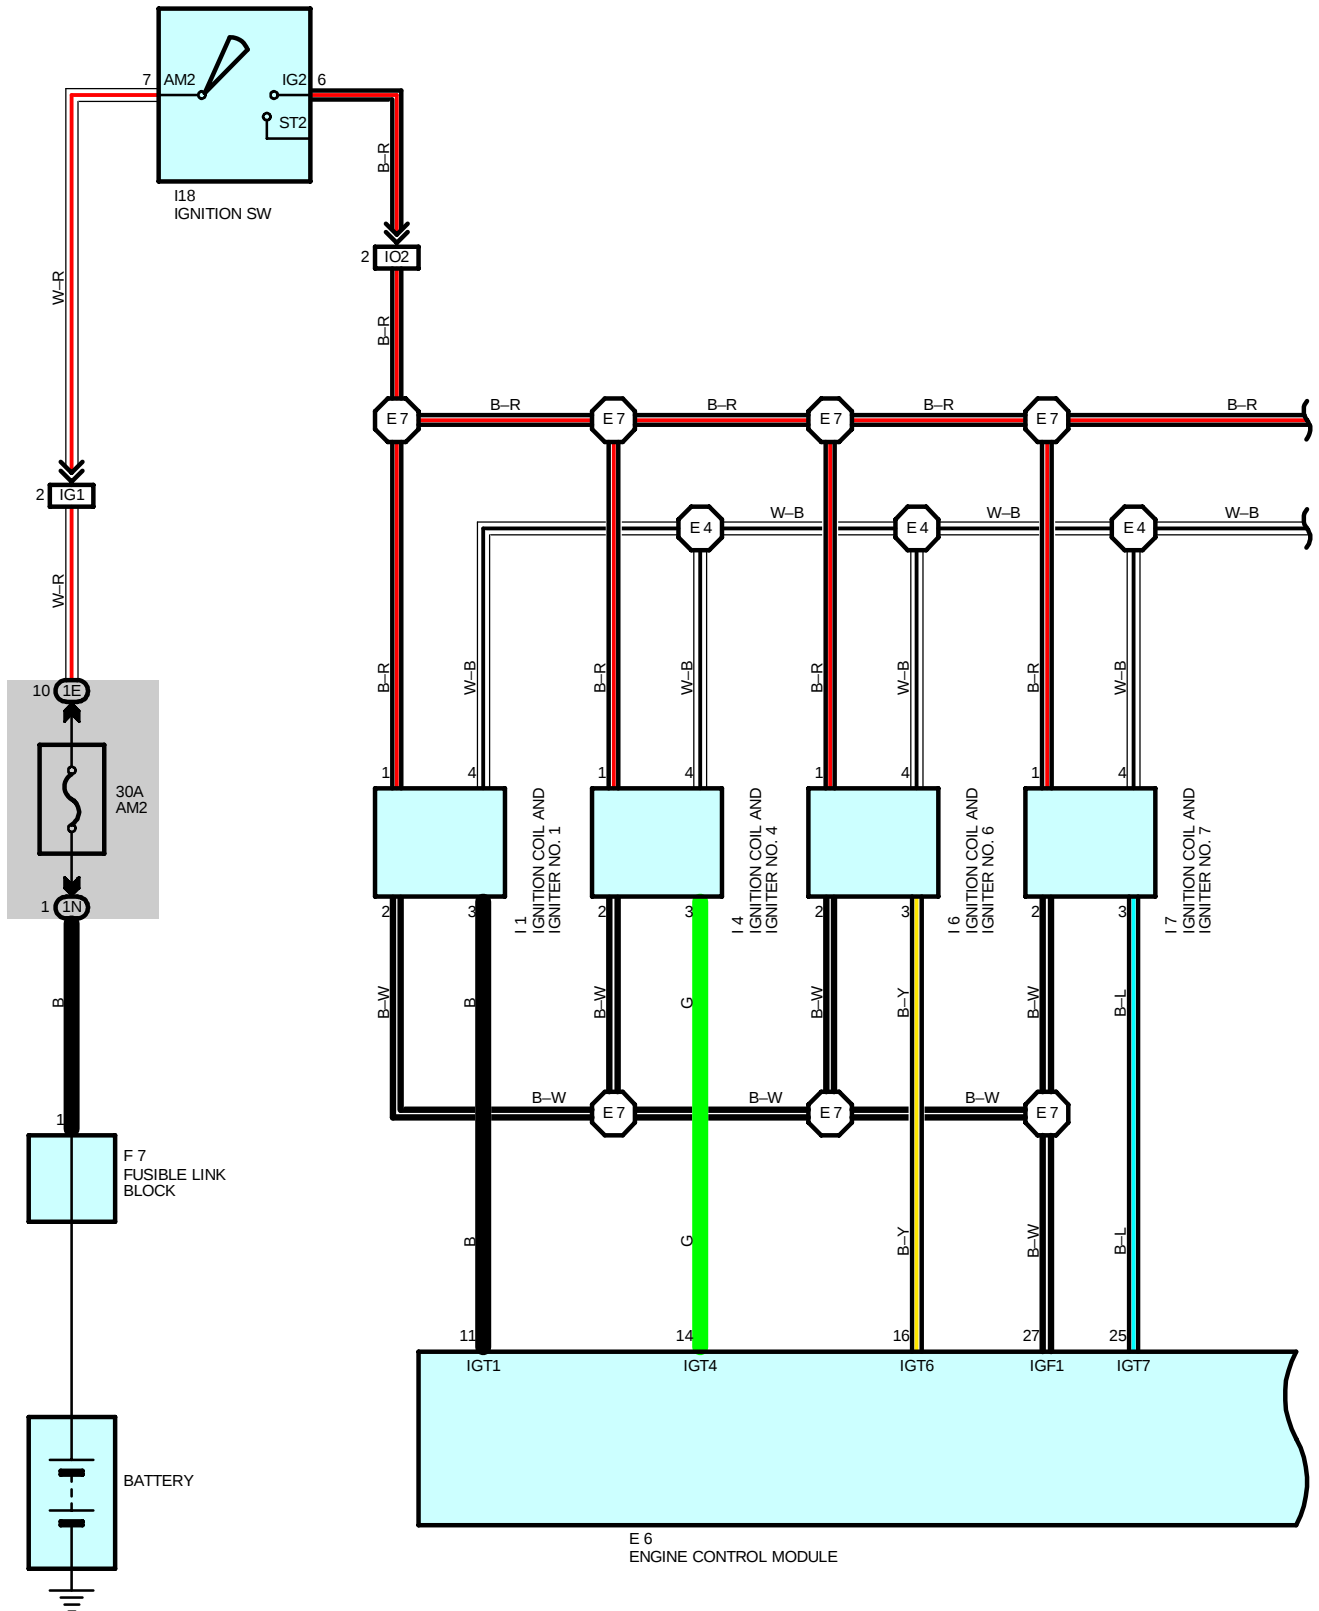

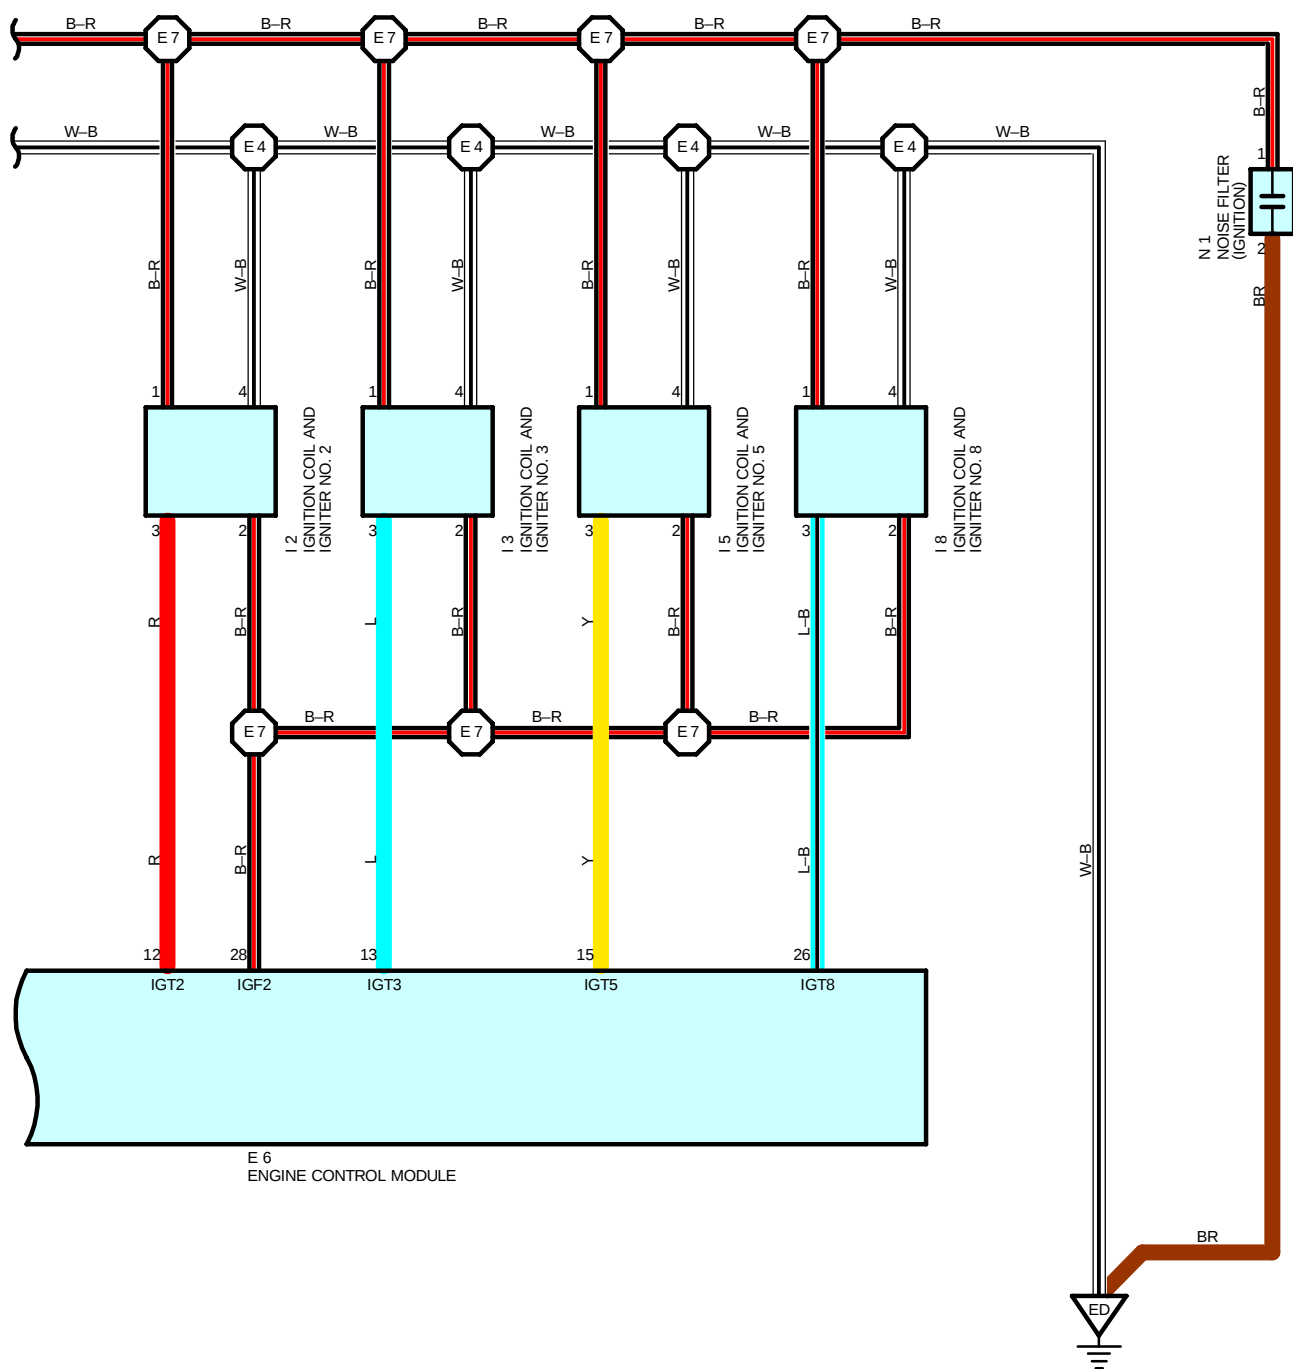

IGNITION

SERVICE HINTS

I18 IGNITION SW

7-6 : Closed with ignition SW at **ON** or **ST** position

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
E6	40	I3	39	I7	39
F7	38	I4	39	I8	39
I1	39	I5	39	I18	40
I2	39	I6	39	N1	39

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1N	23	Engine Room No.3 Wire and Engine Room J/B (Engine Compartment Left)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	50	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
IO2	52	Engine Wire and Dash Wire (Behind the Glove Box)

: GROUND POINTS

Code	See Page	Ground Points Location
ED	46	Rear Bank of Left Cylinder Head

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E4	46	Engine Wire	E7	46	Engine Wire

