


# HEADLIGHT CLEANER

FROM POWER SOURCE SYSTEM (SEE PAGE 64)

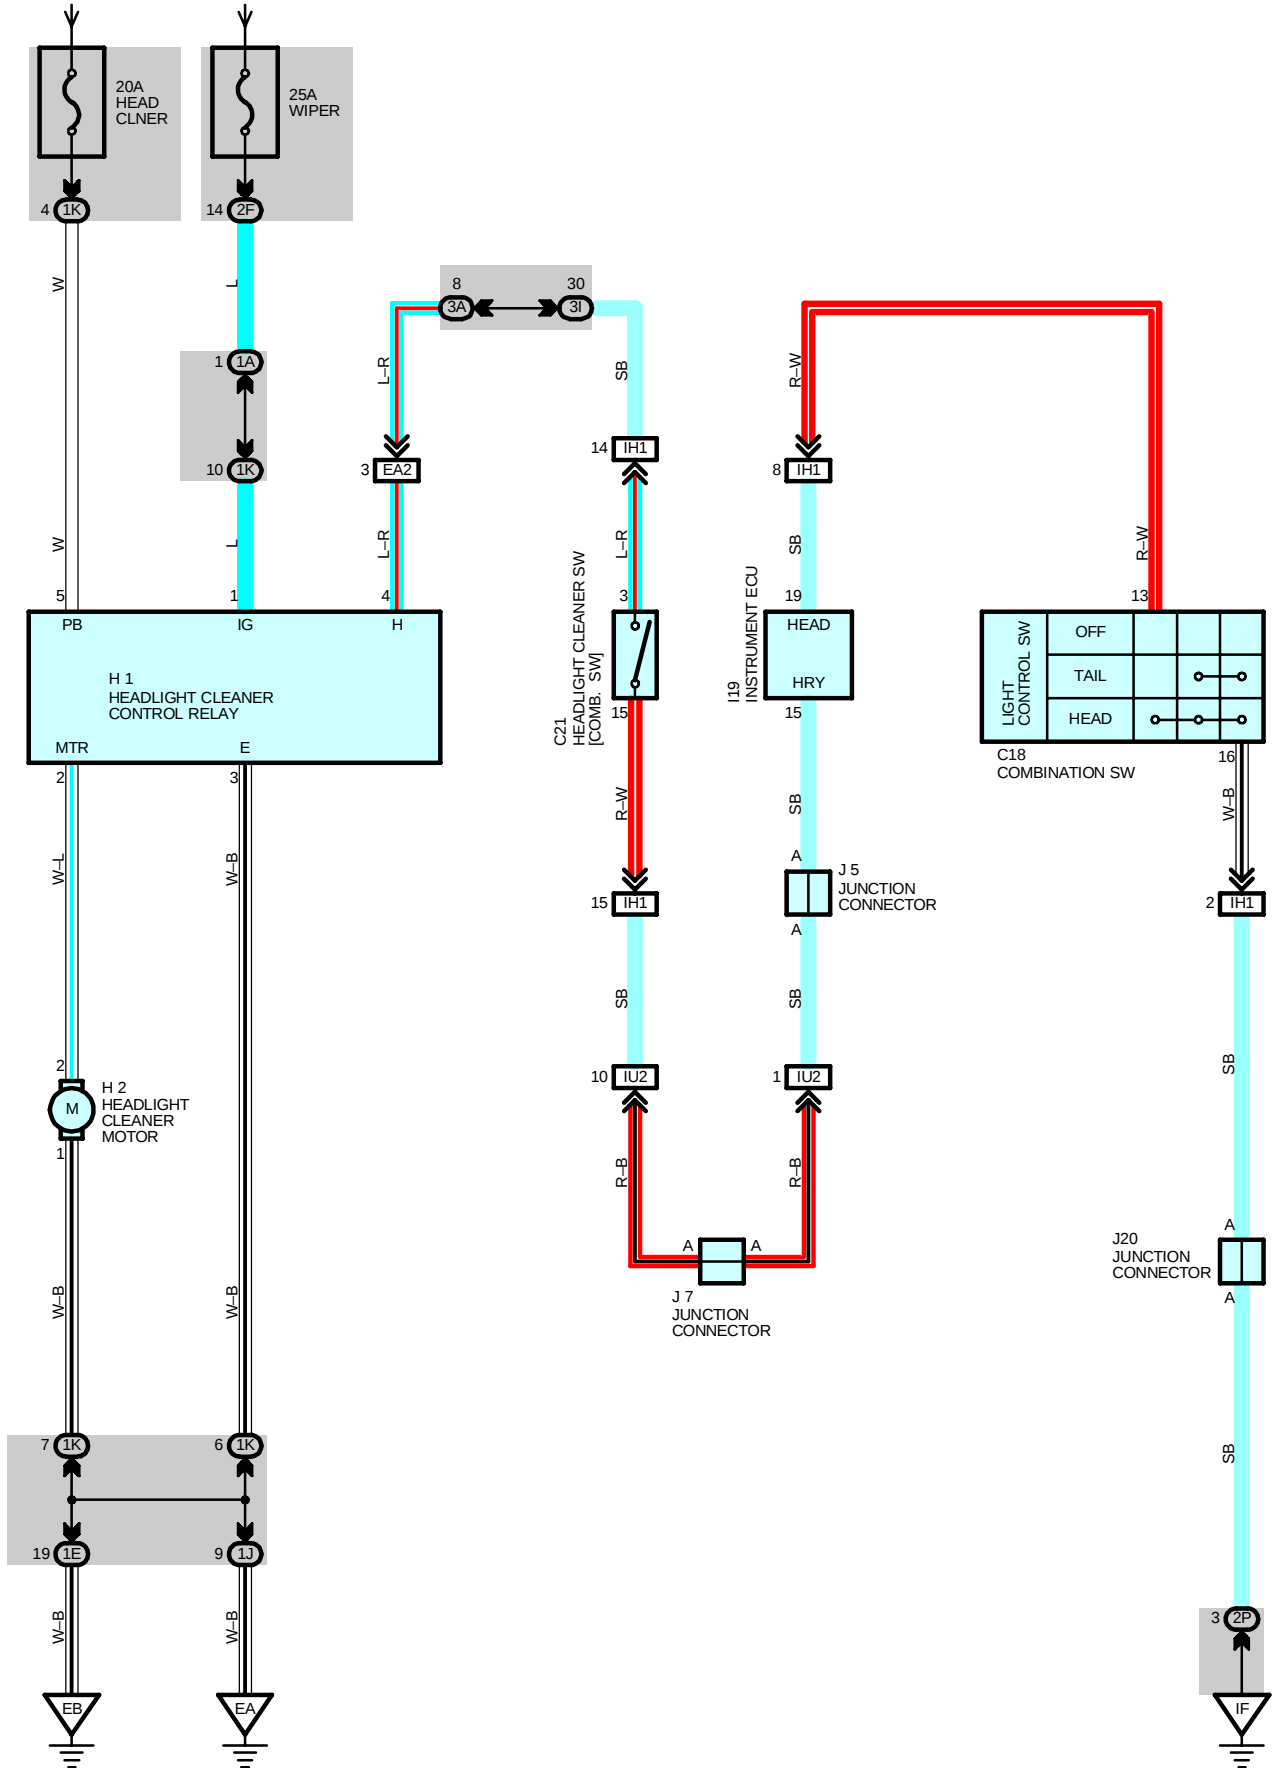

## SERVICE HINTS

### H1 HEADLIGHT CLEANER CONTROL RELAY

5-2 : Closed with ignition SW at **ON** or **ST** position, light control SW at **HEAD** position and headlight cleaner SW on

## : PARTS LOCATION

| Code | See Page           | Code | See Page           | Code | See Page           |
|------|--------------------|------|--------------------|------|--------------------|
| C18  | <a href="#">40</a> | H2   | <a href="#">39</a> | J7   | <a href="#">41</a> |
| C21  | <a href="#">40</a> | I19  | <a href="#">40</a> | J20  | <a href="#">41</a> |
| H1   | <a href="#">39</a> | J5   | <a href="#">41</a> |      |                    |

## : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| Code | See Page           | Junction Block and Wire Harness (Connector Location)                      |
|------|--------------------|---------------------------------------------------------------------------|
| 1A   | <a href="#">23</a> | Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)       |
| 1E   |                    |                                                                           |
| 1J   | <a href="#">23</a> | Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)       |
| 1K   |                    |                                                                           |
| 2F   | <a href="#">26</a> | Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)              |
| 2P   | <a href="#">28</a> | Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)  |
| 3A   | <a href="#">32</a> | Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)             |
| 3I   | <a href="#">32</a> | Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel) |

## : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| Code | See Page           | Joining Wire Harness and Wire Harness (Connector Location)                 |
|------|--------------------|----------------------------------------------------------------------------|
| EA2  | <a href="#">46</a> | Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right) |
| IH1  | <a href="#">50</a> | Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)   |
| IU2  | <a href="#">52</a> | Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)     |

## : GROUND POINTS

| Code | See Page           | Ground Points Location           |
|------|--------------------|----------------------------------|
| EA   | <a href="#">46</a> | Front Right Side of Fender Apron |
| EB   |                    |                                  |
| IF   | <a href="#">48</a> | Set Bolt of Cowl Side J/B LH     |