



SERVICE HINTS

C11 (D), C24 (E), C26 (G) CLOCK [CENTER ECU]

(D) 2, (E) 1, (G) 13—GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position

(D) 12, (E) 11, (G) 1—GROUND : Always approx. **12** volts

(D) 22, (G) 11—GROUND : Always continuity

: PARTS LOCATION

Code		See Page		Code		See Page		Code		See Page	
C11	D	40		C26	G	40					
C24	E	40		J11		41					

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2B	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2D		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IW1	54	Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)

: GROUND POINTS

Code	See Page	Ground Points Location
IF	48	Set Bolt of Cowl Side J/B LH

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I8	50	Dash Wire	I11	50	Dash Wire