


GARAGE DOOR OPENER

FROM POWER SOURCE SYSTEM (SEE PAGE 64)

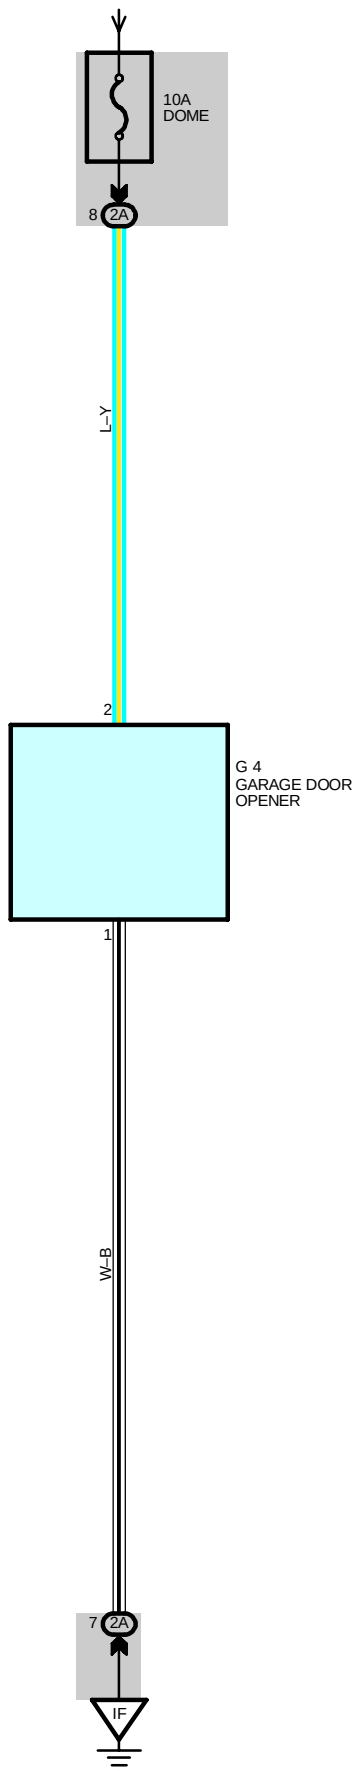

SERVICE HINTS**G4 GARAGE DOOR OPENER**2-GROUND : Always approx. **12** volts

1-GROUND : Always continuity

 : **PARTS LOCATION**

Code	See Page	Code	See Page	Code	See Page
G4	42				

 : **JUNCTION BLOCK AND WIRE HARNESS CONNECTOR**

Code	See Page	Junction Block and Wire Harness (Connector Location)
2A	26	Roof Wire and Cowl Side J/B LH (Left Kick Panel)

 : **GROUND POINTS**

Code	See Page	Ground Points Location
IF	48	Set Bolt of Cowl Side J/B LH