




RADIO AND PLAYER

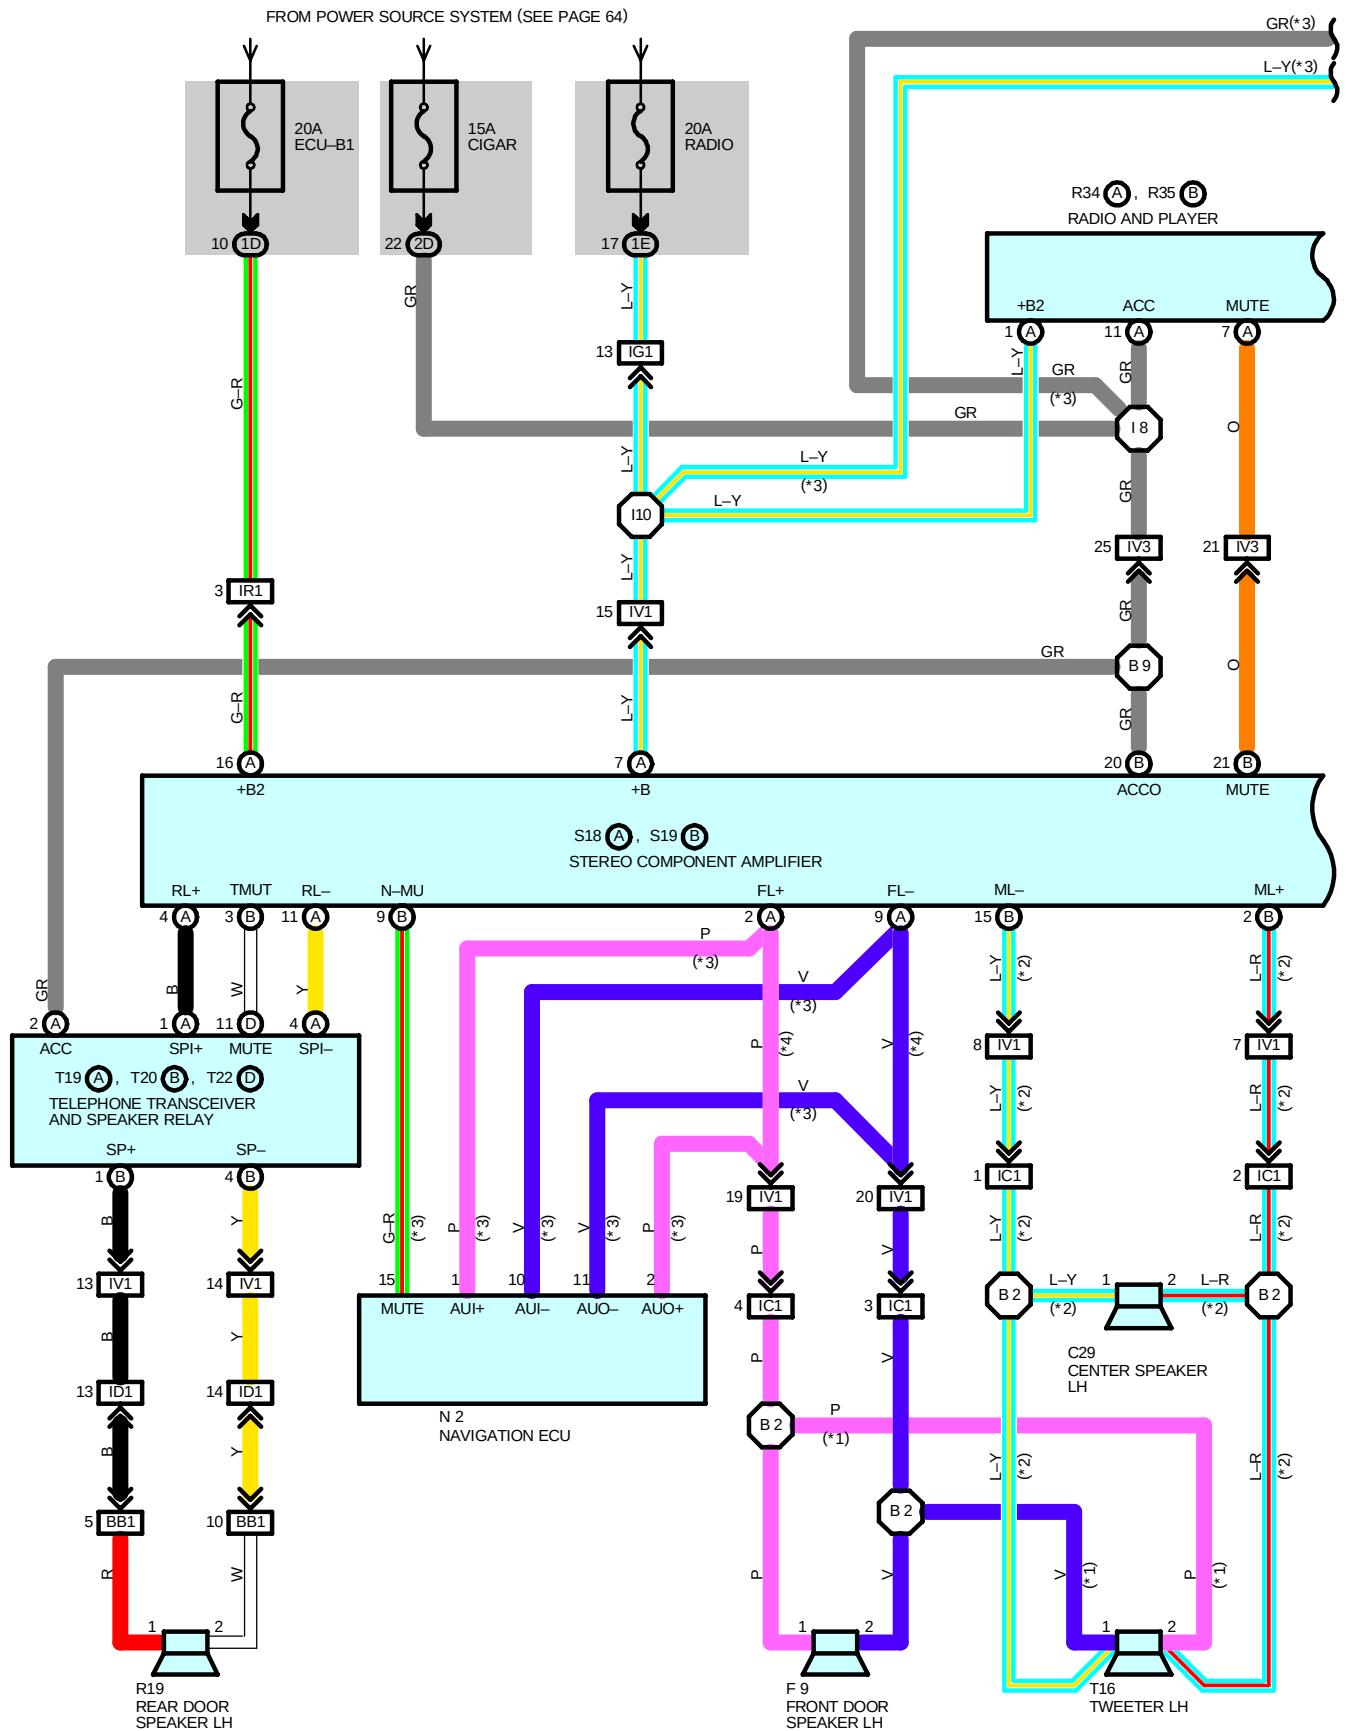

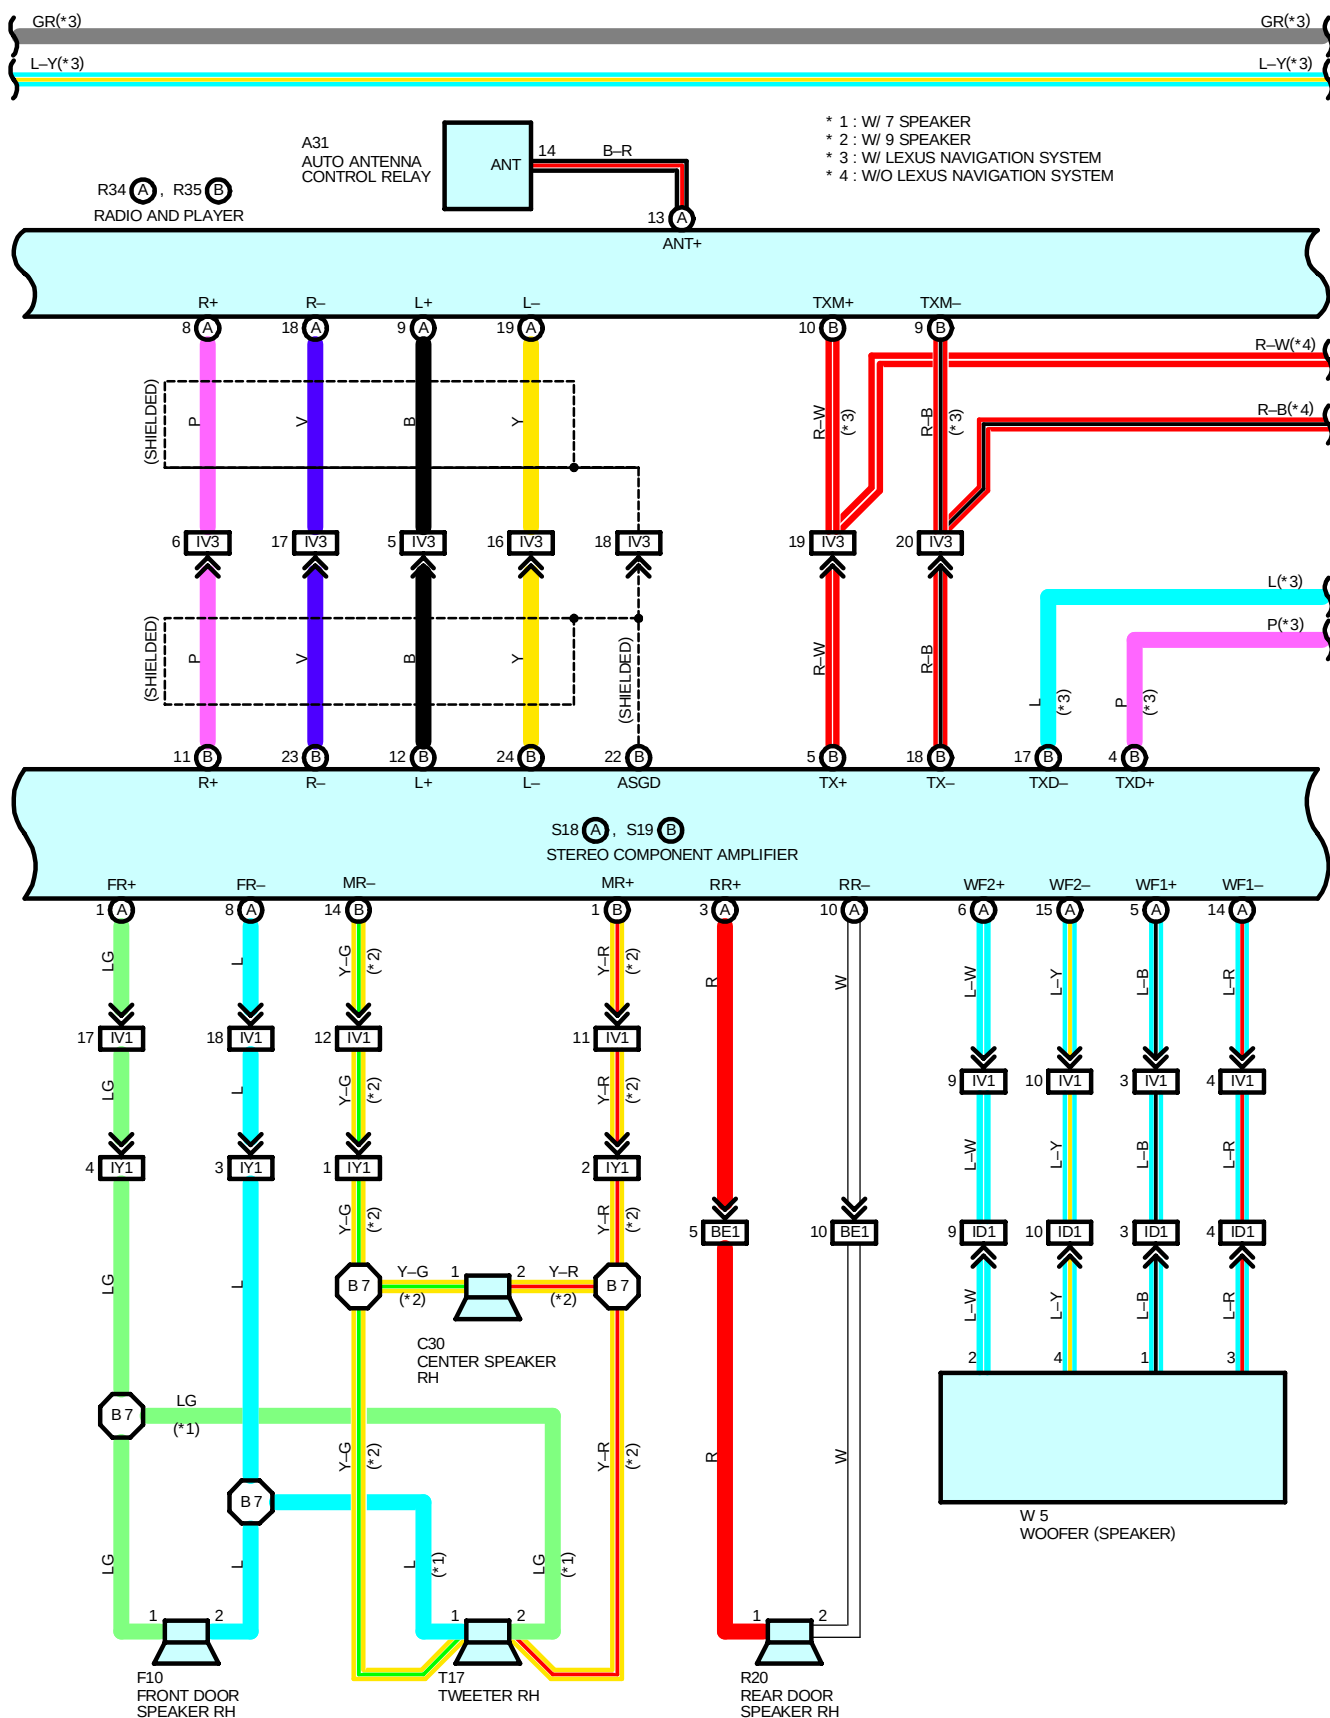

RADIO AND PLAYER

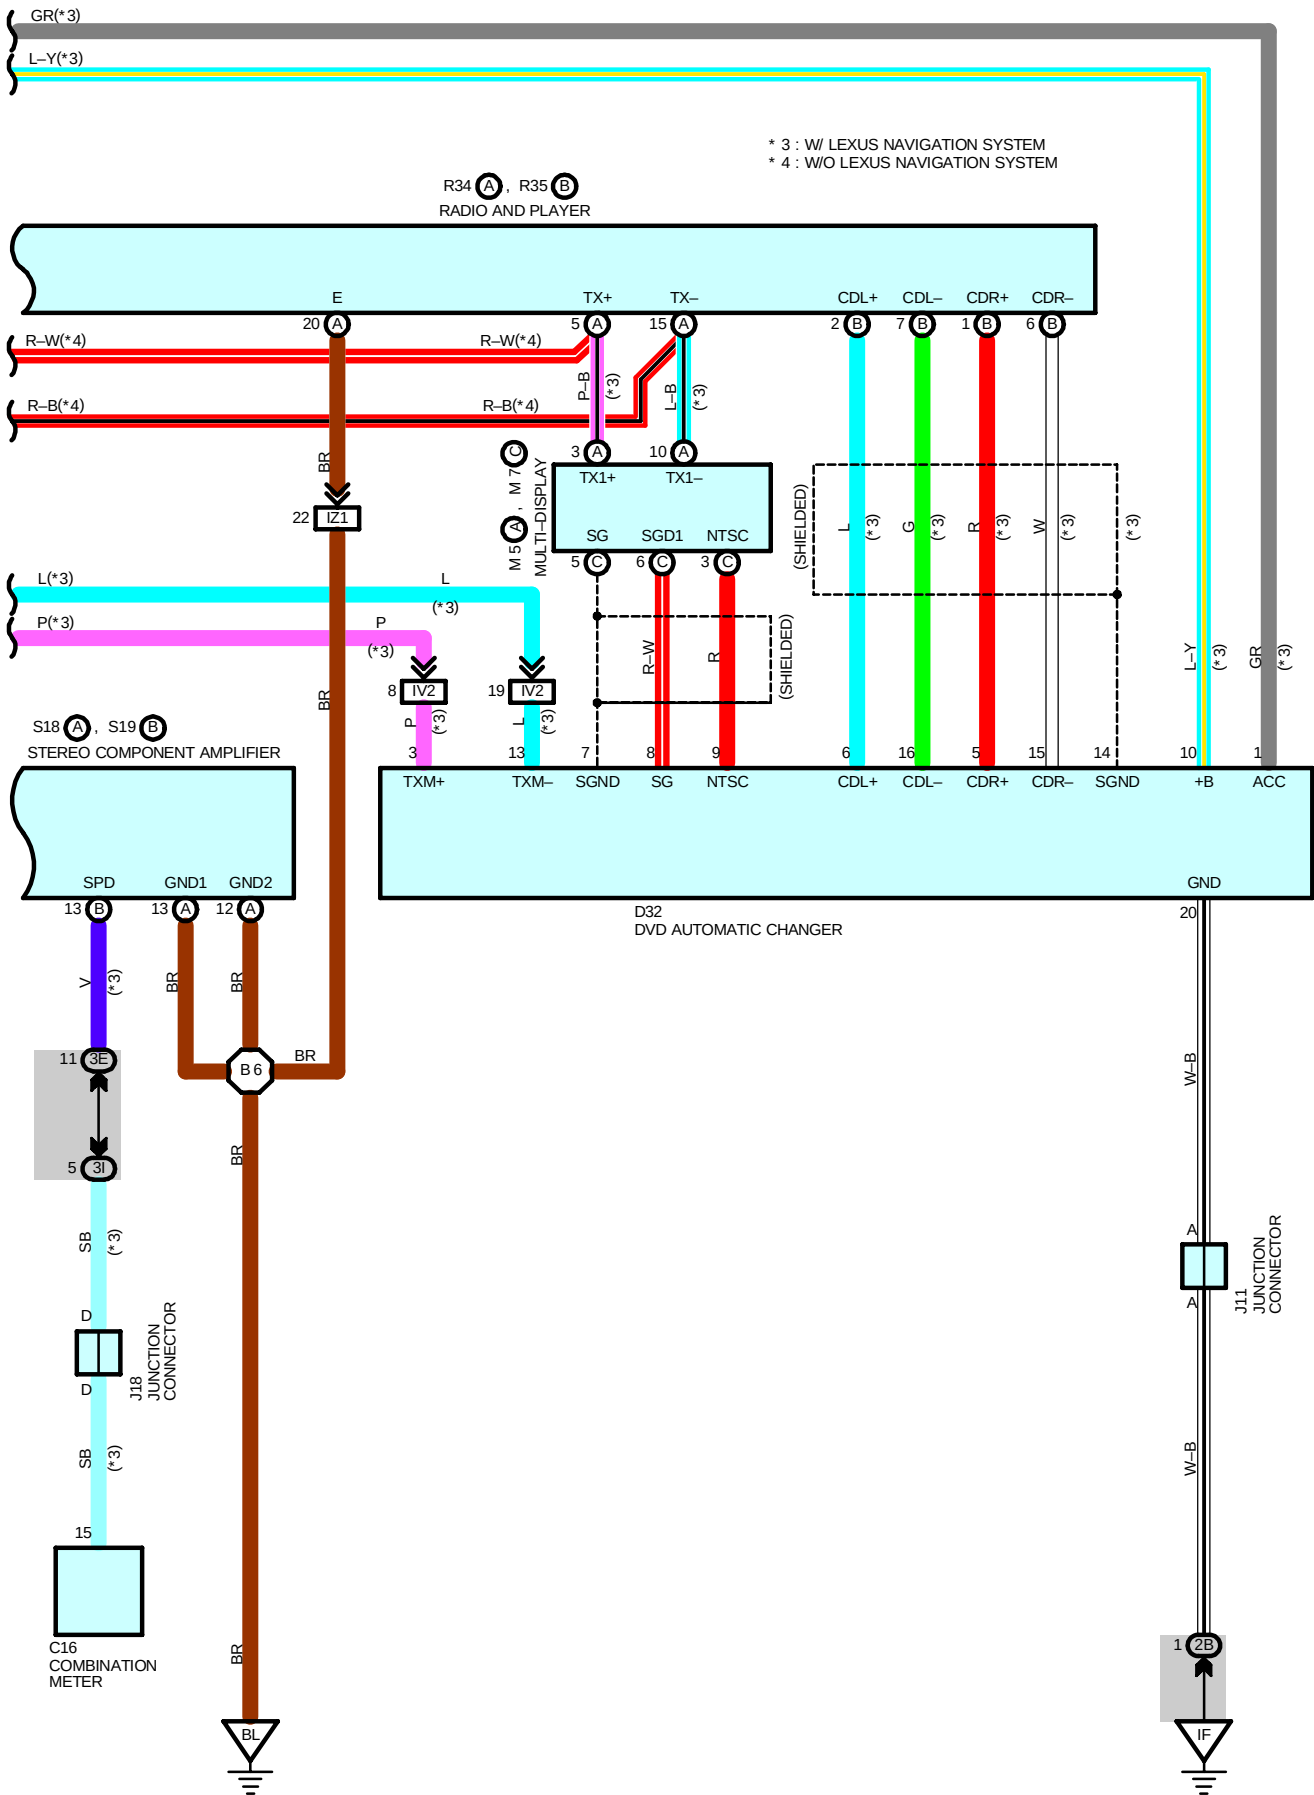

SERVICE HINTS

R34 RADIO AND PLAYER

- 1-GROUND : Always approx. **12** volts
- 11-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position
- 20-GROUND : Always continuity

S18 STEREO COMPONENT AMPLIFIER

- 7-GROUND : Always approx. **12** volts
- 16-GROUND : Always approx. **12** volts
- 12, 13-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A31	40	J18	41	S18	A 43
C16	40	M5	A 41	S19	B 43
C29	42	M7	C 41	T16	43
C30	42	N2	43	T17	43
D32	40	R19	43	T19	A 43
F9	42	R20	43	T20	B 43
F10	42	R34	A 41	T22	D 43
J11	41	R35	B 41	W5	43

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1E		
2B	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2D		
3E	32	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3I	32	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	48	Front Door LH Wire and Dash Wire (Left Kick Panel)
ID1	48	Dash Wire and Floor Wire (Left Kick Panel)
IG1	50	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
IR1	52	Engine Room No.2 Wire and Floor No.2 Wire (Right Kick Panel)
IV1	54	Dash Wire and Floor No.2 Wire (Behind the Glove Box)
IV2		
IV3		
IY1	54	Front Door RH Wire and Dash Wire (Right Kick Panel)
IZ1	54	Floor No.2 Wire and Dash Wire (Right Side of Front Console)
BB1	56	Rear Door LH Wire and Floor Wire (Left Side of Center Pillar)
BE1	56	Rear Door RH Wire and Floor No.2 Wire (Right Side of Center Pillar)

: GROUND POINTS

Code	See Page	Ground Points Location
IF	48	Set Bolt of Cowl Side J/B LH
BL	56	Rear Side Under the Front Passenger's Seat

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I8	50	Dash Wire	B6	58	Floor No.2 Wire
I10			B7	58	Front Door RH Wire
B2	58	Front Door LH Wire	B9	58	Floor No.2 Wire