



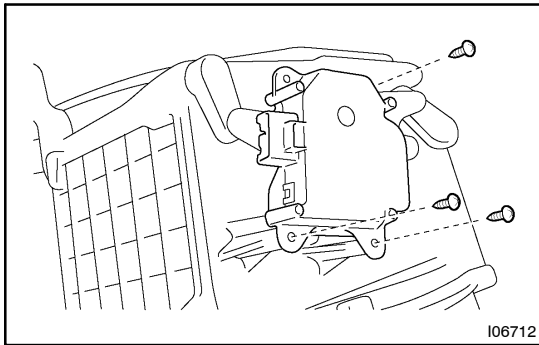

## DISASSEMBLY


### 1. REMOVE AIR INLET SERVOMOTOR

Remove the 3 screws and air inlet servomotor.

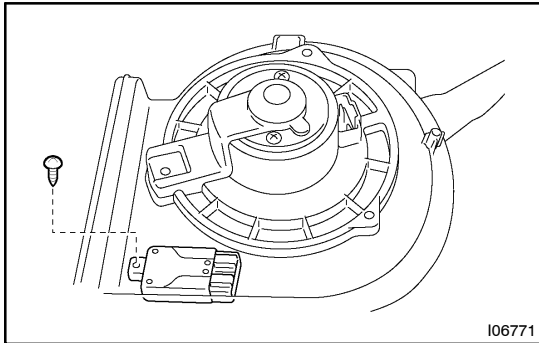

### 2. REMOVE BLOWER MOTOR CONTROL RELAY

- (a) Disconnect the connector.
- (b) Remove the screw and blower motor control relay.

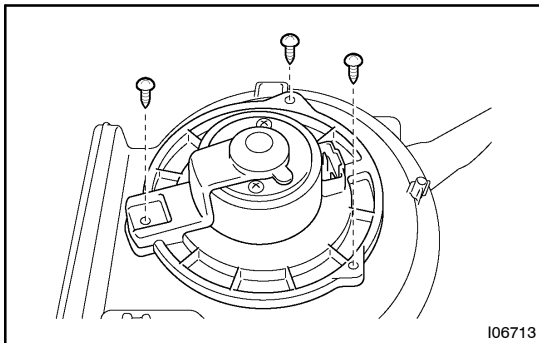

### 3. REMOVE BLOWER MOTOR

- (a) Disconnect the connector.
- (b) Remove the 3 screws and blower motor.

### 4. REMOVE WIRE HARNESS

Remove the screw and wire harness.