


POWER TRANSISTOR (for Rear Heater)

AC1LJ-03

INSPECTION

1. REMOVE FRONT SEATS
2. REMOVE REAR CONSOLE BOX
3. REMOVE FRONT CONSOLE BOX COVER
4. REMOVE LOWER CENTER CLUSTER FINISH PANEL
5. REMOVE FRONT DOOR SCUFF PLATES
6. REMOVE COWL SIDE TRIMS
7. REMOVE REAR DOOR SCUFF PATES
8. REMOVE CENTER PILLAR GARNISHES
9. REMOVE POWER TRANSISTOR
- (a) Slide the floor carpet backward.

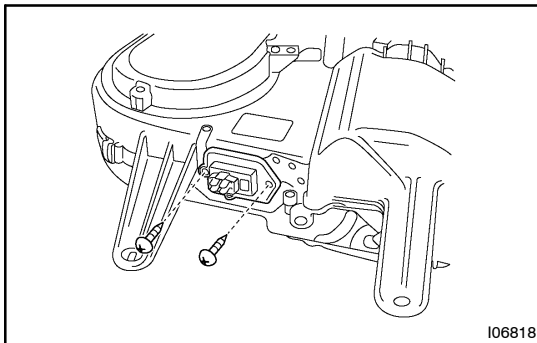

- (b) Disconnect the connector.
- (c) Remove the 2 screws and power transistor.

10. INSPECT POWER TRANSISTOR

Check the power transistor in the same way as for "POWER TRANSISTOR (For Rear Cooler)" on page [AC-82](#).

11. INSTALL POWER TRANSISTOR
12. INSTALL CENTER PILLAR GARNISHES
13. INSTALL REAR DOOR SCUFF PATES
14. INSTALL COWL SIDE TRIMS
15. INSTALL FRONT DOOR SCUFF PLATES
16. INSTALL LOWER CENTER CLUSTER FINISH PANEL
17. INSTALL FRONT CONSOLE BOX COVER
18. INSTALL REAR CONSOLE BOX
19. INSTALL FRONT SEATS