



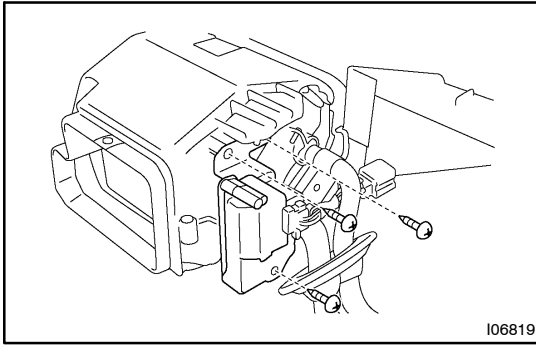

DISASSEMBLY

1. REMOVE AIR MIX SERVOMOTOR


Remove the 3 screws and air mix servomotor.

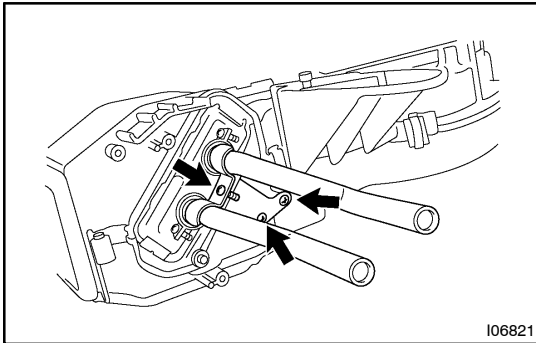

2. REMOVE HEATER RADIATOR

(a) Remove the 3 screws and 2 clamps

(b) Pull out the heater radiator.

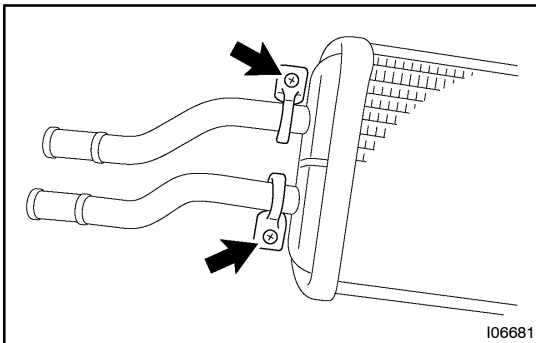


(c) Remove the 2 screws, 2 clamps and heater radiator pipes.

(d) Remove the 2 O-rings.

HINT:


At the time of reassembly, please refer to the following item.

Do not reuse the O-rings

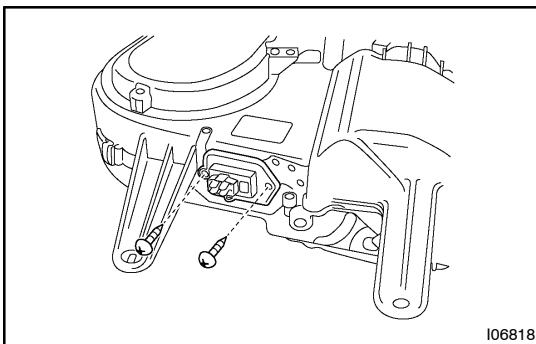

3. REMOVE POWER TRANSISTOR


Remove the 2 screws and power transistor.

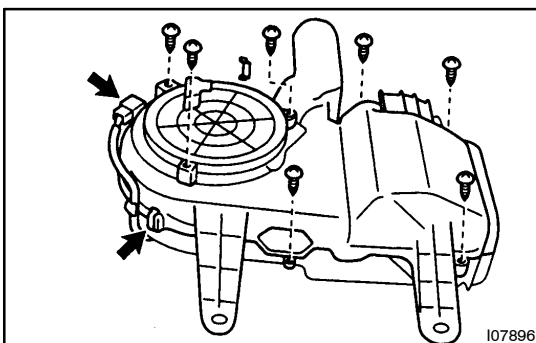


4. REMOVE BLOWER MOTOR

(a) Remove the 3 screws and cover.

(b) Remove the 4 screws, 3 holding springs and separate the heater cases.

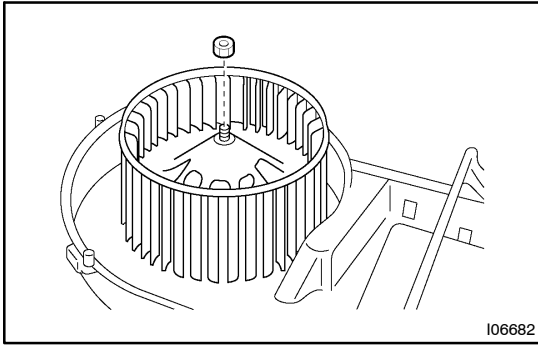

(c) Remove the nut and fan.

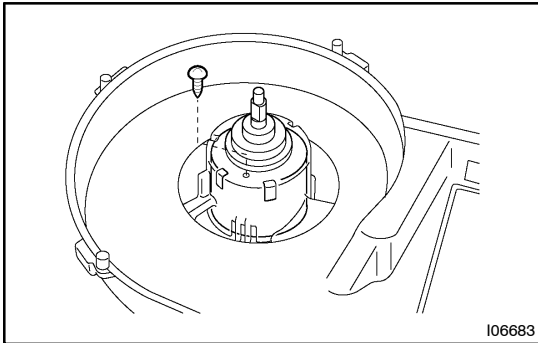

(d) Remove the screws and blower motor.