



LOCATION

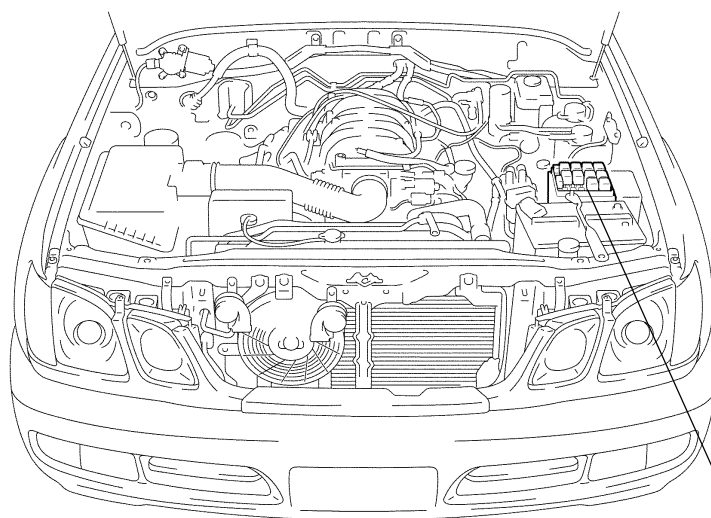

Engine Room Junction Block
• ECU-B Fuse

Grage Door Opener Switch

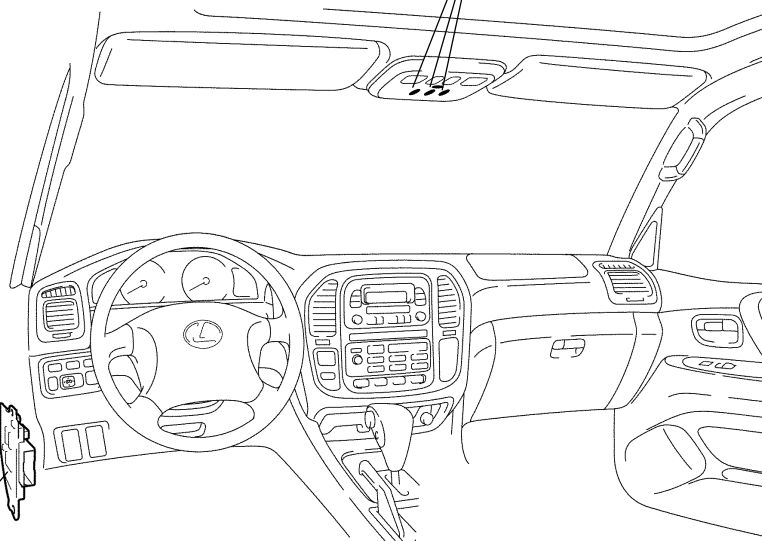

Driver Side Junction Block
• DOME Fuse

107463