


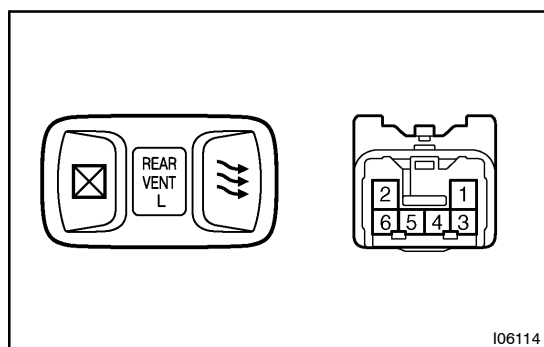


## INSPECTION

### 1. INSPECT POWER QUARTER WINDOW SWITCH CONTINUITY

| Switch position      | Tester connection | Specified condition |
|----------------------|-------------------|---------------------|
| CLOSE                | 3 - 6<br>4 - 5    | Continuity          |
| OFF                  | -                 | Continuity          |
| OPEN                 | 3 - 4<br>5 - 6    | Continuity          |
| Illumination Circuit | 1 - 2             | Continuity          |


If continuity is not as specified, replace the switch.

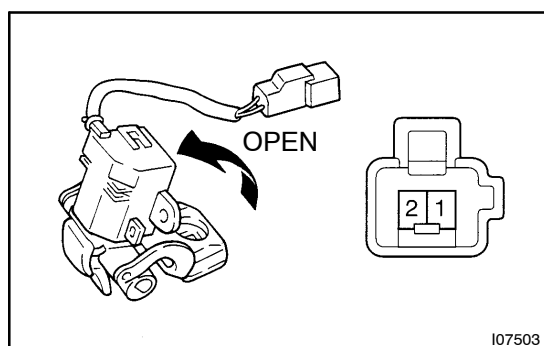

### 2. Left side:


#### INSPECT POWER VENT WINDOW MOTOR OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, and check that the window link moves to OPEN position.

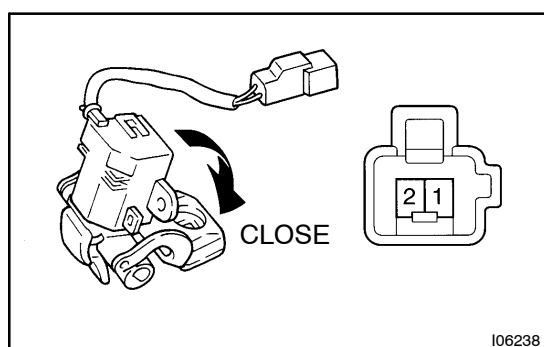

- (b) Remove the polarity and check that the window link moves to CLOSE position.


If operation is not as specified, replace the window motor.

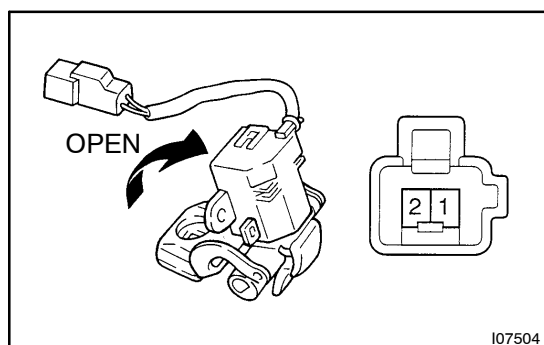

### 3. Right side:

#### INSPECT POWER VENT WINDOW MOTOR OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 1, and check that the window link moves to OPEN position.

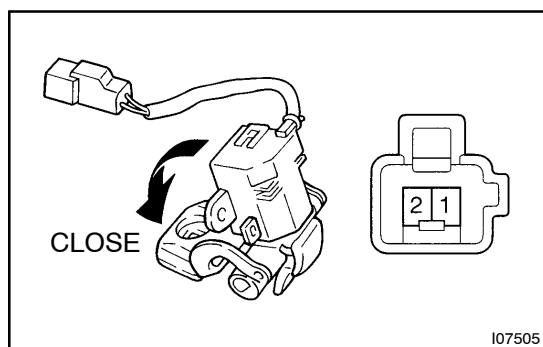

- (b) Remove the polarity and check that the window link moves to CLOSE position.