


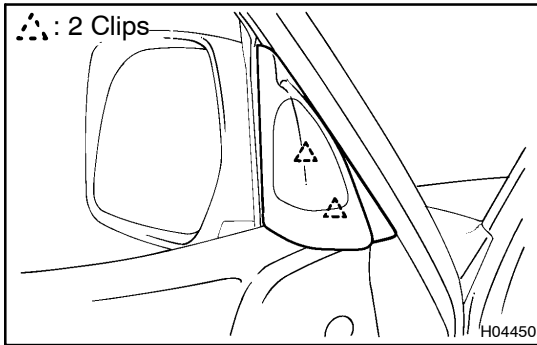


REMOVAL

1. REMOVE LOWER FRAME BRACKET GARNISH

Using a screwdriver, remove the lower frame bracket garnish.

HINT:

Tape the screwdriver tip before use.

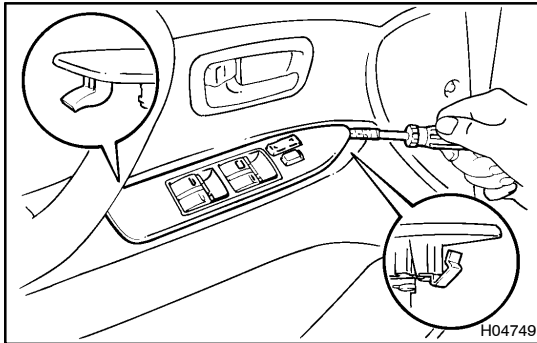


2. REMOVE POWER WINDOW SWITCH

(a) Using a screwdriver, remove the power window switch as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

(b) Disconnect the connector.

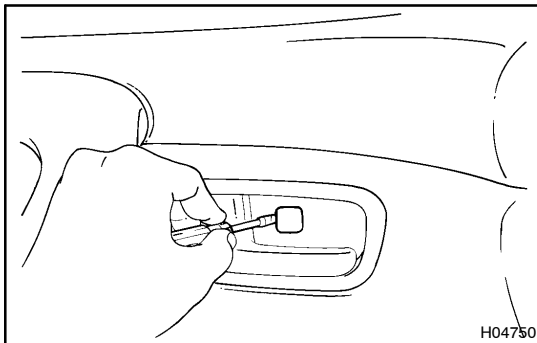


3. REMOVE DOOR INSIDE HANDLE BEZEL

(a) Using a screwdriver, open the cover as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

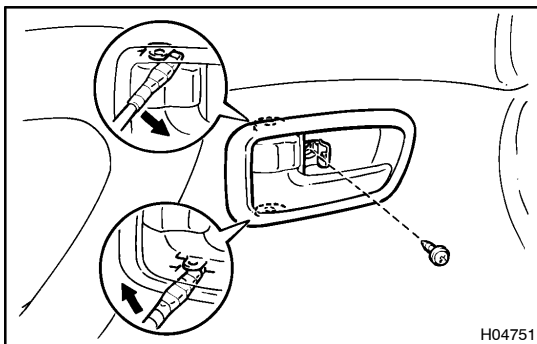


(b) Remove the screw.

(c) Using a screwdriver, remove the inside handle bezel as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

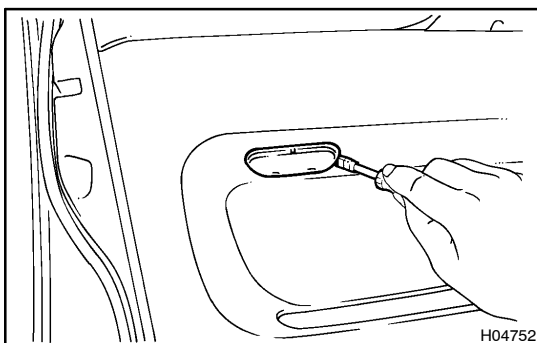

4. REMOVE DOOR COURTESY LIGHT

Using a screwdriver, remove the courtesy light, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.


5. REMOVE SEAT MEMORY SWITCH

(a) Using a screwdriver, remove the seat memory switch.

HINT:

Tape the screwdriver tip before use.

(b) Disconnect the connector.

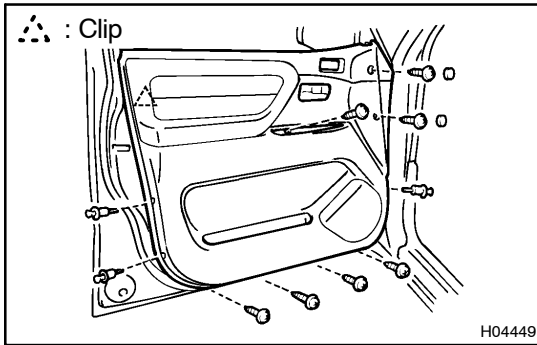**6. REMOVE DOOR TRIM**

- (a) Remove the 3 caps and 7 screws.
- (b) Remove the 3 clips.
- (c) Insert a screwdriver between the door and door trim to pry the trim out.


NOTICE:

Be careful not to damage the door and door trim.


HINT:

Tape the screwdriver tip before use.

- (d) Pull the trim upward to remove it.

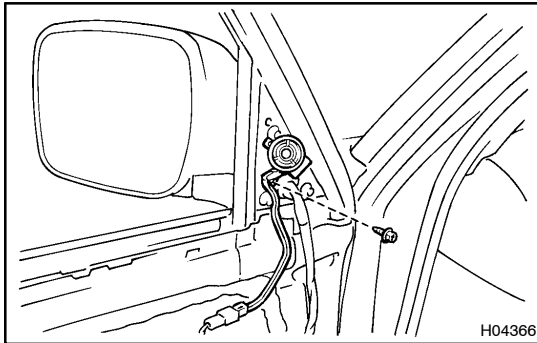**7. REMOVE TWEETER SPEAKER**

Disconnect the connector, then remove the screw and tweeter speaker.

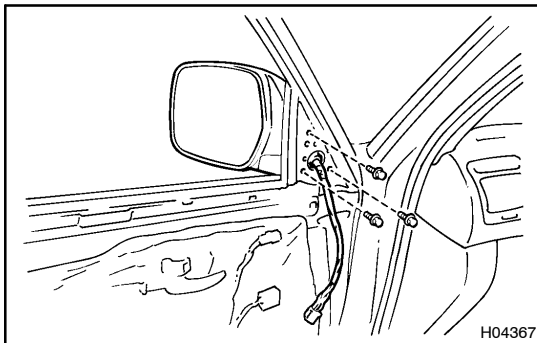**8. REMOVE OUTSIDE REAR VIEW MIRROR**

- (a) Disconnect the connector.
- (b) Remove the 3 bolts.
- (c) Remove the outside rear view mirror.