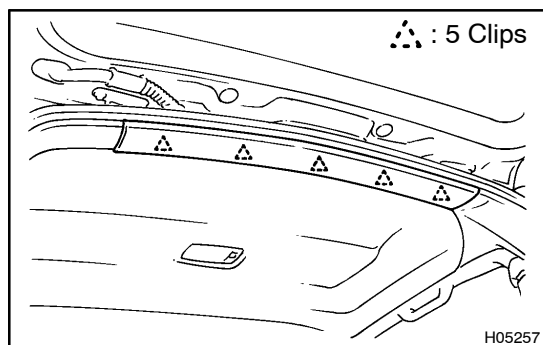


REMOVAL

1. REMOVE REAR NO. 2 SEAT

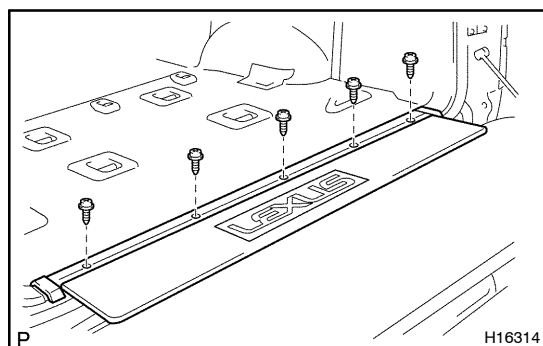


2. REMOVE ROOF HEADLINING REAR TRIM

Using a screwdriver, remove the roof headlining rear trim.

HINT:

Tape the screwdriver tip before use.



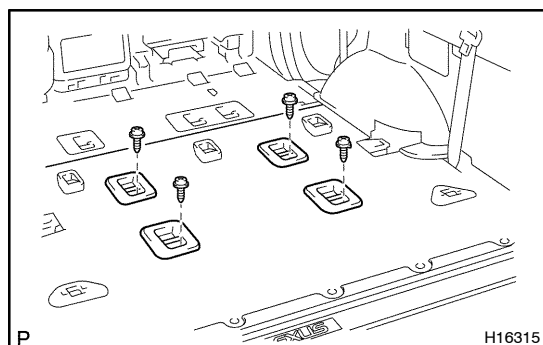
3. REMOVE REAR MAT SET PLATE

(a) Remove the 5 screws.

(b) Using a screwdriver, remove the rear mat set plate.

HINT:

Tape the screwdriver tip before use.



4. REMOVE NO.3 REAR SEAT PROTECTORS

(a) Remove the screw.

(b) Remove the No. 3 rear seat protector.

5. REMOVE NO. 3 SEAT FRONT BRACKET COVERS

(a) Remove the screw.

(b) Remove the No. 3 seat front bracket cover.

6. REMOVE NO. 3 SEAT BRACKET SUPPORT COVERS

7. REMOVE 3 CRS TETHER ANCHOR BRACKETS

(a) Remove the 3 CRS tether anchor bracket covers.

(b) Remove the 3 CRS tether anchor brackets.

Torque: 26 N·m (270 kgf·cm, 20 ft·lbf)

8. REMOVE REAR FLOOR CARPET

9. REMOVE REAR NO. 2 SEAT OUTER BELT FLOOR ANCHORS

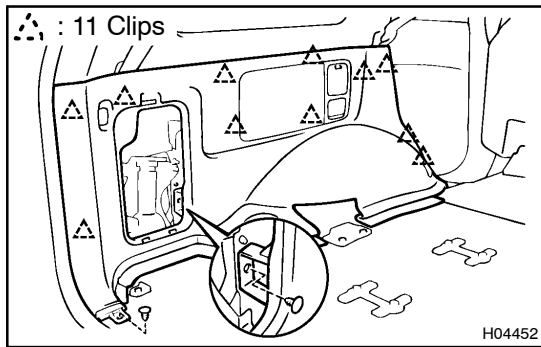
Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

10. REMOVE REAR NO. 1 SEAT OUTER BELT FLOOR ANCHORS

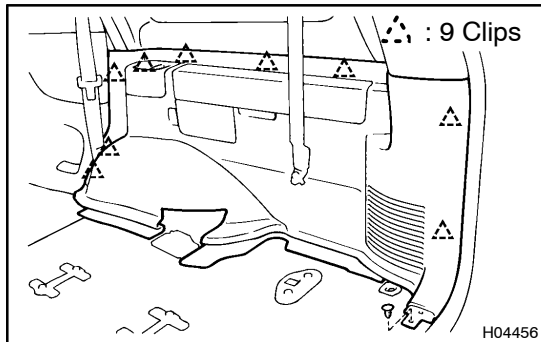
Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

11. REMOVE REAR DOOR SCUFF PLATES

12. REMOVE REAR DOOR OPENING TRIMS

**13. REMOVE LH QUARTER TRIM PANEL**

- (a) Remove the quarter trim jack cover.
- (b) Using a clip remover, remove the 2 clips.
- (c) Remove the LH quarter trim panel, then disconnect the connector.

**14. REMOVE RH QUARTER TRIM PANEL**

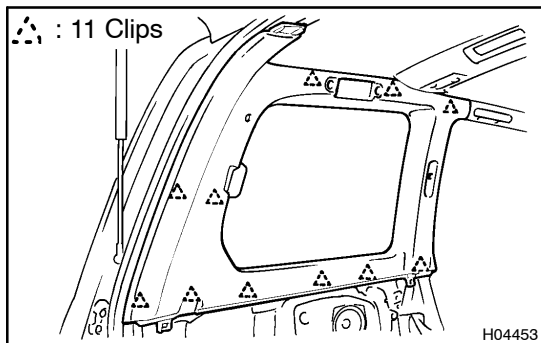
- (a) Using a clip remover, remove the clip.
- (b) Remove the RH quarter trim panel.

15. REMOVE REAR NO. 2 SEAT OUTER BELT SHOULDER ANCHORS

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

16. REMOVE REAR NO. 1 SEAT OUTER BELT HOLDER ANCHORS

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

**17. REMOVE UPPER ROOF SIDE INNER GARNISH**

- (a) Using a screwdriver, remove the assist grip plugs, then remove the 4 screws and assist grips.

HINT:

Tape the screwdriver tip before use.

- (b) Using a screwdriver, remove the upper roof side inner garnishes.

HINT:

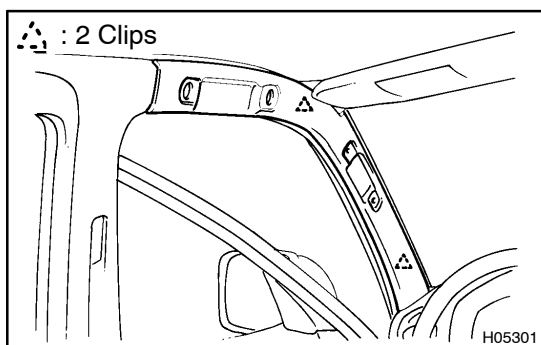
Tape the screwdriver tip before use.

18. REMOVE FRONT DOOR SCUFF PLATES**19. REMOVE COWL SIDE TRIMS****20. FRONT DOOR OPENING TRIMS****21. REMOVE FRONT PILLAR GARNISH**

- (a) Using a screwdriver, remove the assist grip plugs, then remove the 6 screws and 3 assist grips.

HINT:

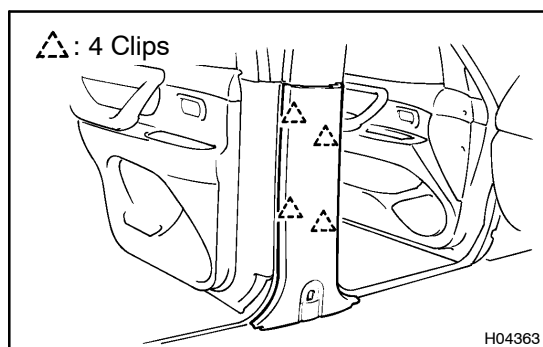
Tape the screwdriver tip before use.



- (b) Using a screwdriver, remove the front pillar garnishes.

HINT:

Tape the screwdriver tip before use.

**22. REMOVE CENTER PILLAR LOWER GARNISH**

- (a) Using a screwdriver, remove the seat belt floor anchor cover caps.

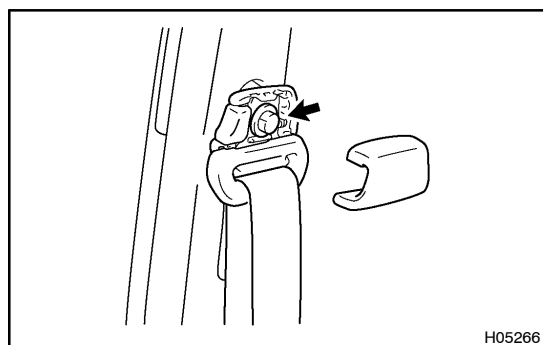
HINT:

Tape the screwdriver tip before use.

- (b) Remove the bolts and front seat outer belt floor anchors.
 (c) Using a screwdriver, remove the center pillar lower garnishes as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

**23. REMOVE CENTER PILLAR UPPER GARNISH**

- (a) Using a screwdriver, remove the seat belt anchor cover caps.

HINT:

Tape the screwdriver tip before use.

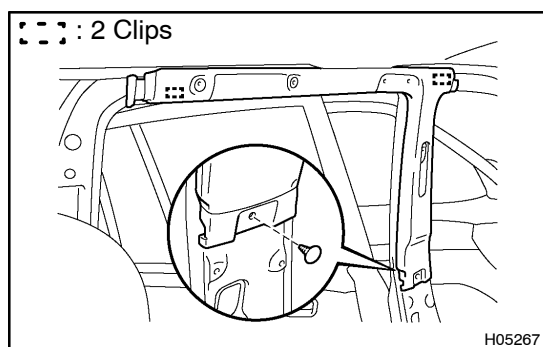
- (b) Remove the bolts and front seat outer belt shoulder anchors.

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

- (c) Using a screwdriver, remove the 8 assist grip plugs, then remove the 8 screws and 4 assist grips.

HINT:

Tape the screwdriver tip before use.



- (d) Using a clip remover, remove the clips.
 (e) Using a screwdriver, remove the center pillar upper garnishes.

HINT:

Tape the screwdriver tip before use.

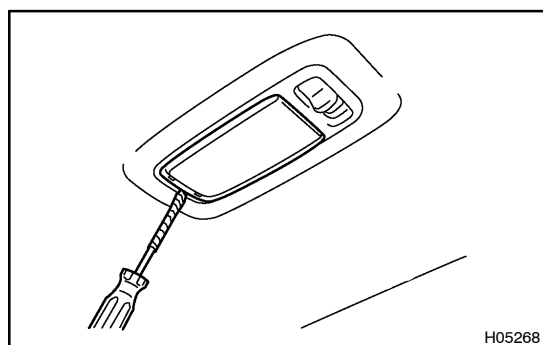
24. REMOVE SUN VISORS**25. REMOVE DOUBLE VISORS****26. REMOVE HOLDERS****27. REMOVE REAR COOLER CONTROL ASSEMBLY****28. REMOVE REAR TEMPERATURE GAUGE****29. REMOVE DOME LIGHT**

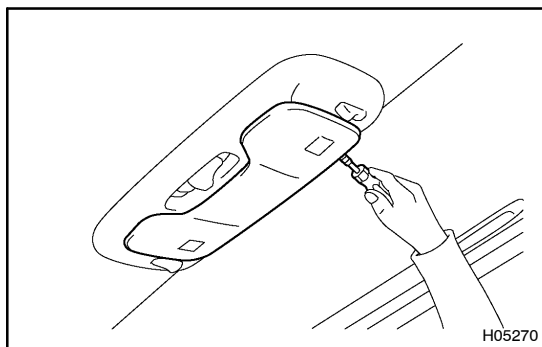
- (a) Using a screwdriver, remove the lens as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 4 screws and dome light, then disconnect the connector.



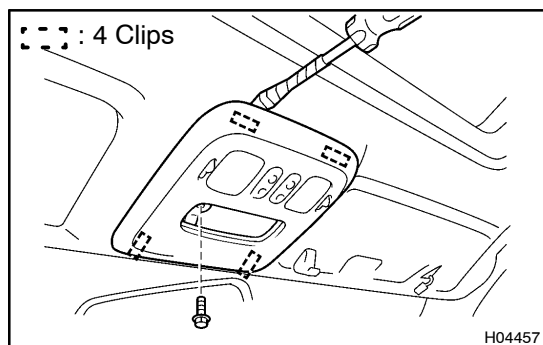
**30. REMOVE MAP LIGHT**

- (a) Using a screwdriver, remove the lens as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

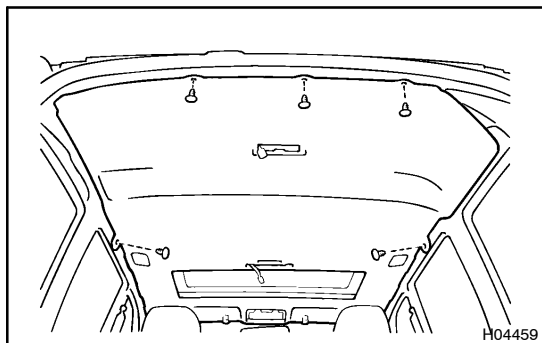
- (b) Remove the 4 screws and map light, then disconnect the connector.

**31. REMOVE OVERHEAD CONSOLE BOX**

- (a) Remove the bolt.
- (b) Using a screwdriver, remove the overhead console box, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

32. REMOVE SLIDING ROOF OPENING TRIM**33. REMOVE ROOF HEADLINING**

Using a clip remover, remove the 5 clips and roof headlining.