

SEAT BELT PRETENSIONER REMOVAL

BO1AF-02

NOTICE:

- If the wiring connector of the seat belt pretensioner is disconnected with the ignition switch at ON or ACC, diagnostic trouble codes will be recorded.
- Never use seat belt pretensioner from another vehicle. When replacing seat belt pretensioner, replace it with new one.

1. REMOVE THESE PARTS:

- Front door scuff plate
- Front door opening trim
- Rear door scuff plate
- Rear door opening trim
- Center pillar lower garnish

2. REMOVE FRONT SEAT OUTER BELT

CAUTION:

Never disassemble the front seat outer belt.

NOTICE:


When removing the front outer seat belt, take care not to pull the seat belt pretensioner wire harness.

- Using a screwdriver, remove the anchor cover caps.

HINT:

Tape the screwdriver tip before use.

- Remove the bolt and shoulder anchor.

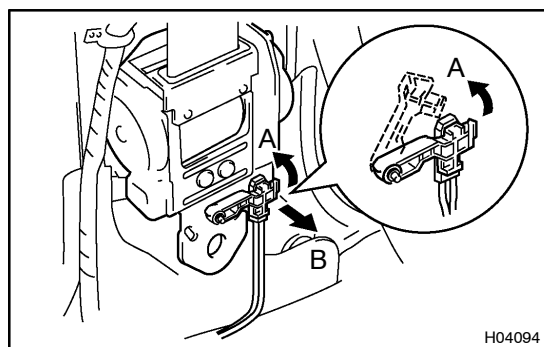

H04094

- Disconnect the pretensioner connector in the order A and B, as shown in the illustration.
- Remove the 2 bolts and front seat outer belt.