

SLIDING ROOF

ON-VEHICLE INSPECTION

BO1NA-01


1. INSPECT SLIDING ROOF GLASS

- (a) Start the engine and check the operation time of the sliding roof.

Operation time:

Approx. 6 secs.

- (b) Check for abnormal noise or binding during operation.
 (c) With the sliding roof fully closed, check for water leakage.

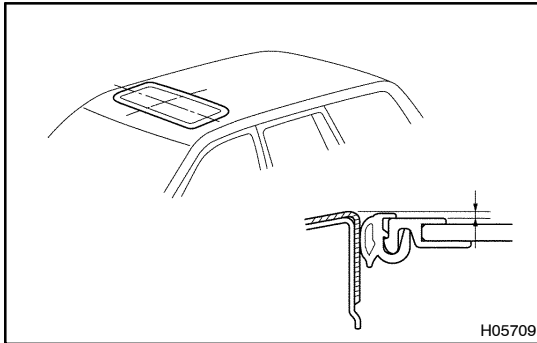

H05709

2. INSPECT DIFFERENCE IN LEVEL

Inspect the difference in level between the roof panel and sliding roof glass (weatherstrip part) when the sliding roof glass is fully closed.


Except rear end:

$0 \pm 1.5 \text{ mm}$ ($0 \pm 0.059 \text{ in.}$)

$0 - 1.0 \text{ mm}$ ($0 - 0.039 \text{ in.}$)

Rear end:

$0 \pm 1.5 \text{ mm}$ ($0 \pm 0.059 \text{ in.}$)

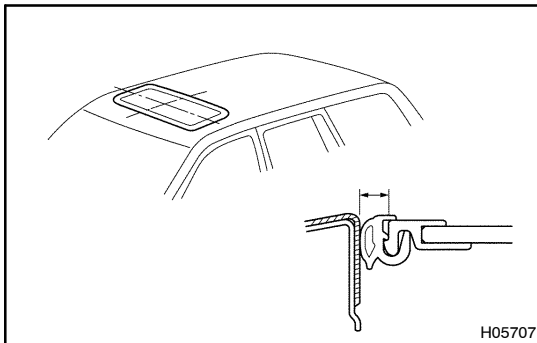

H05707

3. INSPECT SLIDING ROOF GLASS CLEARANCE

Inspect the clearance between the roof panel and sliding roof glass when the sliding roof is fully closed.

Clearance: Uniform all around