


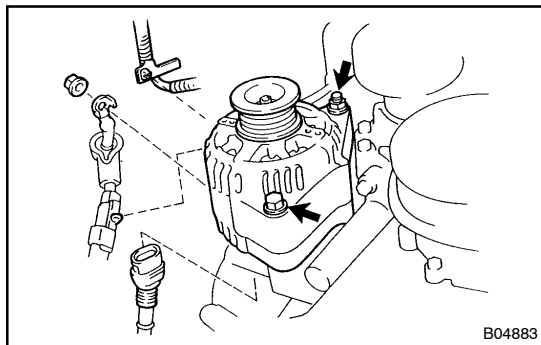

## INSTALLATION

### 1. INSTALL GENERATOR


- (a) Install the generator with the bolt and nut.  
**Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)**
- (b) Connect the generator connector.
- (c) Connect the generator wire with the nut and rubber cap.
- (d) Install the generator wire clamp to the cord clip on the generator.

### 2. INSTALL PS VANE PUMP PULLEY

(See page [SR-36](#))

### 3. INSTALL RADIATOR ASSEMBLY

(See page [CO-19](#))

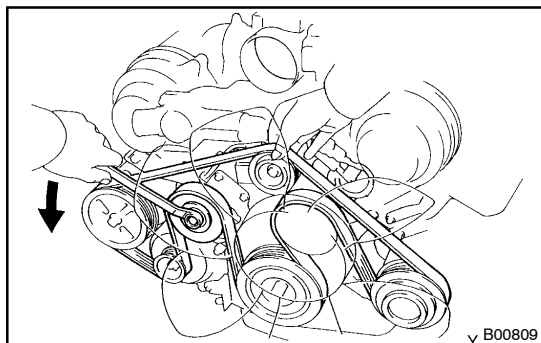

### 4. INSTALL GENERATOR DRIVE BELT

Install the belt by turning the belt tensioner counterclockwise.

HINT:

The pulley bolt for the belt tensioner has a left – hand thread.

### 5. FULL ENGINE COOLANT

### 6. START ENGINE AND CHECK FOR LEAKS

### 7. RECHECK ENGINE COOLANT LEVEL

### 8. PERFORM ON-VEHICLE INSPECTION

(See page [CH-2](#))

### 9. INSTALL ENGINE UNDER COVER NO.1