


Height Control OFF Indicator Light Circuit

CIRCUIT DESCRIPTION

If the ECU detects a problem with the Height Control the OFF indicator light will flash. At this time, the ECU records a DTC in memory and any further height control is prohibited. DTCs in memory can be retrieved by connecting terminals Tc and E1 of the DLC1.

WIRING DIAGRAM

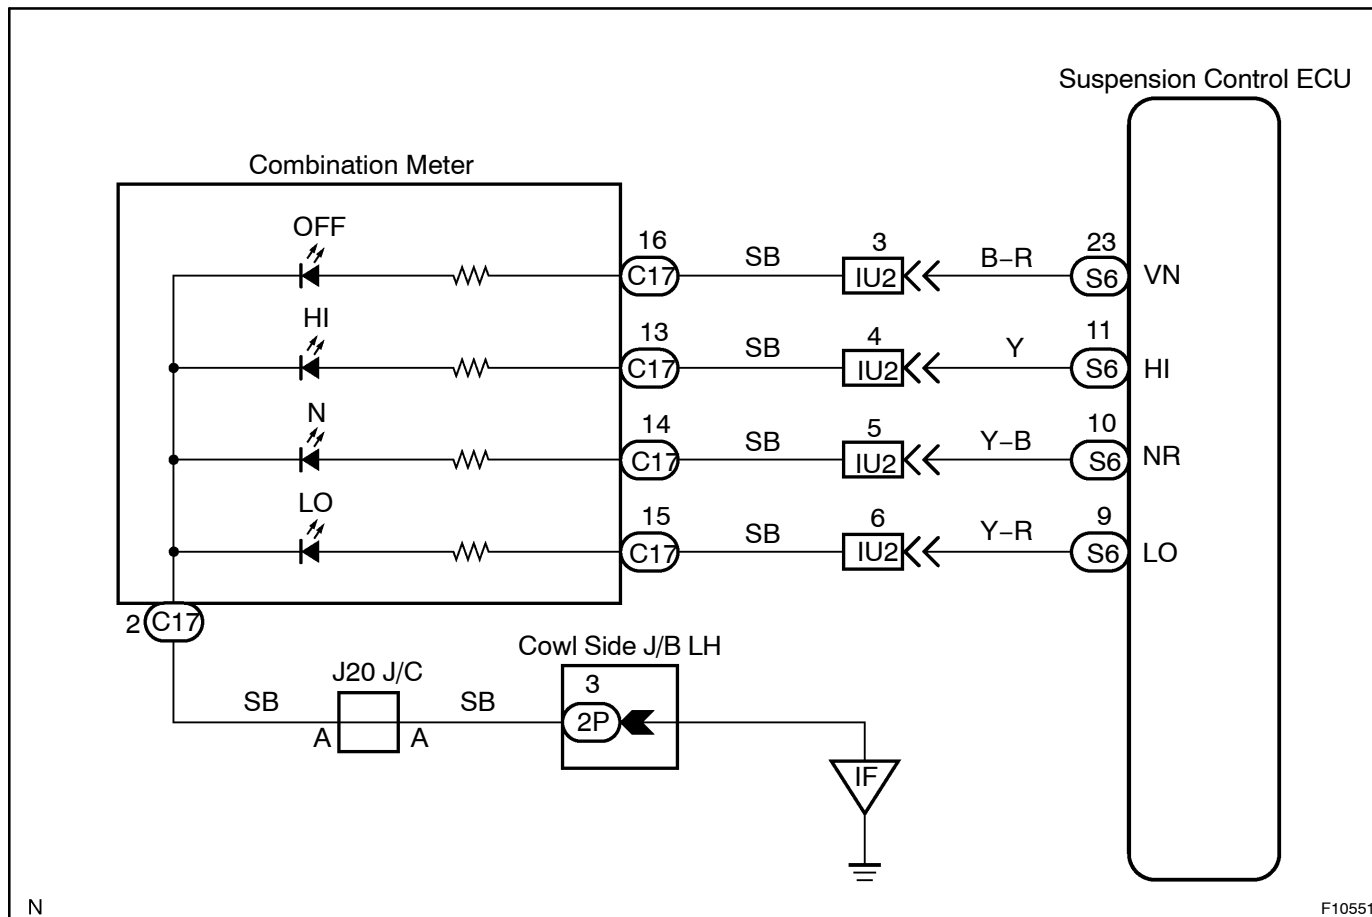

INSPECTION PROCEDURE

HINT:

Troubleshooting in accordance with the chart below for each trouble symptom.

Height control OFF indicator light does not light up	Go to step 1
Height control OFF indicator light flashes	Go to step 3

1	Check height control OFF indicator light.
----------	--

See combination meter troubleshooting on page [BE-79](#).

NG	Repair bulb or combination meter assembly.
-----------	---

OK

2	Check for open circuit in harness and connector between height control OFF indicator light and suspension control ECU (See page IN-34).
----------	--

NG	Repair or replace harness or connector.
-----------	--

OK

Check and replace suspension control ECU.
--

3	Check that the ECU connectors are securely connected to the ECU.
----------	---

NO	Connect the connector to the ECU.
-----------	--

YES

4	Is DTC output?
----------	-----------------------

Check DTC on page [DI-231](#).

YES	Repair circuit indicated by the code output.
------------	---

NO

5	Check for short circuit in harness and connector between height control OFF indicator light and suspension control ECU (See page IN-34).
---	---

NG

Repair or replace harness or connector.

OK

Check and replace suspension control ECU.