


Ts Terminal Circuit


CIRCUIT DESCRIPTION

By connecting terminals Ts and E₁ of the DLC1, an input signal check can be performed (See page [DI-231](#)).

WIRING DIAGRAM

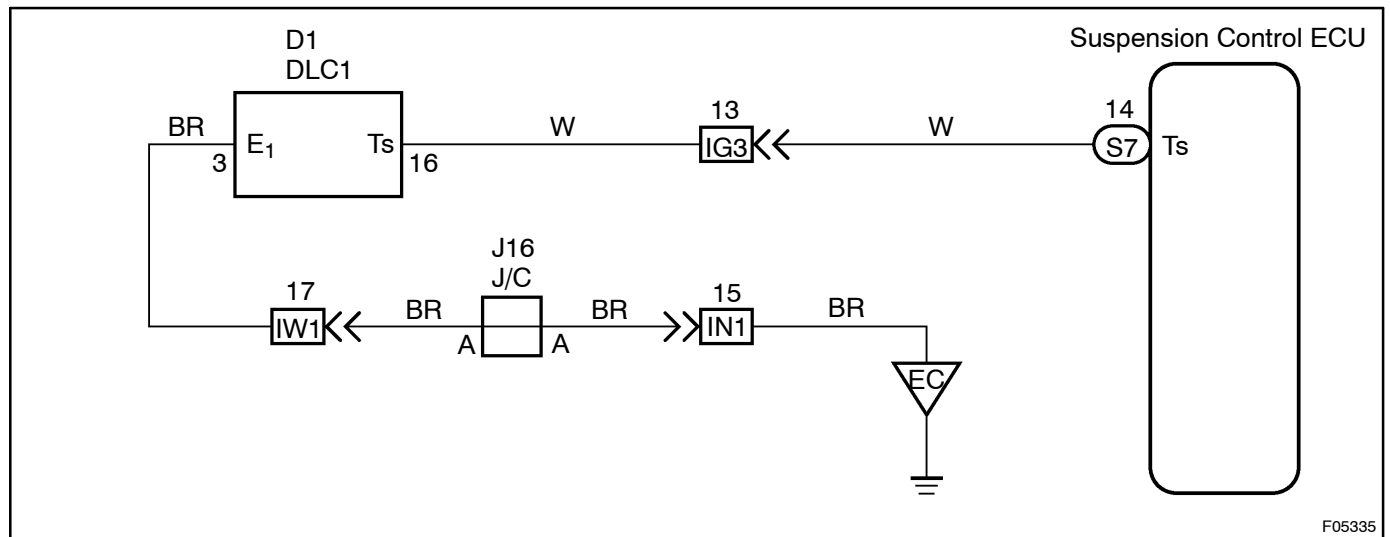

F05335

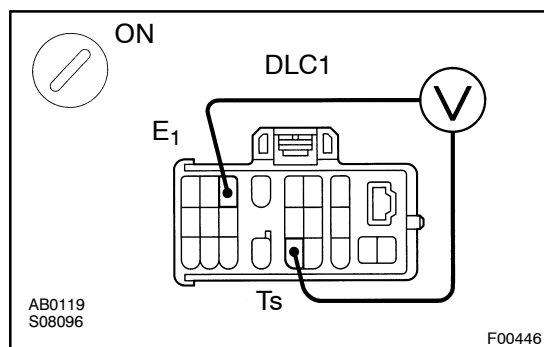INSPECTION PROCEDURE**1 Check voltage between terminals Ts and E₁ of DLC1.****CHECK:**

- (a) Turn the ignition switch ON.
- (b) Measure the voltage between terminals Ts and E₁ of DLC1.

OK:**Voltage: 9 – 14 V****OK****No problem.****NG****2 Check for open and short circuit in harness and connector between suspension control ECU and DLC1, DLC1 and body ground (See page [IN-34](#)).****NG****Repair or replace harness or connector.****OK****Check and replace suspension control ECU.**